Copyright

Version: B00 Product Name: Multi-parameter Veterinary Monitor Date: 2020/11 No.:046-001175-03

Statement

This instruction manual contains confidential information. It is only intended for users as a reference for operation, maintenance and repair of our products. No one shall disclose the contents hereof to any other person.

No part of this manual may be reproduced, transmitted, transcribed or stored in a retrieval system in any form or by any means, electronic or mechanical, including photocopying and recording, or translated into any other language, without written permission of our company.

Our company shall assume no liability for any errors contained herein or any incidental or indirect damages arising from provision, actual performance or use of this manual. This User Manual does not imply the transfer of any proprietary right under patent law to any third party. Our company shall not be liable for any legal consequences arising out of breach of the patent law or infringement of any third-party rights. The contents in this manual are subject to change without prior notice.

Warranty

Our company will be responsible for the safety, reliability and performance of the product within the limited warranty period: if all of the following conditions are satisfied:

- The product is used in accordance with this *Manual*.
- The product is installed, maintained or upgraded by persons accepted or authorized by our company.
- The storage, operating and electrical environments for the product comply with the product specifications.
- The serial number label or manufacturing mark of the product is clearly legible.
- The damage is not caused by human factors.

The product will be repaired or replaced free of charge within the limited warranty period. After the limited warranty period, our company will charge for the service and replacement parts. If the products need to be returned to our company for maintenance, the freight charges (including the customs duty) should be on the customer's account.

Return

If the products need to be returned to our company, please contact the After-sales Service Department of our company to get the right to return the goods. You must provide the serial number of the product, which can be found on the product's nameplate. If the serial number is illegible, your return request will be rejected. Please also present the production date and briefly describe the reason for return.

Preface

This manual provides details on the performance, operations and safety instructions of the Multi-parameter Veterinary Monitor (hereinafter referred to as the "monitor"). It is the best starting point for new users of the monitor.

Intended Readers

This user manual is only intended to trained professionals who are expected to have working knowledge of medical procedures, practices and terminology as required for monitoring patients.

Illustrations

All illustrations provided herein are for reference only. The menus, options, values and functions shown in the illustrations may be not exactly identical to what you see on the monitor.

Conventions:

- —>: Indicates operating steps.
- [Character]: Indicates user interface text.

Content

Chapter 1 Safety	1-1
1.1 Safety Information	1-1
1.2 Contraindications	1-3
1.3 Symbols	
Chapter 2 Overview	2-1
2.1 Product Introduction	2-1
2.1.1 Composition	2-1
2.1.2 Intended Use	2-1
2.2 Product Appearance	2-1
2.2.1 Front View	2-1
2.2.2 Left View	2-3
2.2.3 Right View	2-3
2.2.4 Rear View	2-4
2.2.5 Bottom View	2-5
2.3 OSD (On-screen Display)	2-5
Chapter 3 Installation	
3.1 Unpacking and Inspection	
3.2 Connection of AC Power Cord	
3.3 Startup	
3.4 Connection of Sensors	
Chapter 4 Patient Safety	4-1
4.1 Safety Instructions	4-1
4.2 Environmental Requirements	4-1
4.3 Protective Earthing	4-1
4.4 Equipotential Earthing	4-2
4.5 Condensation	4-2
Chapter 5 Basic Operations	
5.1 Enter Main Menu	
5.2 Enter User Maintain Menu	
5.3 View Monitor Info	
5.4 Enter Parameter Setup Window	
5.5 General Setup	
5.5.1 Time Setup	
5.5.2 Language Setup	
5.5.3 Measurement Unit Setup	
5.5.4 Shortcut Key Configuration	
5.5.5 Brightness Setup	

5.5.6 Key Backlight Setup	
5.5.7 Screen Setup	
5.5.8 Volume Setup	
5.5.9 Waveform Freeze	5-5
5.5.10 Lock Screen Setup	
5.5.11 Event Setup	
5.5.12 Module Setup	
5.5.13 User Password Setting	
5.6 Work Mode	
5.6.1 Monitoring Mode	
5.6.2 Standby Mode	
5.6.3 Night Mode	
5.6.4 Privacy Mode	
5.6.5 Demo	
Chapter 6 Configuration Management	
6.1 Overview	
6.2 Example	
Chapter 7 Patient Management	
7.1 Admit	
7.2 Quick Admit	
7.3 Discharge	
7.4 Patient File Management	
7.4.1 Save Tactics	
Chapter 8 User Interface	
8.1 Standard	
8.2 Big Numerics	
8.3 Trend	
8.4 OxyCRG	
8.5 List	
8.6 View Bed	
8.7 7-Lead ECG	
8.8 7-Lead Half Screen	
8.9 Set Interface Style	
8.9.1 Set Wave Sweep Speed	
8.9.2 Set Wave Style	
8.9.3 Set Module Color	
8.9.4 Set Wave Draw	
8.9.5 Set Wave Fill	
8.9.6 Change Screen Layout	

Chapter 9 Alarms	
9.1 Alarm Type	
9.2 Alarm Level	
9.3 Alarm Mode	
9.4 Light Alarm	
9.5 Sound Alarm	
9.6 Alarm Message	
9.7 Alarm Parameter Blink	
9.8 Alarm Pause	
9.9 Alarm OFF	
9.10 Set Alarm Record	
9.11 Set Parameter Alarm	
9.11.1 Set Alarm Limit	
9.11.2 Set Auto Alarm Limit	
9.12 Set Alarm Delay	
9.13 Set Alarm Volume	
9.13.1 Set Minimum Alarm Volume	
9.13.2 Set Alarm Volume	
9.13.3 Set Alarm Reminder	
9.14 Alarm Reset	
9.15 Other Bed Alarm	
9.16 Alarm System Self-test	
9.17 Alarm System Test	
Chapter 10 PR Setup	
10.1 Overview	
10.2 PR Source	
10.3 Alarm Limit Setup	
Chapter 11 ECG Monitoring	
11.1 Definition of ECG Monitoring	11-1
11.2 Precautions for ECG Monitoring	11-1
11.3 Monitoring Steps	
11.3.1 Prepare Skin	
11.3.2 Connect ECG Cable	
11.3.3 Install ECG Leads	
11.3.3.1 Place 3-lead Electrodes	
11.3.3.2 Place 5-lead Monitoring Electrodes	
11.3.3.3 Recommended ECG Lead Connection for Surgical Patient	
11.4 ECG Display	
11.5 ECG Setup	

11.5.1 Set Lead Type	
11.5.2 Smart Lead Off	
11.5.3 Set Off Level	
11.5.4 Set Lead Name for Key Monitoring	
11.5.5 Set Gain	
11.5.6 Set Filter Mode	
11.5.7 Set Calculate Lead	
11.5.8 Set Notch Filter	
11.5.9 HR Source	
11.5.10 Mul. Lead Analysis	
11.5.11 Cascade	
11.6 ECG Relearn	
Chapter 12 RespMonitoring	
12.1 Resp Measurement	
12.2 Placement of Electrodes	
12.3 Resp Display	
12.4 Resp Calculation Mode	
12.5 Resp Setup	
12.5.1 Gain	
12.5.2 No Breath Alarm Delay	
12.5.3 Resp Lead	
12.5.4 Enhance Filter	
Chapter 13 SpO ₂ Monitoring	
13.1 Overview	
13.1.1 Identification of SpO ₂ Sensor Type	
13.2 Safety Instructions	
13.3 SpO ₂ Accuracy Test	
13.4 Low Perfusion Accuracy Test	
13.5 PR Accuracy Test	
13.6 Monitoring Steps	
13.7 Measurement Restrictions	
13.8 SpO ₂ Setup	
13.8.1 Set Off Level	
13.8.2 Smart Alarm	
13.8.3 Smart Tone	
13.8.4 NIBP Same Side	
13.8.5 Signal IQ	
13.8.6 Average Time	
13.8.7 Fast Sat	

13.8.8 Sensitivity	
13.9 Masimo Information	
Chapter 14 NIBP Monitoring	14-1
14.1 Overview	14-1
14.2 Safety Instructions	14-1
14.3 Cuff Placement	
14.3.1 Cuff Placement for Cat	
14.3.2 Cuff Placement for Dog	
14.3.3 Large Animals	
14.3.4 Cuff size selections	
14.4 NIBP Measurement	
14.4.1 Measurement Restrictions	
14.4.2 Start the Measurement	
14.4.2.1 Start the Manual Measurement	
14.4.2.2 Start the Whole Point Measurement	
14.4.2.3 Start the Interval Measurement	
14.4.2.4 Start the Continual Measurement	
14.4.3 Stop the Measurement	
14.4.4 NIBP Display	
14.5 NIBP Setup	14-7
14.5.1 Cuff Size	14-7
14.5.2 Initial Pressure	
14.6 NIBP Reset	14-7
14.7 NIBP Analysis	
Chapter 15 Temp Monitoring	
15.1 Temp Monitoring	
15.1.1 Temp Measurement	
15.2 Temp Display	
Chapter 16 IBP Monitoring	
16.1 Overview	
16.2 Instructions on IBP Monitoring	
16.3 Monitoring Steps	
16.3.1 Zero the Pressure Sensor	
16.4 IBP Setup	
16.4.1 Pressure Name	
16.4.2 IBP Superposition	
16.4.3 Filter Mode	
16.4.4 Pressure Scale	
16.5 Pressure Unit	

16.6 SPVand PPV Display	16-5
Chapter 17 CO ₂ Monitoring	17-1
17.1 Overview	17-1
17.2 CO ₂ Sensor Connection	17-2
17.2.1 Preparations for Mainstream CO ₂ Sensor Connection	17-2
17.2.2 Preparations for Sidestream CO ₂ Sensor Connection	17-2
17.3 Measurement Steps for Respironics Mainstream and Sidestream Analyzer	17-4
17.4 Measurement Steps for Masimo Mainstream and Sidestream Analyzer	17-6
17.4.1 Measurement Steps	17-6
17.4.2 Checks before Use	17-6
17.5 CO ₂ Setup	17-7
17.5.1 Work Mode	17-7
17.5.2 Pressure Unit	17-7
17.5.3 Gas Compensation	17-7
17.5.4 No Breath Alarm Delay	17-8
17.5.5 Altitude	17-8
17.5.6 Balance Gas	17-9
17.5.7 Waveform Scale	17-9
17.6 Maintenance and Cleaning of Respironics Mainstream and Sidestream CO ₂ Sensor	17-9
17.6.1 General Cleaning	17-9
17.6.2 Clean the Reusable Airway Adapter of Mainstream Sensor	17-9
17.6.3 Disinfection of Reusable Airway Adapter	17-9
17.6.4 Disinfection Frequency of Reusable Airway Adapter	17-10
17.6.5 Zeroing	17-10
17.7 Masimo Mainstream and Sidestream Module Related Information	17-10
17.7.1 Zeroing	17-10
17.7.1.1 Zeroing ISA CO2 Module	17-10
17.7.1.2 Zeroing IRMA CO ₂ Module	17-11
17.7.1.3 Maintenance	17-11
17.7.1.4 CO ₂ Sensor LED	17-11
17.7.2 Adverse Effects on Performance	17-12
17.7.3 Safety Alarm Information	17-13
17.7.3.1 ISA Sidestream Gas Analyzer Safety Warning Information	17-13
17.7.3.2 IRMA Mainstream Gas Analyzer Safety Warning Information	17-14
17.7.4 Airway Obstruction	17-15
17.7.5 Discharging Waste Gases	17-15
17.7.6 Leakage Check	17-16
17.7.7 Safety Symbols	17-16
17.7.8 Patents and Trademarks	17-17

17.7.9 Consumables	
17.7.9.1 ISA Nomoline Family	
17.7.9.2 IRMA Airway Adapter	
17.7.10 Maintenance	
17.7.11 Cleaning the Analyzer	
Chapter 18 AG Monitoring	
18.1 Overview	
18.2 AG Measurement Principle	
18.3 AG Display	
18.4 MAC Calculation	
18.5 O ₂ Sensor	
18.6 Measurement Steps and Checks before Use	
18.6.1 Measurement Steps	
18.6.2 Checks before Use	
18.7 AG Setup	
18.7.1 Work Mode	
18.7.2 Gas Compensation	
18.7.1 Pressure Unit	
18.7.2 No Breath Alarm Delay	
18.7.3 Waveform Scale	
18.7.4 Zeroing	
18.8 AG Module LED	
18.9 Adverse Effects on Performance	
18.10 Safety Alarm Instructions	
18.11 Airway Obstruction	
18.12 Discharging Waste Gases	
18.13 Leakage Check	
18.14 Safety Symbols	
18.15 Patents and Trademarks	
18.16 Consumables	
18.17 Maintenance	
18.18 Cleaning the Analyzer	
Chapter 19 Data Review	
19.1 Wave Save	
19.2 Trend Review	
19.3 NIBP Measurement Review	
19.4 Alarm Event Review	
19.5 Wave Review	
Chapter 20 Record	

20.1 Description of Recorder	
20.2 Record Type	
20.3 Record Operation	
20.4 Recorder Setup	
20.5 Load Record Paper	
20.6 Recorder Cleaning	
Chapter 21 Print	
21.1 Printer	
21.2 Set Printer Type	21-1
21.3 Printer Setup	
21.4 Start Report Printing	
21.5 Stop Report Printing	
21.6 Set Report	
21.6.1 Set Trend Table Report	
21.6.2 Alarm Event Review Report	
21.6.3 Set NIBP List Report	
21.6.4 Trend Graph Review Report	
21.6.5 Set Realtime Wave Report	
21.6.6 Wave Review Report	
21.7 Printer Abnormality	
21.7.1 Printer Out of Paper	
21.7.2 Printer Status Info	
Chapter 22 Other Functions	
22.1 Nurse Call	
22.2 Format SD Card	
22.3 Analog Output	
Chapter 23 Battery	
23.1 Overview	
23.2 Install Battery	
23.3 Optimize and Check Battery Performance	
23.4 Battery Recycling	
Chapter 24 Cleaning and Maintenance	
24.1 Overview	
24.2 Cleaning and Disinfection of Monitor	
24.2.1 Cleaning and Disinfection of IBP Cuff	
Chapter 25 Maintenance	
25.1 Maintenance Checks	
25.2 Maintenance Plan	
25.3 NIBP Leakage Test	

25.4 NIBP Pressure Verification	
25.5 ECG Calibration	25-4
25.6 IBP Calibration	25-4
25.7 Touch Screen Calibration	25-4
Appendix I Accessories	I-1
Appendix II Product Specifications	II-1
Appendix II Product Specifications Appendix III System Alarm Messages	II-1 III-1
Appendix II Product Specifications Appendix III System Alarm Messages Appendix IV Default Configurations	II-1 III-1 IV-1
Appendix II Product Specifications Appendix III System Alarm Messages Appendix IV Default Configurations Appendix V EMC	П-1 П-1 III-1 IV-1 V-1

Blank Page

1.1 Safety Information

🗥 Warning

Alerts you to situations that may result in serious consequences or endanger personal safety. Failure to observe the warning information may cause severe injury or even death of user or patient.

Caution

Alerts you to potential dangers or unsafe operations, which, if not avoided, may result in minor injury, product failure or damage, or property damage, or cause more serious injury in the future.

A Note

• Emphasizes important precautions and provides instructions or explanations for better use of the product.

🗥 Warning

- This monitor is intended for monitoring of clinical patients, and can be used only by trained, qualified doctors and nurses.
- Prior to use, the user must check the monitor and its accessories to ensure their normal and safe operation.
- Donot place the power plug used to disconnect the monitor from grid power supply in a position not easily accessible by the operator.
- Alarm volume and upper/lower alarm limits should be set depending on the patient. When a patient is monitored, do not exclusively rely on the audible alarm system. If the alarm volume is set too low or is completely turned off, the alarm will not be heard and the patient may be put into danger. The most reliable monitoring method is to pay close attention to the patient's actual clinical conditions.
- This monitor can only be connected to a power socket with protective earth. If the power socket is not connected to an earth conductor, please use the rechargeable battery to supply power to the monitor instead of using this socket.
- Donot open the housing of the monitor to avoid the potential risk of electric shock. The monitor

must be maintained and upgraded by service personnel trained and authorized by our company.

- Please observe the local laws and regulations or the waste disposal rules of the hospital when disposing of packaging materials. Keep the packaging materials out of the reach of children.
- In order to avoid fire or explosion, never use this monitor in an environment with inflammables such as anesthetics.
- Please carefully place the power cord and the cables of various accessories to avoid entanglement and potential strangulation and to keep the patient free from electrical interference.
- During defibrillation, the operator should not come into contact with the patient, the monitor or the supporting table; otherwise serious injury or death could result. Before reusing the cables, check to confirm their functions are normal.
- The equipment connected with this monitor shall form an equipotential body (effective connection of protective earth).
- In order not to cause burns (resulted from electric leakage) to the patient, please do not allow its sensors and sensor cables to contact such equipment when connecting the Monitor to any high-frequency electrosurgical equipment.
- The physiological waveforms and parameters, alarm messages and other information displayed by the monitor are only for reference by the doctor, which shall not be directly used as a basis for clinical treatment.
- Electromagnetic field can affect the performance of the monitor. Therefore, other devices used near the monitor should conform to the applicable EMC requirements. For example, mobile phones, X-ray machines and MRI devices are all potential sources of interference since they all transmit high-intensity electromagnetic radiation.
- This monitor is not a therapeutic device.
- After defibrillation, the electrocardiogram (ECG) waveform must recover within 5s, other parameters must recover within 10s.

Caution

- To avoid damage to the monitor and ensure the patient's safety, use accessories specified in this manual.
- Handle the monitor carefully to avoid damage caused by drop, collision, strong oscillation or other external mechanical forces.
- Before powering on the monitor, confirm that the supply voltage and frequency conform to the requirements specified on the monitor nameplate or in this manual.
- At the end of their service life, the monitor and its accessories must be disposed of in accordance with the local laws and regulations or the rules of the hospital.

- Place the monitor at a position where observation, operation and maintenance is convenient.
- This user manual is based on the maximum configuration; therefore, some contents may not be applicable to your monitor.
- Keep this manual handy for easy and timely reference.
- This monitor is not intended for home use.
- This monitor can be used for only one patient at a time.
- The service life of this monitor is 5 years.

1.2 Contraindications

Unclear

1.3 Symbols

• Symbols Used by the Monitor

\triangle	Note!	X	Separatecollectionforelectricalandelectronicequipment
3	Refer to instruction manual/ booklet		Main menu
-1 *	Type BF applied parts, with defibrillation-proof function	IPX1	Ingress protection rating
┥₩₽	Type CF applied parts, with defibrillation-proof function	M	Manufacturing date
0/Ò	Power on/off key	SN	Serial number
4	Battery level indicator	\checkmark	Equipotential symbol
\sim	AC indicator	8	Network connection symbol
$\langle \rangle$	Multi-function interface	•	USB port
	Manufacturer	\mathbf{x}	Alarmvolume off
\bigotimes	Alarm off	\leftrightarrow	VGA port

2	Alarm reset	Ĩ	Warning: Only use the ECG cable provided by our company. Other types of ECG cable may decrease the defibrillation energy delivered to the patient.
Ċ	Standby		

Note: Keys on the monitor and their functions are described in "2.2.1 Front View".

• Symbols on Package

[11]	This Side Up	6	Stacking Layer Limit
[]]	Fragile		Keep dry

2.1 Product Introduction

2.1.1 Composition

This monitor is composed of a main unit, AG module, CO2 module, IBP module and accessories.

2.1.2 Intended Use

The monitor can be used to monitor ECG, NIBP, Resp (respiration), Temp SpO₂, PR (pulse rate), IBP, anesthetic gas, EtCO2 (end-tidal carbon dioxide), OXYCRG (oxygen cardio-respirogram) and recorder.

2.2 Product Appearance

2.2.1 Front View



Fig 2-1Front View

1	Alarm indicator					
2		Power on/off key Use this key to power on/off the monitor.				
3	~	Power indicator	Indicator on: this monitor is connected to AC power supply. Indicator off: this monitor is disconnected from AC power supply.			
		Battery indicator	Indicator solid on: battery is being charged. Indicator blinks: battery is used to supply power to the monitor. Indicator off: battery is fully charged, is not installed or malfunctions.			
4	X	Alarm Pause key	Press this key to pause or resume an alarm.			
5	\mathbb{R}	Waveform Freeze key	Press this key to freeze or unfreeze a waveform.			
6	$\[\]$	Record key	Press this key to start or stop recording.			
7		NIBP measurement key	Press this key to start or stop NIBP measurement.			
8		Main menu key	Press this key to open/close the main menu.			
9	Rotary knob: turn the rotary knob clockwise and counter-clockwise to move the focus; press down the rotary knob to perform an action.					

2.2.2 Left View



Fig 2-2Left View

2.2.3 Right View



Fig 2-3Right View

2.2.4 Rear View



- 1) Handle
- VGA port:Connect to the display with standard VGA interface which shows the current monitoring information.
- 3) USB port: supporting mouse, keyboard, printer and other USB devices (plug and play).
- 4) Network port.
- 5) Multi-function connector: 1. As analog output port: outputs analog signals; 2. As nurse call port: connected to the hospital's calling system to give nurse call prompts in case of an alarm.
- 6) Power socket
- 7) Equipotential jack: When the monitor is used together with another device, use a wire to connect the equipotential terminals of the monitor and that device. This eliminates the ground potential difference, thus to ensure safety.
- 8) Nameplate

∕!∖ Warning

• Only the analog or digital equipment in compliance with the specified IEC standards (like IEC 60950 for data processing equipment's, IEC 60601-1 for medical equipment, etc.) are allowed to be connected to the monitor. And all configurations should comply with the valid version of the

system standard IEC 60601-1. The person who connects external equipment to the signal I/O ports should configure the medical system and ensure the medical system complies with IEC 60601-1-1 standards. If you have any question, please contact the supplier.

- Do not touch the Signal I/O ports if in contact with the patient, otherwise patient injury may result.
- If more than one external equipment is connected to the monitor at one time through the patient cable socketor other signal interfaces, the total leakage current should be compliant with the specified in IEC 60601-1.

2.2.5 Bottom View



Fig 2-5 Bottom View

2.3 OSD (On-screen Display)

This monitor provides touch screen for touch operation.

This monitor uses a backlit LCD color screen which can simultaneously display physiological parameters, waveforms, alarm message, clock, network connection status, bed number, battery level and other prompt messages.

The main screen is divided into four areas: 1. Message prompt area (upper menu bar);

- 2. Parameter area;
- 3. Lower menu bar;
- 4. Waveform area.

See the figure below:

Overview



Fig 2-6Home Screen

Prompt Message Area (1):

This area includes the following sections from left to right:

a) Physiological alarm message:

Display the current physiological alarm (for example: ***RR TOO HIGH). When there are multiple physiological alarms, each alarm message will be displayed in turn. Click on the message to enter the [View Physiological Alarm] window.

b) Technical alarm message:

Display the current technical alarm(for example: ECG LEAD OFF). When there are multiple technical alarms, each alarm messages will be displayed in turn. Click on the message to enter the [View Technical Alarm] window.

- c) Prompt icons: Alarm Pause icon \bigotimes , Alarm Mute icon \bigotimes .
- d) Patient info: Display the patient name and type. Click the patient info to enter the [Patient Manage] menu.
- e) Clock: Show the current system time of the monitor. You can enter the [Time Setup] menu to reset the system clock according to your local time zone.

Parameter Area (2):

Measured parameters are displayed in this area.

- The parameter is displayed in the same color with the corresponding waveform.
- Click a parameter to open the corresponding setup menu.

Lower Menu Bar (3):

The lower menu bar contains shortcut keys. Depending on configuration of the monitor, different shortcutkeys are displayed in this area. 1 1 2



Fig 2-7Lower menu bar



Waveform Area (4):

- 8 waveforms can be displayed, with the name of each waveform shown on the left side above the waveform.
- Click a waveform to open the corresponding setup window.

∕<u>∕</u> Note

To ensure normal operation of the monitor, read this chapter and *"Safety Information"* and *"Patient Safety"* carefully prior to installation of the monitor.

3.1 Unpacking and Inspection

Carefully take the monitor and its accessories out of the packing box and check each of the following points. For any problem or inconsistency, contact our company or your distributor at once.

- 1. Check whether all accessories are provided according to the Packing List.
- 2. Check for damage.
- 3. Check all exposed lead wires and connectors.

Keep the packaging materials properly for future use.

3.2 Connection of AC Power Cord

Make sure the AC power supply conforms to the following specification: 100~240V, 50/60Hz±1Hz.

Connect one end of the power cord supplied with the monitor to the power socket on the monitor, and insert the other end to a groundedpower outlet.

/ Note

- Use a medical grade power strip.
- When a battery is provided, the battery must be charged after transportation or storage. If the battery is low, startup of the monitor may fail without connecting an AC power supply.
- Once connected to an AC power supply, the battery will be charged until it is fully charged.

Connect the equipotential conductor when necessary. See the content about equipotential earthing in the "*Patient Safety*".

3.3 Startup

After the power switch is turned on, the monitor enters self-test process. The red light turns on for 1 second, then the yellow light turns on for 1 second. After the our company's logo is displayed, the monitor shows the main interface, with a "beep" sound indicating the startup has been completed.

Prior to patient monitoring, confirm that the monitor is free from mechanical damage and that cables and accessories are correctly connected.

//_Note

- The system gives an alarm when a critical error is detected in the self-test.
- Check all monitoring functions to ensure that the monitor can function normally.
- The battery must be charged after each use to ensure sufficient battery power is available.
- After shut-down, in order to extend its service life, wait for at least 1 minute before you restart the monitor.

Warning

• If any evidence of failure or any error message is found, Donot use this monitor. Contact a service engineer of our company or a technician in your hospital.

3.4 Connection of Sensors

Connect the sensors to the monitor and the patient according to the detailed description in the relevant chapters.

4.1 Safety Instructions

This monitor is designed in accordance with international safety standards for medical electrical equipment. It is provided with defibrillation-proof and electrosurgical protection with floating ground. Use correct electrodes (see the chapter "*ECG Monitoring*") and apply them according to the manufacturer's guidance.

4.2 Environmental Requirements

Please observe the following instructions to ensure absolute safety of electrical installation.

The monitor should be used in an environment that can reasonably avoid vibration, dust, corrosive or explosive gases, extreme temperature and humidity, etc.

When the monitor is installed in an enclosed space, make sure the space is well ventilated. Leave at least 2 inches (5cm) free space around the monitor for air circulation. Also, leave sufficient space around it for easy operation and maintenance.

The monitor should be stored and operated within the ambient temperature of $-20 \ C \sim +60 \ C$ and $5 \ C \sim 40 \ C$ respectively. Hostile ambient temperature may affect the precision and accuracy of the monitor, and cause damage to the components and circuits.

4.3 Protective Earthing

To protect both the patient and the operator, the housing of the monitor must be earthed. The monitor is supplied with a detachable 3-prong power cord, which shall be inserted into a grounded power outlet to connect the monitor to the earth. If grounded power outlet is not available, contact the electrician in your hospital.

Warning

It is forbidden to connect the 3-prong power cord to a 2-prong power outlet.

Connect the earth wire to the equipotential connector of the monitor. If you have doubt about whether devices used together involves any electrical risks, such as risk caused by accumulation of leakage current, consult an expert in this field to ensure the safety of all devices.

4.4 Equipotential Earthing

The monitor must be connected to a power supply with protective earthing. For cardiac or cerebral examination, the monitor must be separately connected to an equipotential earthing system. Connect one end of the equipotential conductor (potential equalization conductor) to the equipotential connector on the rear panel of the monitor, and connect the other end to a connector of the equipotential earthing system. In the event that the protective earthing system is damaged, the equipotential earthing system can provide protection to the monitor.

Cardiac (or cerebral) examination can only be performed in a room installed with a protective earthing system. Before each use, check whether the monitor is in normal working status. Cables connecting the patient to the monitor cannot be tainted with electrolyte.

<u>/!\</u> Warning

• If the protective earthing system is not stable, use the built-in battery to supply power to the monitor.

4.5 Condensation

Ensure that the monitor is free from condensation during operation. When the monitor is moved from one room to another, condensation may be formed due to exposure to damp air and temperature difference. In this case, do not use the monitor until it gets dry.

A Note

The distance between the operator and the monitor should be less than 1 m so that the operator can observe the monitor easily.

5.1 Enter Main Menu

Select Main Menu on the screen or press the key on the front panel to enter the [Main Menu] window, where you can set up system menus easily. See the figure below:



Fig. 5-1Main Menu

1. \times button: Press this button to exit the current menu.

5.2 Enter User Maintain Menu

Enter [Main Menu] \rightarrow [Maintain]. Enter the correct password in the pop-up [Password] dialog to enter the [User Maintain] menu.

5.3 View Monitor Info

Enter [User Maintain] \rightarrow [Monitor Info] (Monitor Information). Monitor info includes software and hardware version, etc., which facilitate the manufacturer to maintain and trace the monitor.

5.4 Enter Parameter Setup Window

You can set up parameters displayed on the screen after entering the setup windows in the following ways:

- Via waveform area: Click a waveform to open the corresponding setup window. For example, you can click ECG waveform to open [ECG Wave] window.
- Via parameter area: Click a parameter to open the corresponding setup window. For example, you can click in the ECG parameter area to open the [ECG Setup] window.
- Via [Measu.Setup] menu: Press the [Measu. Setup] shortcut key (or enter [Main Menu] → [Measu. Setup]) to open the [Measu. Setup] menu, in which you can select and set up the desired parameter.

5.5 General Setup

5.5.1 Time Setup

Enter [User Maintain] \rightarrow [Time Setup]. Set up the system clock according to the local time zone, including Year, Month, Day, Hour, Minute (Min), Second (s), Date Format, and Time Format. The settings become effective immediately.

5.5.2 Language Setup

Enter [User Maintain] \rightarrow [Language]. Select the user interface language that you want.

5.5.3 Measurement Unit Setup

Enter [User Maintain] \rightarrow [Unit Setup]. Set up the units you want to use for parameters, including [Height Unit], [Weight Unit], [Press. Unit] (Pressure Unit), [CVP Unit], [Temp Unit], [cvp Unit], and [CO₂ Unit].

5.5.4 Shortcut Key Configuration

You can modify quick keys on the lower menu bar as needed.

Basic Operations

Enter [User Maintain] \rightarrow [Quick Key Config] to open the menu, as shown in the figure below:



Middle Area

Fig. 5-2 Quick Key Config menu

Three shortcut key areas respectively represent the left, middle and right section of the lower menu bar on the screen.

Click to open the [Quick key] menu, in which you can select the shortcut keys you want to add. After

you have added the shortcut keys, click **v** to confirm.

★ ▼	Page up/down to show the hidden shortcut keys.
1	Move up/down a shortcut key.
×	Delete a shortcut key
*	Click this key and press the OK button to restore factory settings.

5.5.5 Brightness Setup

- 1) Enter [Main Menu] \rightarrow [Screen Config] (Screen Configuration) \rightarrow [Brightness].
- 2) Select the appropriate brightness level between 10 (the darkest) ~100 (the brightest).

5.5.6 Key Backlight Setup

In dark environment, you can turn on the backlight for the keyboard.

Enter [Main Menu] \rightarrow [Screen Config] \rightarrow [Key Light].

5.5.7 Screen Setup



Enter [Main Menu] \rightarrow [Screen Config] \rightarrow [Screen Layout]. In this window, you can adjust the position of waveforms and parameters. Only parameters that have been turned ON are shown on the screen.



The first line of this window always shows the first ECG waveform.

- 1) Screen selection: You can select between [Standard] or [Big Numerics].
- 2) Waveform area: you can choose to display the parameters and their waveforms (if one exists).Waveformsare displayed on the left and parameters on the right. The waveform and its corresponding parameter are shown on the same line.
- 3) In area 3, you can choose to display the parameters. But if a particular row in the area 4 has no parameter, the corresponding row in area 3 will display parameters and waveforms at the same time.
- 4) Parameters without waveform: Only data are displayed for parameters in this area.

After layout setup, click X at the upper right corner of the [Screen Layout] window to exit.

5.5.8 Volume Setup

QRS Volumecharacteristic: beep

Beat Volumecharacteristic:beep

Click the [Volume Setup] shortcut key, or enter [Main Menu] \rightarrow [Volume Setup].

1) Select [Alm Vol] (Alarm Volume): Select the appropriate volume level between X (the lowest volume,

which depends on the setting of the Minimum Alarm Volume) and 10 (the loudest volume). See the "Alarms" chapter for details;

- 2) Select [QRS Vol] (QRS Volume): Select the appropriate volume within 0~10;
- 3) Select [Beat Vol]: Select the appropriate volume within 0~10;
- 4) Select [Key Vol]: Select the appropriate volume within 0~10.

5.5.9 Waveform Freeze

To freeze all waveforms on the screen, click the Freeze shortcut key on the lower menu bar of the screen, or directly press the Freeze button \bigotimes on the front panel of the monitor.

Freeze					\times
Wave 1	II	Wave 2	I	Wave3	Resp
	•		Ş		

Fig. 5-4Freeze Screen

In the [Freeze] window, use the Forward or Backward key (or use the rotary knob to select the Forward or Backward key and turn the knob) to move the frozen waveform leftward or rightward. A down arrow is shown on the right side above the top waveform, with a time scale displayed to the left of the arrow. The freeze time is marked as $[0s\Lambda]$. With the leftward movement of the waveform, the time scale will change to [-

1s \mathbf{I}_{j} , [-2s $\mathbf{I}_{j}]$, [-3s $\mathbf{I}_{j}]$... in sequence, indicating how many seconds ago the waveform currently displayed is plotted.

Record Frozen Waveform

In the [Freeze] window, select the waveform you want to print ([Wave1], [Wave2] or [Wave3]) and click the Record key. The recorder will start printing the frozen waveform.

Unfreeze

Click \bowtie at the upper right corner of the [Freeze] window. Press the Freeze key on the front panel again.

5.5.10 Lock Screen Setup

Set the lock screen if you do not want to use the touch function. Long-press to lock the screen and display [Screen is locked! Long press main menu to unlock.] as a prompt at the lower left on the screen.

5.5.11 Event Setup

Event setup involves saving waveforms for manually triggered events. During patient monitoring, theoccurrence of some events may have certain impacts on the patient, resulting in changes in some waveforms or parameters. You can select waveforms for manually triggered eventsin [Manual Trigger] settings. When an event is triggered, the monitor will mark it and save the corresponding waveforms. You can review the event later to analyze its impacts.

The steps are described below:

- 1) Enter [Main Menu] \rightarrow [Event Setup].
- 2) Choose 3 waveforms from the available options as [EventSave Waves].
- 3) Enter remarks in the Remark area, if necessary.
- 4) Select [Manual Trigger]. [Manual Trigger Successfully] will be shown at the bottom left of the screen.
- To review a manually triggered event, select it in the [View Physiology Alarm] menu under [Alarm Event Review]. For detailed settings, see the *"19.4Alarm Event Review"* section..



Fig. 5-5Event Setup

5.5.12 Module Setup

You can turn On/Off parameter modules as needed. When a parameter module is turned OFF, the corresponding waveform and parameter are not displayed on the screen, and the monitor stops measurement, analysis and alarm function for that module.

- 1) Enter [User Maintain] \rightarrow [Module Setup].
- 2) Turn On/Off a parameter in the Setup menu.

5.5.13 User Password Setting

Users can set the password for entering the "User Maintenance" according to their own needs. Enter [User Maintain] \rightarrow [Set User PassWord].

5.6 Work Mode

5.6.1 Monitoring Mode

Upon startup, the monitor automatically enters the monitoring mode for patient monitoring.

5.6.2 Standby Mode

If you don't want to shut down the monitor when there is no patient to monitor, click the [Standby] shortcut key to put the monitor into standby mode.

In standby mode:

- \diamond There is no alarm and waveform on the screen.
- \diamond Patient data is not saved.
- \diamond The screen of the system will turn black after entering standby mode for 30 seconds or so.

Press any key (except Power key) to exit the standby mode.

5.6.3 Night Mode

This monitor provides night mode to minimize disturbing the patient. After exiting this mode, the monitor will restore the settings before entering night mode.

To activate night mode:

- 1) Enter [Main Menu] \rightarrow [Screen Config] \rightarrow [Night Mode].
- 2) The [Night Setup] window pops up. Select [Night Mode] to enter this mode.

3) Set up [Alm Vol], [QRS Vol], [KeyVol], [Brightness], and [Stop NIBP Measure].

To exit night mode:

- 1) Enter [Main Menu] \rightarrow [Screen Config] \rightarrow [Night Mode].
- 2) The [Night Setup] window pops up. Select [Night Mode].
- 3) The warning message [Exit Night Mode?] is displayed. Select [Yes] to exit night mode.

5.6.4 Privacy Mode

In order to protect patient privacy, the monitoring data is not displayed on the screen in this mode. It can be activated only under CMS (Central Monitoring System) monitoring.

To activate privacy mode:

Enter [Main Menu] \rightarrow [Screen Config] \rightarrow [Privacy Mode].

When privacy mode is activated:

- 1) The message [In monitoring...press any key to exit privacy mode!] is shown on the monitor screen.
- 2) Alarms can still be triggered, but alarm sound and alarm light are available only on the central monitoring station.
- All system sounds of the monitor are muted, including QRS and beat sounds as well as various prompt tones.

The monitor exits from the privacy mode in any of the following conditions:

- \diamond You press any key (except Power key).
- \diamond Battery level runs low.

5.6.5 Demo

Enter [User Maintain] \rightarrow [DEMO] to put the monitor into demonstration mode.

∕!∖ Warning

Demo waveforms are used to simulate the actual monitoring process. Demo mode can only be used to demonstrate the device performance and assist in training course. In actual clinical use, it is forbidden to use the demo mode, because medical workers may mistake the demo data for waveforms and parameters of the patient, which will put the patient in danger.

6.1 Overview

For continuous monitoring of a patient, the monitor may require adjustment of some settings according to the actual patient conditions. The assembly of predefined settings used to operate the monitor is called a configuration. In order to configure the monitor more effectively and rapidly, this monitor provides a variety of configurations to meet the requirements of different patient types and different hospital departments. You can also customize a configuration according to actual conditions and save it as a user-defined configuration. Configuration info of the monitor mainly includes:

Parameter Configuration

Settings related to parameter measurements, such as Wave Gain, Speed, Unit, Alarm ON/OFF, and Alarm Limit Setup.

General Configuration

The monitor's general settings, such as Alarm Setup, Screen Layout, and Record.

Maintenance Configuration

Settings related to maintenance, such as Wave Draw, Language, and Nurse Call.

For default system configuration, see Appendix IV Default Configuration.

/ Warning

• The Config Manage function is protected with password. It can only be operated and approved by professional medical workers.

Enter the [Config Manage] menu:

1) Select [Main Menu].

2) Select [Config Manage], and enter the password.

[**Department**]: The department in which the monitor is used. When Department is modified, all user config files of the previous department will be deleted. Each department has 3 factory default configurations (Horse, Dog, Cat). At most 3 user-defined configurations can be saved to the department configuration directory. Before using the Config Manage function, ensure that the correct department is selected.

Department options: General (General Monitoring)

OR (Operation Room/Anesthesia Monitoring) ICU (Intensive Care Unit) CCU (Coronary Care Unit)
[▲] Note

- Upon startup or to admit a new patient, you need to check the current configuration of the monitor. This can be viewed in [Load Config]. The configuration name marked with the symbol —> in front is the currently loaded configuration.
- Use of different configurations on monitors in the same department (e.g., ICU or Cardiac OR) may result in danger.
- Make sure the configuration you select is appropriate for the patient being monitored.
- When the monitor is switched to another department, you need to admit the patient, change the patient type, and load the corresponding default factory configuration.
- The monitor can memorize system configuration.

[Save as UserConfig]: You can save the current configuration as a user config file by entering a config file name. The config file name can consist of alphanumeric characters or underscore(_), but cannot be empty. If the name you have entered is already used by another config file, the system will prompt whether you want to overwrite that config file. The system can save at most 3 user config files.

[Delete Config]: Delete user configs currently saved in the monitor. In this menu, all user config files saved under the current department are listed, with patient type in brackets added after each config file name. For example, John(Dog) indicates that the config file "John" is saved when the patient type is dog.

[Load Config]: The monitor supports up to 6 configurations for one department. Configurationsavailable for loading include the default factory configurations for the current patient type, user-defined configurations, and configurations imported from the USB flash drive. Patient type is marked after the user-defined configuration. After you load configurations, they will replace the current configurations and become effective.

Enter[Load Config]: enter [Main Menu] or [Config Manage] →[Load Config].

[Import Config from USB]: You can import configurations from a USB flash drive if there are less than 6 configurations for the current department in the system.

[Export Config to USB]: Export user-defined configurations in the system to a USB flash drive.

[Startup Configuration]: you can set up the configuration adopted by the monitor when it restarts.

But after the monitor powers off, the configurations will be set according to the following. With 120s after powering off, the monitor will automatically set the latest configurations; 120s later after powering off, the monitor will set the configurations according to [Startup Configuration].

6.2 Example

The operation steps of configuration management are described below, with the user-defined configuration [John] used as an example:

1) Enter [Main Menu] \rightarrow [Config Manage]. Enter the user password to open the [Config Manage] menu.

Configuration Management

Config Manage	\times		
Department	General		
Save As Us	er Config		
Startup configuration			
Load (Config .		
Delete	Config		
	¥		

Fig. 6-1 [Config Manage] Menu

2) In [Config Manage] menu, select [Department], and choose the appropriate department.

Config Manage	\times	Department	\times
Department	General	General	
Save As User Confi	.g	OR	
Startup Configratio	on	ICU	
Load Config	ļ	CCU	
Delete Config			

Fig. 6-2 [Department] Menu

3) In [Main Menu] or [Config Manage] menu, select [Load Config] and load a configuration. You can choose a default factory configuration or a user-defined configurationappropriate for the patient type.



Fig. 6-3 [Default] Menu

4) User can get a user-defined configuration by modifying the current configuration used by the monitor. In [Config Manage] menu, select [Save As User Config] to enter the [Config Name] interface, as shown in figure below. Enter the file name [John], and press the Enter key to save it.

Config Name		\times
1 2	3 4 5 6 7 8 9 0 4	X
q w	ertyuiop	
a	d f g h j K 1	
1 z	x c v b n m 🔶 →	
EN #?.	L & (-

Fig. 6-4 [Config Name] Screen

5) In [Main Menu] or [Config Manage] menu, select [Load Config]. [John] will be shown in the list of configurations. You can select it or select from default factory configurations or other user-defined configurations.

Config Manage	\times	
Department Gener	ral	Load Config 🛛 🗙
Save As User Config		Horse Default Config
Startup configuration		-> Dog Default Config
Load Config		Cat Default Config
Delete Config		Kevin (Dog)
★ ▼		John (Dog)

Fig. 6-5 [Load Config] Menu

6) If this configuration is no longer needed, you can select [Delete Config] in [Config Manage] menu, and then select it in the configuration list to delete it.



Fig. 6-6 [Delete User Config] Menu

7) In step 5), you can also import a configuration from a USB flash drive.

Insert a USB flash drive containing config files to the USB port on the monitor. After the USB flash drive is recognized, select [Import Config from USB] in [Config Manage] menu, When [Import Succeeded] is shown at the bottom left of the screen, the imported configurations will appear in the list under [Load Config].

If an imported configuration is no longer needed, you can select [Delete Config] in [Config Manage] menu, to delete it.

If the inserted USB flash drive contains no user config file, the monitor will prompt [No User Config Exists].



Fig. 6-7Import Config

8) User-defined configurations can also be exported to a USB flash drive for backup purpose.

Insert a USB flash drive, and select [Export Config to USB] in [Config Manage] menu, When [Export Succeeded] is shown at the bottom of the screen, the export is finished.



Fig. 6-8Export Config

9) You can set up the configuration adopted by the monitor when it restarts. In [Config Manage] menu, enter [Startup Configuration] and select from [Use Last CFG], [Horse Default Config], [Dog Default Config], [Cat Default Config] or user-defined configuration.



Fig 6-9 Startup Configuration

You can enter the [Patient Manage] menu in three ways: a) Enter [Main Menu] and select [Patient Manage]; b) Click the [Pat. Manage] shortcut key on the lower menu bar; c) Click in the patient info area on the upper menu bar.

7.1 Admit

When a patient is connected to the monitor, the monitor can display and save the patient's physiological data even if the patient is not admitted. But correct patient admission is important for patient monitoring.

You can admit and discharge a patient in the [Patient Manage] window.

To admit a hospitalized patient:

- 1) Enter [Patient Manage] \rightarrow [Admit].
- 2) If another patient has been admitted on the monitor, the prompt message [Discharge current patient?Admit new patient?] will be shown. Select [Yes] to discharge the existing patient. If no patient has been admitted, the prompt message [Apply the monitoring data to the patient to be admitted?] will be shown.
 - > [Yes]: Apply the monitor data to the new patient.
 - > [No]: Clear the stored data on the monitor.
- Enter patient info in the [Patient Info] menu. Pay attention that [Species] should be set up correctly. You
 can user EN or Handwriting input methods to enter information.
 - Species]: the options include [Horse], [Dog], [Cat] and [Others]. It is essential to select the correct patient type, as it determines the algorithm used to calculate and process the patient data, as well as certain safety limits and alarm limits applied to the patient.

Patient Info	\times
Client Name	John
Owner Name	Zhang wu
Patient ID	234578
Species	Dog
Sex	Male
\$	₹

Fig. 7-1Patient Info

/ Warning

- No matter whether a patient is admitted, the monitor assigns a default value to both [Species]. Make sure the settings in Patient Info are consistent with the patient's actual conditions prior to monitoring.
- When the patient type is changed, the system will load the factorydefault configuration. Usually, the alarm limits should be verified before patient monitoring to ensure that these alarm limits suit your patient. When the patient type is not changed, the current configuration is not changed.

7.2 Quick Admit

The Quick Admit mode can be used in emergency situation when there is not enough time to fill in patient info. You must complete the patient info later.

- 1) Enter [Patient Manage] \rightarrow [Quick Admit].
- 2) If another patient has been admitted on the monitor, the prompt message [Discharge current patient? Admit new patient?] will be shown. Select [Yes] to discharge the existing patient. If no patient has been admitted, the prompt message [Apply the monitoring data to the patient to be admitted?] will be shown.
 - > [Yes]: Apply the monitor data to the new patient.
 - > [No]: Clear the stored data on the monitor.
- 3) Enter the [Patient Info] window, set up [Species], and then close the window.

7.3 Discharge

To discharge a patient from the monitor:

- 1) Enter [Patient Manage] \rightarrow [Discharge].
- 2) The system will give the prompt message [Discharge?].
 - [Yes]: Discharge the current patient. The patient data monitored will be archived automatically if the monitor is mounted with a SD card. You can review the archived patient data in [Pat File Manage].
 - ▶ [No]: Cancel the discharge operation.

7.4 Patient File Management

You can inquire, review, delete and export archived patient files in Pat File Manage (Patient File Management). However, patient files cannot be archived if the monitor is not mounted with a SD card.

[Query]: Enter the patient name in the field at the lower left corner of the [Pat File Manage] window and click [Query] to search for the patient's file.

[View]: Select the patient info bar you want to review. Click [View] to open [Review] menu, in which you can view [Patient Info], [Trend Review], [NIBP Review], [Alarm Event Review] and [Wave Review].

[Delete]: Delete the selected patient file.

[Export]: Export the selected patient file to a USB flash drive or PC.

The operation steps of patient file management are described below:

- 1) Enter [Main Menu] \rightarrow [PatientData].
- 2) Enter a patient name in the input field at the lower left corner of the window.
- 3) Click [Query] the show the patient files found.

If there are multiple patient files found, click the \clubsuit keys to select the one you want to view; click the \clubsuit keys to show more information of the patient.

- 1) You can [View], [Delete] and [Export] the selected patient file.
- When you check at the lower left corner, all patient files will be selected. At this time, you can click
 [Delete] to delete all patientfiles.
- 3) You can export patient files following these steps:
 - ▶ If a single patient file is selected, select [Export] to open the [Data Export] menu.
 - 1) Set the [Start Time] and [End Time].
 - 2) Select [File Format]: options are .bin, .txt or .xls.
 - 3) Select [Export Media]: options are USB or FTP.

- 4) USB: Export to a USB flash drive.
- 5) FTP: Export to a FTP server via wired network.
- 6) Select [Data Export] to start export. When it is finished, the prompt message [Data export succeeded, please restart.] will be shown.
- If multiple patient files are selected, operations steps are the same with those for single patient file except that [Start Time] and [End Time] cannot be set.

Patient Data(1)					
Client Name	MonitorTime	Date of Bir	Sex	Species	Department
1) John	2017-08-14 10:32:38 2017-08-14 10:39:08		Male	Dog	
	Query View	Delete Expor	rt ┥		★ ₹

Fig. 7-2Patient File Management

🗥 Warning

- As for patient alarm messages, physiological and technical alarms are saved in the patient file.
- In the event of a power outage, alarm events can be saved in the patient file.
- When exporting data to a USB disk, do not remove the USB disk until the export process is completed in order to prevent data corruption.
- When exporting data to a FTP server, do not disconnect the network cable until the export process is completed in order to prevent data corruption.

//_Note

• When the monitor is shut down, the data for the monitoring period before the shutdown will be saved automatically. Upon startup of the monitor, the system will automatically create a new period (i.e., current period data).

• The monitor allows data storage upon power failure.

7.4.1 Save Tactics

The monitor creates a patient file and save its data even if no patient has been admitted. Such patient file is a blank Temp Case (Temporary Case), which can be automatically deleted in monitor settings. Also, the monitor can automatically delete old cases when the SD card is full.

- 1) Enter [User Maintain] \rightarrow [Save Tactics];
- 2) Select [Auto Del Temp Case] and [Del old case] respectively, and switch them between "ON" and "OFF".

Chapter 8 User Interface

This monitor provides multiple user interface styles, such as Standard, Big Font, Trend, OxyCRG, List, View Bed, 7-Lead ECG, and 7-Lead Half Screen interfaces. You can select appropriate user interface styles according to different demands, so as to obtain different patient information on the screen. The waveform displayed on each channel is depending on the monitor configuration. You can also select the waveforms you want to display in the [Screen Layout] menu. This chapter introduces the characteristics of some work interfaces.

To select your desired user interface style:

- 1) Select the [Screens] shortcut key, or select [Screens] under [Main Menu].
- 2) In the [Screens] menu, select the desired interface.

8.1 Standard

The monitor shows the Standard interface by default. If all optional modules are equipped, this interface can display waveforms of at most 8 channels together with their parameters.



Fig. 8-1Standard Interface

8.2 Big Numerics

In [Big Numerics] screen, parameters are shown in large font, so that you can see thenumerics on the screen within a certain distance. This screen can display four parameters and four waveforms.

User Interface



Fig. 8-2Big Numerics Interface

8.3 Trend

The Trend interface displays the short-term trend graphs of a range of waveforms and parameters.



Fig. 8-3Trend Interface

In each trend graph, on the top is the trend name, on the left is the parameter scale, and at the bottom is the time scale.



Fig. 8-4 Short-term Trend of HR

1) Position of trend graphs

Trend graphs are located to the left of the waveforms. The color of each trend graph is identical to that of the corresponding parameter. To change the position of a trend graph, select it to open the [Trend Parameter Setup] menu, and then select the new position in the [Module Exchange] option.

2) Trend period

Select a trend graph to open the [TrendSetup] menu. Select [Time] to set it to 30 min, 60 min, 120 min, 240 min, or 480 min.

8.4 OxyCRG

OxyCRG interface consists of HR trend graph, SpO2 trend graph and RR trend graph or Respwaveform.



Fig. 8-5OxyCRG Interface

1) Select the OxyCRG window to open the [OxyCRG] menu.

Select the time length of OxyCRG trend:

[Time] options include [1 min], [2 min], [4 min] and [8 min].

Select "RESP Wave" or "RR Trend":

[Type]:[RESP Wave] or [RR Trend].

8.5 List

The list interface occupies half of the waveform area. You can review recently measured parameters in this interface. 7 sets of data are displayed on each page.



Fig. 8-6List Interface

8.6 View Bed

With the View Bed function, the monitor can display contents on the screen of another monitor connected to the same net.

Note

• This function is optional and only available between monitors provided by our company.

User Interface



Fig. 8-7 [View Bed] Interface



Fig. 8-8 [View Bed] Window

The View Bed interface includes:

- (1) Physiological alarm message area: When multiple alarm messages exist, each one will be displayed in turn.
- 2 Waveform area: You can select a waveform to open the setup window, and then set the waveforms to be displayed in the [Wave Exchange] menu.
- ③ Net Bed (Network Bed): You can monitor another bed by entering its bed number in the same netsystem.
- ④ Parameter area: You can click in this area to open the setup window, and select other parameters to be displayed.
- (5) Technical alarm message area: When multiple technical alarm messages exist, each one will be displayed in turn.
- 6 Function keys:

[View Bed] - Select it to monitor another bed .

[Reset] - Select it to reset alarms of another bed monitor.

8.7 7-Lead ECG



When the lead type is 5-lead, you can select the 7-Lead ECG interface to show the waveforms of "I, II, III, AVR, AVL, AVF and V" leads. Other waveforms will not be displayed.

Fig. 8-9 [7-Lead ECG] Interface

8.8 7-Lead Half Screen

When the lead type is 5-lead, you can select the 7-Lead Half Screen interface to display the waveforms of "I, II, III, AVR, AVL, AVF and V" leads in the upper half of the waveform area.



Fig. 8-10 [7-Lead Half Screen] Interface

8.9 Set Interface Style

You can set the interface style as needed, such as:

- 1) Wave sweep speed.
- 2) Wave style.
- 3) Color of parameters and waves displayed.
- 4) Parameters shown on the screen.

You can set up the interface style for all parameters using the same method described in this section.

8.9.1 Set Wave Sweep Speed

- In the Standard interface, select the waveform. For example: Select the ECG wave [II] or [I] → [ECG Wave] → [Sweep].
- 2) Select the appropriate sweep speed.

8.9.2 Set Wave Style

Enter [User Maintain] \rightarrow [Wave Type] \rightarrow [Thin],[Med] (Medium) or [Bold].

8.9.3 Set Module Color

- 1) Enter [User Maintain] \rightarrow [Module Color].
- In the [Module Color] menu, you can select a waveform and set its color to: [Red], [Orange], [Yellow],
 [Green], [Cyan], [Blue], [Purple] or [White].

8.9.4 Set Wave Draw

Enter [User Maintain] \rightarrow [Wave Draw] \rightarrow [Color], [MONO].

8.9.5 Set Wave Fill

- 1) Enter [User Maintain] \rightarrow [Wave FillSetup].
- 2) Select the parameter as needed.

8.9.6 Change Screen Layout

Enter [Main Menu] \rightarrow [Screen Config] \rightarrow [Screen Layout].

In the [Standard] window, you can set parameters and waveforms displayed on the screen. For detailed settings of [Screen Layout], see the *"Screen Setup"* section.

In the [Big Font] window, you can set parameters and waveforms displayed in the Big Font interface.

When a patient under monitoring has abnormal vital signs, or when failure occurs in the monitor, the system will give audio and visual alarm to remind the medical workers.

The alarm system functions in real-time monitoring mode. In standby mode, alarm sound and light will be disabled.

When there are multiple alarms and prompt messages, each message will be displayed in turn.

Warning

• Use of different configuration on different monitors in one area (e.g., ICU or OR) may result in danger to the patient.

9.1 Alarm Type

Alarms generated by the monitor are classified into physiological and technical alarms.

Physiological alarm

A physiological alarm is generated when a certain physiological parameter of the patient is beyond the high/low alarm limit or the patient has physiological disorder. Physiological alarm messages are displayed in the physiological alarm area in the upper part of the screen.

• Technical alarm

A technical alarm, also known as a system error message, is triggered when a system function cannot work normally or the monitoring result is unreasonable due to improper operation or system failure. A technical alarm message is displayed in the technical alarm area in the upper part of the screen.

NOTE: In addition to physiological and technical alarms, the monitor also show messages about system status. Generally, these messages shown in the system message area are not related to vital signs of the patient.

9.2 Alarm Level

	_	
	Physiological alarm	Technical alarm
High-level alarm	The patient is in life-threatening, imminent danger and emergency treatment should be carried out.	Serious device failures or mis- operations (e.g., low battery) may result in failure to monitor the critical conditions of the patient, which will threaten his/her life.

Physiological and technical alarms are classified into high, medium and low-level alarms by severity.

Medium-level alarm	Abnormality is detected in the patient's vital signs; treatment measures should be taken promptly.	Some device failures or mis- operation may not endanger the patient's safety, but will affect normal monitoring of vital physiological parameters.
Low-level alarm	Abnormality is detected in the patient's vital signs; treatment may be necessary.	Some device failures or mis- operation may result in certain malfunctions, but will not endanger the patient's safety.

The levels of all technical alarms (except ECG and SpO2) and some physiological alarms have been set before delivery of the monitor and cannot be changed by the user. The levels of some physiological alarms can be modified.

9.3 Alarm Mode

When an alarm is generated, the monitor will use the following alarm modes to alert the user:

Light Alarm

Sound Alarm

Alarm Message

Blinking Parameter

For light alarms, sound alarms and alarm messages, the alarm levels are differentiated in the following ways.

9.4 Light Alarm

Two alarm indicators at the upper left corner of the monitor indicate alarm levels with different light colors and blinking frequencies.

Physiological Alarm:

High-level: Red, blinking.
Medium-level: Yellow, blinking.
Low-level: Yellow, remaining on **Technical Alarm:**High-level: Red, blinking.
Medium-level: Yellow, blinking.
Low-level: Yellow, remaining on.

9.5 Sound Alarm

The monitor indicates alarm levels with alarm sounds with different intervals.

Medium-level: beep-beep-beep

Low-level: beep

- / Warning
- Both the bedside monitor and the CMS are provided with sound alarm function.
- When this monitor is connected to the CMS, you can use the same upper and lower alarm limits for the monitor and CMS. But if you enable alarm delay on this monitor, it will not give alarm when the CMS has given an alarm.
- When multiple alarms of different levels are generated simultaneously, the monitor will activate the warning sound and light for the highest-level alarm.

9.6 Alarm Message

Alarm messages are shown in the physiological alarm area or technical alarm area on the screen.

Different marks are added in front of physiological alarm messages to indicate the alarm levels:

High-level: ***

Medium-level: **

Low-level:

Different background colors are used to indicate the alarm levels:

High-level: Red Medium-level: Yellow Low-level: Yellow

9.7 Alarm Parameter Blink

When a parameter reaches the alarm limit, the parameter and its upper and lower limits will blink once every second, indicating the measured result is beyond the upper or lower limit.

9.8 Alarm Pause

You can press the key on the control panel (or the [Alm Pause] shortcut key on the screen) to quickly enter the alarm pause state:

- Alarm sound, alarm light and alarm message are disabled for physiological alarms, and no physiological alarms will be triggered.
- ♦ The physiological alarm message area shows the prompt message "Alm Pause XXXs".
- ☆ Alarm sound and alarm light are disabled for technical alarms; if a new technical alarm is triggered, only text prompt will be given.

☆ In the event of the "Battery Too Low" alarm, this alarm will be resumed automatically to give alarm sound, alarm light and alarm message.

Every time the monitor is turned on, the system will enter the alarm pause state automatically. After the alarm pause time (set by user) expires, the monitor will cancel alarm pause automatically; user can press the key (or the [Alm Pause] shortcut key on the screen) to cancel alarm pause.

Operation steps for alarm pause:

- 1) Enter [User Maintain] \rightarrow [Alarm Setup] \rightarrow [Alm Pause Time].
- 2) Set the appropriate pause time: [1min], [2min], [3min], [5min], [10min], [15min].

9.9 Alarm OFF

The Alarm OFF function is effective just for physiological alarms. When the function is activated, the Alarm

OFF sign X will be shown on the left side below the corresponding parameter in the parameter area:

✤ For physiological alarms, sound, light and text prompts will be disabled, and no new physiological alarms will be triggered.

Operation steps:

- Click the parameter value area to open the Setup menu, and then select [Alarm Limit Setup]. You can also select the [Alarm Setup] shortcut key to enter [Alarm Limit Setup].
- 2) Select [All Alarm Off] to disable alarms against all parameters. If the alarm ON/OFF icon of a parameter is switched to "OFF", alarms for that parameter will be disabled.

To exit the alarm OFF state of all parameters, select [All Alarm On]; to exit the alarm OFF state of one parameter, switch the alarm ON/OFF icon of that parameter to "ON".

Warning
 If the alarm function is set to "OFF", the monitor cannot trigger alarm when there is an alarm condition. Therefore, the operator should use this function with caution.

9.10 Set Alarm Record

If the monitor is equipped with a recorder, the monitor will trigger output of the parameter waveform and value by the recorder if all the following conditions are satisfied: when data of a parameter is abnormal; the alarm switch is turned ON; and [Alm Record] is set to ON.

- 1) Enter [Main Menu] \rightarrow [Alarm Setup] \rightarrow [Alarm RecordSetup].
- 2) Set [Alm Rec Time] to [8s] or [16s].
- 3) To activate alarm recording for a parameter, switch the alarm record icon **CON**"; to activate

alarm recording for all parameters, select [All Rec. On].

 User can switch the alarm record icon to "OFF" to deactivate parameters requiring alarm record; to deactivate all parameter alarm records, select [All Rec. Off].

9.11 Set Parameter Alarm

9.11.1 Set Alarm Limit

Colors of Alarm Limits

- Red represents high-level alarms
- ♦ Yellow represents medium-level alarms
- Cyan represents low-level alarms

Intelligent alarm gradation is a characteristic of our alarm system. For parameters of intelligent alarm gradation, user can simultaneously set the alarm limit ranges of high, medium and low-level alarms without setting alarm levels. When the measured parameter value is beyond the normal range, the monitor will automatically judge which alarm level range the measured parameter value belongs to, and then will generate an alarm of the corresponding level.

For parameters of general alarms, user needs to set the alarm level and can only set the alarm limits corresponding to the alarm level selected. When the measured parameter value is beyond the normal range, the monitor will generate an alarm only according to the alarm level selected. Intelligent alarm gradation is available on ECG, NIBP, PR, AwRR and SpO₂ (excluding Nellcor blood oxygen) and not available on other parameter.

For parameters subject to intelligent alarm gradation, the alarm limit setup methods are basically the same. Here ECG is taken as an example:

- 1) Select the ECG parameter area; enter the Setup menu \rightarrow [Alarm Limit Setup].
- 2) Set the appropriate upper and lower limits for the parameter.
- 3) Switch the alarm ON/OFF icon to "ON".
- 4) When setting is finished, select the Confirm key .

For parameters subject to general alarms, the alarm limit setup methods are basically the same. Here RESP is taken as an example:

- 1) Select the RESP parameter area; enter the Setup menu \rightarrow [Alarm Limit Setup].
- 2) Select the check box at the lower left corner of the Setup window for the corresponding parameter to switch the alarm level.
- 3) Set the appropriate upper and lower limits for the parameter under the current level.
- 4) Switch the alarm ON/OFF icon **DN** to "ON".

5) When setting is finished, select the Confirm key

9.11.2 Set Auto Alarm Limit

The monitor can automatically set up the Auto Alarm Limits for the currently measured parameters according to the patient type.

Before applying these alarm limits, make sure they are appropriate for the patient. If not, you need to manually set the alarm limits.

M Warning

- When setting alarm limits to extreme values, the alarm system may be useless.
- When setting upper and lower alarm limits, make sure the patient type is correct (Horse, Dog,Cat or Others).
- If you have set up the upper and lower alarm limits manually, the monitor will display these upper and lower alarm limits instead of the default alarm limits of the system.
- After powering off accidentally, the equipment will save the latest setting with 120s after powering off. The default setting will be set more than 120s after powering off.

/ Note

• When resetting to default factory configurations, alarm limits of the parameters will also change. See Appendix IV "Default Configurations" for details.

9.12 Set Alarm Delay

The system provides five options for parameter alarm delay: [Not Allowed], [5s], [10s], [15s] and [20s]. If [Not Allowed] is selected, when the measured parameter is beyond the alarm limit, the monitor gives alarm immediately. If [5s]/[10s]/[15s]/[20s] alarm delay is selected, the monitor gives alarm when the measured parameter has been beyond the alarm limit for 5s, 10s, 15, 20s, respectively.

NOTE: Alarm delay cannot be applied to ECG and IBP.

Operation steps:

- 1) Enter [User Maintain] \rightarrow [Alarm Setup] \rightarrow [Alarm Delay].
- 2) Set the appropriate delay time.

9.13 Set Alarm Volume

9.13.1 Set Minimum Alarm Volume

Do not set the minimum alarm volume too low; otherwise, you cannot hear the alarm sound, which may put the patient into danger. Follow the operation steps below to set up the minimum alarm volume:

- 1) Enter [User Maintain] \rightarrow [Alarm Setup] \rightarrow [Min. Alm Volume].
- 2) Set the appropriate value.

/ Note

- When the alarm volume is turned down, the alarm sound may go unheard; therefore, the minimum alarm volume should be adjusted to be higher than environmental noise.
- The sound pressure level of alarm sounds generated by this monitor is 45-85db.

9.13.2 Set Alarm Volume

- 1) Enter [Main Menu] \rightarrow [Volume Setup], or select the [Volume Setup] shortcut key.
- 2) Select [Alm Vol] in the pop-up menu.
- Select the volume within the range of X~10. X represents the lowest volume, which depends on the setting of minimum alarm volume.

When the alarm volume is set to 0, the \bigotimes icon will be shown in the message prompt area of the screen, suggesting sound is OFF.

 Enter the [User Maintain]→ [Alarm Setup]. Users can also set the [HighAlarm] and [Medium Alarm], which can respectively modify the volumes of the advanced alarm and the intermediate alarm.

Warning

- When the alarm volume of the system is set to 0, the monitor cannot make any alarm sound even if a new alarm is generated. Therefore, the operator should use this function with caution.
- Do not exclusively rely on the sound alarm system. Otherwise, the patient may be put in a dangerous situation if the alarm volume is low. User should pay close attention to the patient's actual clinical conditions.

9.13.3 Set Alarm Reminder

When the alarm volume is set to 0, or the CPB mode is selected, the monitor can provide periodic prompt tone to remind that there is activated alarm in the system. Follow the operation steps below to set up alarm reminders.

- 1) Enter [User Maintain] \rightarrow [Alarm Setup].
- 2) Switch [Alarm Reminder] to "ON" or "OFF".
- 3) Select [Reminder Interval]: [1 Min], [2 Min] or [3 Min].
- Select [Reminder Volume]: set it to a value between 1 (the minimum volume) ~10 (the maximum volume).

9.14 Alarm Reset

You can reset the current alarm via the [Alarm Reset] shortcut key 2 on the lower menu bar on the screen:

- \diamond Cease the audio alarm indication of all physiological alarms and technical alarms.
- \diamond End alarm paused status, thus re-enabling the alarm system to respond to future alarm conditions.
- ✤ For lead off and sensor off technical alarm condition, clear the alarm lamp flashing and audio alarm indication and the alarm messages turn to prompt messages displayed in the technical alarm message area

9.15 Other Bed Alarm

When this monitor is connected to another bedside monitor via network, the alarm information on that monitor can be observed on this monitor, including alarm messages, waveforms and parameters.

- \diamond In the [View Bed] interface, you can view the alarm conditions of the monitor for another bed.
- \diamond You can reset the alarm of the other bed by selecting the [Reset] button in the [View Bed] window.

9.16 Alarm System Self-test

Upon startup of the monitor, the alarm system will perform self-test of alarm light and sound.

Phenomena during self-test:

Upon startup of the monitor:

- \diamond The red alarm light and the yellow light turn on for 1s in turn, and then the alarm lights turn off.
- ♦ At the time of alarm light self-test, the alarm system makes a "beep" sound for self-test of alarm sound.

Requirement on sound self-test: The low-level alarm is used, with the alarm volume set to Level 5.

9.17 Alarm System Test

After self-test, the system can be further tested through SpO2 or NIBP parameter. For example:

- 1) Connect the SpO_2 cable to the monitor.
- 2) Set the SpO2 alarm limits to 90% and 60%, respectively.
- 3) Directly select [Alm Vol] on the lower menu bar of the screen. Set [Alm Vol] to any level among 0~10.
- 4) When the measured value is beyond the upper/lower alarm limit, confirm whether the changes in sound, light and parameter blinking on the monitor conform to the descriptions in the section "Light Alarm", "Sound Alarm", "Alarm Message", and "Alarm Parameter Blink" in this chapter. Meanwhile, the physiological alarm message area shows "SpO₂ Too High" or "SpO₂ Too Low".
- 5) Pull out the SpO₂ sensor from the monitor; the technical alarm message area shows "SpO₂FingerOff".

10.1 Overview

Mechanical activity of the heart causes artery pulse. PR value can be obtained by measuring the pulse. Color of the PR parameter area is consistent with the color in which the parameter of PR source is shown.

10.2 PR Source

Select the PR parameter area to enter the Setup menu, where you can set PR Source.

[SpO2]: Display the pulse rate value from SpO2;

[NIBP]: Display the pulse rate value from NIBP;

[ART], [PA], [UAP], [BAP], [FAP], [P1], [P2], [P3], [P4], [LV], [AO]: Specific pressure parameters from IBP; display the pulse rate value from IBP. (Which pressure parameter can be selected as the source depends on which pressure parameter is monitored by the monitor)

10.3 Alarm Limit Setup

Select the PR parameter area to enter the Setup menu, where you can carry out alarm limit setup.

11.1 Definition of ECG Monitoring

Electrocardiography (ECG) monitors continuous electrical activity of the patient's heart, which is reflected on the monitor in the form of wave and value, so as to accurately assess the current physiological status of the patient. Therefore, you must make sure the ECG cables are connected properly to obtain correct measurement values. The device can display 3-lead or 5-lead ECG waves according to your need.

11.2 Precautions for ECG Monitoring

🗥 Warning

- During defibrillation, the operator should not come into contact with the patient, desk or device.
- Prior to monitoring, please test the sensor cable to see if it is normal. When the ECG cable is disconnected from the jack, the screen will display the prompt message "ECG Lead Off" and generate the alarm sound.
- When this monitor is used for ECG signal monitoring, ECG leads provided by our company must be used.
- When connecting the electrodes or patient cable, please ensure that the patient does not come into contact with any other conductive parts or the ground. Especially, please confirm that all ECG electrodes (including neutral electrode) are attached onto the patient's body and will not come into contact with any conductive parts or the ground.
- Check whether the ECG electrode patch can irritate skin every day. If there is any sign of allergy, replace the electrode or change its position.
- Prior to ECG monitoring, please check the ECG cable. When the ECG cable is disconnected, the monitor will trigger a sound alarm and display the alarm message "Sensor Off".
- During defibrillation, the ECG cable connected to the patient may get damaged. To reuse such cable, please check whether the cable function is OK.
- After defibrillation, if electrodes are used correctly and are attached properly according to the manufacturer's instructions, the waveforms on screen display will be recovered within 5s. For electrosurgery or defibrillation, the measurement accuracy may be reduced temporarily, but this will not affect the safety of the patient or the device.
- When the monitor is connected to an electrosurgical unit (ESU), in order to protect the patient from injury caused by leakage current, the sensors and cables of the device should not come

into contact with the ESU.

Do not expose the monitor to X-ray and high-intensity magnetic fields.

//_Note

- Interference from ungrounded devices near the patient and ESU interference may result in wave problem. If the device is operated under conditions specified in EN60601-1-2 (radiation resistance: 3V/m), electric field intensity over 1V/m may cause measurement errors at different frequencies. Therefore, it is suggested not to use any electric radiation device in a place near ECG/RESP measurement.
- If the ECG electrode is correctly placed but the ECG wave is still inaccurate, please replace the leads.
- To protect the environment, please recycle and treat used electrode patches appropriately.

11.3 Monitoring Steps

11.3.1 Prepare Skin

Skin is a poor conductor. Therefore, to achieve good contact between electrodes and skin, it is very important to prepare the patient's skin:

- 1) Choose a skin area without any damage or abnormality.
- 2) When necessary, shave body hair at positions where electrodes will be placed.
- Use soapsuds to thoroughly clean the skin. (Do not use diethyl ether or pure alcohol because these substances may increase the skin impedance).
- 4) Air-dry the skin completely.
- 5) Use skin preparation paper for ECG to gently rub the skin, so as to remove dead skin and improve the conductivity at the position where the electrode is attached.

11.3.2 Connect ECG Cable

- 1) First install the spring clip before placing the electrode.
- Place the electrode on the patient's body; if the electrode used does not contain conductive paste, please apply conductive paste prior to placement.
- 3) Connect the electrode leads with the patient cable.
- 4) Insert the patient cable into the ECG port on the monitor. The monitor shows the ECG wave and value.

11.3.3 Install ECG Leads

The table below lists the names of leads in European and American standards, respectively. (RA, LA, RL, LL and V are used to represent leads in American standards, whereas R, L, N, F and C are used in European standards):

	U.S.A. Standard		U.S.A. Standard EU Standard		J Standard
Application location	Mark	Color	Mark	Color	
Right Foreleg	RA	White	R	Red	
Left Foreleg	LA	Black	L	Brown	
Left Hind Leg	LL	Red	F	Green	
Right Hind Leg	RL	Green	Ν	Black	
explore	V	Brown	С	White	

See the table below for marks and color codes of 3-lead and 5-lead electrodes:

11.3.3.1 Place 3-lead Electrodes



Fig 11-1Positions for Placing 3-lead Electrodes

For a 3 lead system, leads should be attached just below the elbow on the front leg and just above the stifle on the hind leg. Thefollowing lead sequence should be applied for a 3 lead system: Right Foreleg (RA-white); Left Foreleg (LA-black); Left Hind Leg (LLred).

11.3.3.2 Place 5-lead Monitoring Electrodes



Fig 11-2Positions for Placing 5-lead Electrodes

For a 5 lead system, four limb leads can be applied (RA, LA, RL, and LL) with the exploring lead (brown) used for diagnostic purposes needed. Otherwise, the exploring lead may be left unattached.

11.3.3.3 Recommended ECG Lead Connection for Surgical Patient

Warning Use appropriate ECG cables in the OR. These cables can prevent patient burn and reduce electronic interference through additional circuits. They are not suitable for RESP test.

• When using an ESU, never place electrodes close to the earth plate of the ESU; otherwise there will be much interference against ECG signal.

The placement of ECG lead depends on the type of operation to be performed. For example, when a thoracotomy is to be performed, the electrode can be placed on the side of the chest or on the back. In the OR, artifacts may affect ECG wave due to the use of an ESU. In order to reduce artifacts, the electrodes can be placed at the left and right shoulders, close to the left and right sides of the abdomen; the chest lead can be placed left to the middle of the chest; avoid placing the electrode on the upper arm, or the ECG wave may become very small.



11.4 ECG Display

11.5 ECG Setup

11.5.1 Set Lead Type

3-lead, 5-lead cables apply to this monitor. ECG cables with different leads can be used to monitor different ECG waves.

When the 3-lead ECG cable is used, leads that can be monitored include I, II and III. In the Standard interface, ECG wave of at most 1 lead can be displayed.

When the 5-lead ECG cable is used, leads that can be monitored include I, II, III, aVR, aVL, aVF and V. In the Standard interface, ECG wave of at most 2 leads can be displayed.

When the lead type of the monitor is set to Auto, the monitor will automatically judge the leads to be monitored.

Set the lead type for the ECG cable supplied with the device:

1) Select the ECG parameter area to enter the Setup menu \rightarrow [Lead Type] \rightarrow [3 Leads], [5 Leads], or [Auto].

11.5.2 Smart Lead Off

When [Smart Lead Off] is ON, if the lead of the current channel comes off, the monitor automatically switches to a channel where the lead is not off. When the lead that comes off is reconnected, the monitor automatically switches back to the original channel.

Enable or disable the function:

- 1) Select the ECG parameter area to enter the SETUP menu \rightarrow [Other Setup].
- 2) Select [Smart Lead Off], and switch it to "On" or "Off".

11.5.3 Set Off Level

Enter [User Maintain] \rightarrow [Alarm Setup] \rightarrow [ECG Lead Off Level].

11.5.4 Set Lead Name for Key Monitoring

In the Standard interface, when 3 Leads is selected as the lead type, only one ECG wave can be displayed; when 5 Leads is selected, two ECG waves can be displayed.

Select one ECG wave to enter the [ECG Wave] menu → [Lead Name]; select one lead name of the ECG wave, such lead as [II].

11.5.5 Set Gain

If the wave size is too big or too small, user can change the display size of wave by gain setup; such setup will not affect ECG signal analysis of the monitor. With the wave and the 1mv scale provided on the right side of the wave, user can obtain the optimal wave.

- Select one ECG wave to enter the [ECG Wave] menu → [Gain] → [×0.125], [×0.25], [×0.5], [×1], [×2], [×4] or [Auto].
 - 🗥 Note
 - When the input signal is too intensive, the wave crest may be cut off. In such case, user can manually change the gain level of ECG wave according to the actual wave, so as to avoid incomplete wave display.

11.5.6 Set Filter Mode

Filter Mode: Clearer or more accurate waves can be obtained through filtering. Four filter modes are available for selection.

- > In the Diagnosis mode, ECG waves displayed are those without filtering.
- > The Monitor mode will filter artifacts that may result in false alarms.
- > In the OR, the Surgery mode can reduce artifacts and interference from the ESU.
- 1) Select one ECG wave to enter the [ECG Wave] menu \rightarrow [Filter Mode] \rightarrow [Dia.], [Monitor], [Surgery].

/ Marning

• The system can provide unprocessed real signals only in the diagnosis mode. In the "Monitor" and "Surgery" filter modes, the ECG wave will distort to different degrees. At this moment,

the system can only provide the basic ECG info, which will greatly affect the result of ST segment analysis.

11.5.7 Set Calculate Lead

User can select the leads for HR calculation, but should ensure the presence of the following wave characteristics under corresponding leads:

- a) Tall and narrow without notch.
- b) R wave is tall, completely above or below the baseline.
- c) T wave is less than 1/3 height of R wave.

P wave should be much smaller than T wave.



Fig 11-4Standard ECG Wave

Options of calculation channels are different under different lead types:

3 Leads: Lead II is locked; no other options are provided

5 Leads: Three options are provided: I, II and V.

Select Lead:

Select the ECG parameter area to enter the Setup menu → [Calculate Lead]; set thesources of lead calculation.

To obtain 1mV calibrated ECG wave, ECG calibration should be performed. For the ECG calibration method, see the *"Maintenance"* chapter.

11.5.8 Set Notch Filter

Notch filter can inhibit the 50Hz or 60Hz frequency component in the signals acquired. When the filter mode is not Diagnosis, the system will turn on Notch Filter automatically; when the filter mode is Diagnosis, Notch Filter can be turned on or off as needed.

1) Select the ECG parameter area to enter the Setup menu \rightarrow [Other Setup]
2) Set [Notch Filter] as follows:

[Strengh]: Select it when the wave jitters frequently (e.g., the wave has burrs).

[Weak]: Select it when the wave jitters infrequently.

[Off]: Notching will not be performed.

- 3) Enter [User Maintain] \rightarrow [Other Setup] \rightarrow [Notch Filter].
- 4) User can select [50Hz] or [60Hz] according to the power supply frequency.

11.5.9 HR Source

User can select the HR source to determine the HR value or PR value displayed in the ECG parameter area; the color of HR parameter value is consistent with the source parameter selected. Select the ECG parameter area to enter [ECG Setup], and set [HR Source] as follows:

[ECG]: The ECG parameter area displays the HR value, and the monitor makes the heartbeat sound.

[SpO2]: The ECG parameter area displays the pulse rate value from SpO2, and the monitor makes the pulse sound.

[ART], [PA], [UAP], [BAP], [FAP], [P1], [P2], [P3], [P4], [LV], [AO]: Specific pressure parameters from IBP; display the pulse rate value from IBP. (Which pressure parameter can be selected as the source depends on which pressure parameter is monitored by the monitor)

11.5.10 Mul. Lead Analysis

When Mul. Lead Analysis is turned on, the setting of ECG [Calculate Lead] will become invalid. The module intelligently selects the lead with good ECG wave for HR calculation

- 1) Select the ECG parameter area to enter the Setup menu.
- 2) Select [Multi. Lead Analyse], and switch it to "On" or "Off".

11.5.11 Cascade

Cascade is for user to observe the designated realtime ECG wave for a long period of time. In the Cascade interface, the screen will show cascade wave of the same lead. Currently the monitor is in any work interface under the multi-parameter monitoring mode; select ECG in the waveform area; in the pop-up [ECG Wave] menu, turn on [Cascade]. The number of cascade waves displayed depends on the number of ECG waves present in the current interface. The operation over one of the ECG waves also applies to other ECG waves.

/_Note

• Under the interface of [7-Lead Half Screen], [cascade] is not optional.

11.6 ECG Relearn

During ECG monitoring, if the patient's ECG template changes significantly, you may need to manually start an ECG Relearn process. Changes in the ECG template may result in:

♦ Inaccurate HR value

Start relearning:

Select the ECG parameter area to enter the Setup menu \rightarrow [Other Setup] \rightarrow [Relearn].

Caution

• Please start ECG Relearn during normal rhythm and when ECG signal is relatively noiseless.

12.1 Resp Measurement

The Monitor measures the RESP based on the thoracic impedance between the two electrodes. The changes of such impedance caused by thoracic movements will generate a RESP wave on the screen. The RR is calculated from such wave.

12.2 Placement of Electrodes

In Resp measurement, it is important to prepare the skin properly for electrode placement. Refer to the relevant section on ECG measurement.

The Resp signals are measured through the two ECG electrodes. In case of standard placement of ECG electrodes, the Resp can be measured through the electrode RA and electrode LL.

12.3 Resp Display



Fig 12-1Resp Display

12.4 Resp Calculation Mode

Enter [Resp Setup]:

- 1) Enter [User Maintain] \rightarrow [Resp Setup] \rightarrow [Cal. Mode] (Calculation Mode).
- 2) Select [Auto] or [Manual].
- 3) In [Manual] mode, you can set the upper and lower dotted line of the Resp waveform.
- 4) In [Auto] mode, you cannot change the upper or lower dotted line but use the default waveform

calculation method.

[Auto] mode:

The Monitor auto adjusts the detection level based on the waveform height and ECG artifact. In [Auto] mode, no dotted line of detection level is displayed on the Resp waveform.

Please select [Auto] mode if:

 \diamond The RR is not approximate to the HR;

♦ The patient relies on spontaneous Resp with or without CPAP; or

 \diamond The patient relies on mechanical ventilation (except IMV).

[Manual] mode:

In [Manual] mode, you have to set the Resp detection level. The Monitor does not auto adjust the dotted lines of detection level. When the Resp depth changes or the Resp waveform gain is adjusted, you may need to adjust the position of the dotted lines of detection level on the Resp waveform manually by selecting [Up Line] and [Down Line].

Please select [Manual] mode if:

 \diamond The RR is approximate to the HR;

 \diamond The patient relies on IMV; or

 \diamond The Resp signals are weak (try to improve the signal quality by relocating the electrodes).

In [Manual] mode, the superposition of some cardiac activities may trigger the Resp counter and result in incorrect high RR indication or no-breath detection failure. If you doubt that the cardiac superposition has been treated as Resp activities, improve the RESP detection level until it is higher than the cardiac superposition. If you fail to improve the Resp detection level due to small Resp waveform size, follow Subparagraph 2) Lateral Thoracic Expansion of Section 12.2.1 Optimization of Lead Position to optimize the position of the electrodes.

12.5 Resp Setup

12.5.1 Gain

Gain is used to adjust the amplitude of the Resp wave. You can select $\times 0.25$, $\times 0.5$, $\times 1$, $\times 2$ or $\times 4$ as the gain.

1) Select the Respwavearea to enter [RespWave] and select an appropriate [Gain].

12.5.2 No Breath Alarm Delay

No-breath detection is to detect the longest interval between two adjacent RESPs. When the actual no-breath time of the patient exceeds the set no-breath time, the Monitor will respond to no-breath alarms according to the value of [No Breath Alm Delay].

Set [No Breaths Timeout]:

Select the Resp parameter area to enter [Reso Setup] → [No Breaths Timeout] and set an appropriate detection time.

Set [No Breath Alm Delay]:

- 1) Enter [User Maintain] \rightarrow [Other Setup].
- Set [No Breath Alm Delay] to [Close], [10s], [15s], [20s], [25s], [30s], [35s], [40s], [45s], [50s], [55s] or [1min].

If you select [Close], the alarm delay function will be disabled.

12.5.3 Resp Lead

Resp leads indicate the source of the current Resp waveform. You can set [Resp Lead] to RA-LA (I), RA-LL (II) or [Auto]. If you select [Auto], the Monitor will auto select an appropriate Resp lead.

- 1) Select the Resp parameter area to enter [Resp Setup] \rightarrow [Resp Lead].
- 2) Select RA-LA (I), RA-LL (II) or [Auto].

12.5.4 Enhance Filter

This parameter is designed to filter out the Resp interference. Its default is [On].

- 1) Select the Respwave area to enter [RespWave].
- 2) Select [Enhance Filter] to switch between [On] and [Off].

∠!\ Note

• In Resp measurement, the Monitor cannot recognize any obstructive or mixed no-breath but trigger an alarm when the interval between two adjacent RESPs exceeds the set time.

13.1 Overview

The SpO₂ plethysmography measures the arterial SpO₂, namely, the percentage of the oxyhemoglobin count. The SpO₂ is measured with the pulse oximetry, a continuous noninvasive method measuring how many of the lights emitted from the sensor (light source) can penetrate the patient's tissues (fingers or ears) and reach the receiver.

The Monitor measures the following parameters:

Arterial SpO₂: the ratio of the oxyhemoglobin to the sum of oxyhemoglobin and non-oxygenated hemoglobin (functional arterial SpO₂);

Pleth waveform: a visible indication of the patient's pulse;

PR (calculated from pleth waveform): the patient's pulse count per minute;

PI (perfusion index): the pulsatile blood flow value.

/ Warning

• If there is any carboxyhemoglobin (COHb), methemoglobin (MetHb) or dye dilution chemical, the SpO₂ value will have a deviation.

13.1.1 Identification of SpO₂ Sensor Type

The SpO_2 sensor type is pre-configured before the Monitor is delivered. You can identify it based on the silkscreened logo beside the original SpO_2 sensor below the sensor interface on the left side of the Monitor:

• Standard SpO₂ sensor:

Sensor interface: circular interface at the center of the side panel;

Silkscreened logo: SpO₂.

◆ Masimo SpO₂ sensor:

Sensor interface: square interface at the bottom of the side panel;

Silkscreened logo: SMAsimoSEL.

• Nellcor SpO₂ sensor:

Sensor interface: square interface at the bottom of the side panel;

Silkscreened logo: Nellcor.

It is useful for the clinician to know the wavelength range and maximum optical output power of the sensor, for example, for the purpose of photodynamic therapy.

• The standard SpO₂ sensor can measure a wavelength of 660nm (red LED) or 905nm (IR LED).

- The Masimo SpO₂ sensor can measure a wavelength of 660nm (red LED) or 905nm (IR LED).
- The Nellcor SpO₂ sensor can measure a wavelength of 660nm (red LED) or 900nm (IR LED).
- The maximum optical output power of the sensor is lower than 15mW.

∕!∖ Warning

• The Monitor can auto recognize the SpO₂ sensor type. However, it will fail to measure the SpO₂ properly if you use a sensor incompatible with its internal hardware.

13.2 Safety Instructions

Warning

- The Monitor is compatible with the SpO₂ sensor designated by our company only.
- Before monitoring the patient, please check if the sensor and extension cord are compatible with the Monitor. Incompatible accessories may reduce the performance of the Monitor.
- Before monitoring the patient, please check if the sensor cable works properly. Remove the SpO₂ sensor cable from the sensor interface, and the Monitor will display the prompt message "SpO₂ sensor off" and trigger the alarm sound.
- If the SpO₂ sensor or its package seems damaged, do not use it but return it to the manufacturer.
- Long-time continuous monitoring may increase the risk of undesired skin characteristic changes (extremely sensitive, turning red, blistered or pressure necrosis), especially for the patients with perfusion disorder or variable or immature skin morphology diagram. Align the sensor with the light path, fix it properly and check its position regularly based on skin quality changes (change the sensor position in case of reduced skin quality). Perform such check more frequently if necessary (subject to the condition of the patient).
- Make sure the sensor cable and electrosurgical equipment cable are not intertwined.
- Do not place the sensor on a limb with ductus arteriosus or intravenous tube.
- Setting the upper SpO₂ alarm limit to 100% will disable the upper-limit alarm. Premature infants may get infected with crystalline posterior fibrous tissue diseases in case of high SpO₂. Please set the upper SpO₂ alarm limit cautiously based on recognized clinical practices.

A Note

- Make sure the fingernail covers the lights from the sensor. Place the sensor cable on the back of the hand.
- Do not place the SpO₂ sensor on a limb with blood pressure cuff, or the blood flow occlusion in blood pressure measurement will affect the SpO₂ reading.
- The displayed SpO₂ waveform is normalized.
- The pulse oximeter is calibrated to display the functional oxygen saturation.

13.3 SpO₂ Accuracy Test

∕!∖ Warning

The function testercannot be used to assess the accuracy of the SpO₂ sensor.

Assess the SpO2 accuracy by comparing the readings respectively on the Monitor and CO-oxygen pressure gauge.

13.4 Low Perfusion Accuracy Test

This monitor can measure low perfusion and the recommended method of determining the low perfusion accuracy of the monitor is to conduct this test with CO-oximeter on adult animals whose SpO_2 ranges from 70% to 100%. The accuracy index is obtained according to statistical distribution, and only about 2/3 of the estimated values are expected to fall within the estimated values of CO-oximeter.

13.5 PR Accuracy Test

Assess the PR accuracy by comparing with the ECG heart rate.

13.6 Monitoring Steps



- The oxygen probe clip open in the left and right sides of the clip installed infrared LED sensor (see Figure 13-1-A);
- 2) Open the monitor;
- 3) To one end of the sensor cable connector insertion the SpO_2 module's SpO_2 hole;
- 4) The best placement of the probe position is the animal's tongue, the probe can be placed in the intermediate position of the tongue of the animal. Other places, such as the toes and ears are also available for placement. We recommend to the probe clip clamped the animal tongue to oxygen guardianship, (see Figure 13-1-B):



Fig 13-1placement of senseor

Warning

- Using the SpO₂ sensor in the MRI process may cause severe burns. To minimize such risk, please do cabling properly to avoid induction coils. Whenever the SpO₂ sensor works improperly, remove it from the patient immediately.
- Check the patient's skin every two hours to ensure good skin quality and lighting. In case of any skin change, move the sensor to another part. Change the wearing part at least every four hours.

¹Note

• The injectable dyes, like methylene blue, and the dysfunctional hemoglobin in blood vessels will lead to inaccurate measurement results.

13.7 Measurement Restrictions

In operations, the following factors may affect the SpO₂ measurement accuracy:

- High-frequency radio interference, whether from the host system or from the electrosurgical equipments connected to the host system.
- 2) Do not use the oximeter or SpO_2 sensor in the MRI process, or the induced current may cause burns.
- 3) Intravenous dyes.
- 4) The patient moves frequently.
- 5) Ambient optical radiation
- 6) The sensor is fixed improperly or to an improper position on the patient.
- 7) Improper sensor temperature (optimum temperature: $28^{\circ}C \sim 42^{\circ}C$).

- 8) The sensor is placed on a limb with blood pressure cuff, ductus arteriosus or intravenous tube.
- 9) Concentration of the non-functional hemoglobin, like COHb or MetHb.
- 10) Low SpO_2 .
- 11) Poor circulation perfusion at the tested part.
- 12) The shock, anemia, hypothermia and application of vasoconstrictors may reduce the arterial blood flow to a non-measurable level.
- 13) The SpO₂ measurement accuracy depends also on the absorption of the lights with special wavelength by oxyhemoglobin and reduced hemoglobin. If any other substance also absorbs such lights, like COHb, MetHb, methylene blue or indigo carmine, you may obtain a false or low SpO₂ value.

13.8 SpO₂ Setup

13.8.1 Set Off Level

Enter [User Maintain] \rightarrow [Alarm Setup] \rightarrow [SpO₂SensorOff Level].

13.8.2 Smart Alarm

1) Select the SpO₂ parameter area to enter $[SpO_2 Setup] \rightarrow [Sat second]$ (Saturation Seconds).

2) Select [10], [25], [50], [100] or [Not Allowed].

Note: this function is available for NELLCOR SpO₂ only.

The smart alarm is designed to reduce false alarms and keep the clinician informed of the SpO_2 changes more accurately and timely. For example, if you set [Sat second] to [50] and the upper and lower alarm limit of NELLCOR SpO_2 respectively to 97% and 90%, maintain the measured SpO_2 value at 80% for 3s and then reduce it to 78% for 2s, the Monitor will trigger the alarm sound and indicator 5s after the SpO_2 value goes beyond the alarm limit and the circle beside the SpO_2 value will return to the origin.

Calculation method:

Percentage points × seconds = Sat second (integer)

The calculated Sat second is displayed as follows:

% SpO2 Seconds Sat second

 $(90\%-80\%) \times 3 = 30$

 $(90\%-78\%) \times 2 = 24$

Total Sat second = 54



Fig 13-2Example Diagram

In the above Sat second example:

About 4.9s later, the Monitor will report a Sat second alarm because you've set [Sat second] to [50], smaller than 54.

The SpO₂ value may fluctuate in seconds rather than remain unchanged. The patient's SpO₂ value usually fluctuates within the alarm limit and sometimes goes beyond the alarm limit discontinuously. The Monitor will accumulate the positive and negative percentage points until the set value of [Sat second] is reached or the patient's SpO₂ value remains beyond the alarm limit.

13.8.3 Smart Tone

You will (will not) hear the pulse tone in case of unstable signal or ambient noise if this function is enabled (disabled).

Set [Smart Tone]:

- 1) Select the SpO_2 parameter area to enter [SpO_2 Setup].
- 2) Select [Smart Tone] to switch between [On] and [Off].

Note: this function is available for Masimo SpO₂ only.

13.8.4 NIBP Same Side

Set [NIBP Same Side]:

- 1) Select the SpO_2 parameter area to enter [SpO_2 Setup].
- 2) Select [NIBP Same Side] to switch to [On].

If you do not select [On], the weak perfusion caused by NIBP measurement will lead to inaccurate SpO_2 measurement or trigger a physiological SpO_2 alarm when the NIBP measurement and SpO_2 measurement are performed on the same limb.

13.8.5 Signal IQ

If this function is enabled and the displayed SpO_2 value is not based on an appropriate signal quality, the Monitor will display a visible plethysmogram indicating the measurement signal quality and the patient's pulse events.

Movements usually affect the signal quality. When the arterial pulse reaches the peak, the Monitor will mark its location on the vertical line (signal indicator). The volume of the smart tone (if enabled) remains consistent with the vertical line (the volume of the smart tone will increase or decrease accordingly when the SpO_2 value increases or decreases).

The height of the vertical line represents the quality of the measured signal (the higher line, the higher quality). Set [Signal IQ] (Signal Identification and Quality):

1) Select the SpO_2 parameter area to enter [SpO_2 Setup].

2) Select [Signal IQ] to switch between [On] and [Off].

Note: this function is available for Masimo SpO₂ and simulated SpO₂ only.

13.8.6 Average Time

The SpO₂ value displayed on the Monitor is the average of the SpO₂ values acquired in a given time. Shorter (longer) average time will lead to quicker (slower) response and lower (higher) measurement accuracy of the Monitor when the patient's SpO₂ value changes. For a critical patient, please set a short average time so as to analyze his/her condition timely. Set average time:

Masimo SpO₂:

- 1) Select the SpO₂ parameter area to enter [SpO₂ Setup] \rightarrow [Average Time].
- 2) Select [2-4s], [4-6s], [8s], [10s], [12s], [14s] or [16s].

Standard SpO₂:

- 1) Select the SpO₂ parameter area to enter [SpO₂ Setup] \rightarrow [Sensitivity].
- 2) Select [High], [Medium] or [Low].

13.8.7 Fast Sat

If this function is enabled, the Monitor will perform the SpO_2 measurement as fast as [Average Time] is set to [2-4s].

1) Select the SpO₂ parameter area to enter [SpO₂ Setup].

2) Select [Fast Sat] (Fast Saturation) to switch between [On] and [Off].

Note: this function is available for Masimo SpO_2 only; if this function is enabled, you can find the prompt message "Fast Sat" at the main interface.

13.8.8 Sensitivity

[Sensitivity] can be set to [Normal], [Maximum] or [APOD] (Adaptive Probe Off Detection). [APOD] represents the highest sensitivity. In typical monitoring conditions, please select [Normal]. If the sensor is likely to come off the patient due to wet skin, violent movements or other causes, please select [Maximum]. If the patient's perfusion level is extremely low, please select [APOD].

Set [Sensitivity]:

- 1) Select the SpO₂ parameter area to enter [SpO₂ Setup] \rightarrow [Sensitivity].
- 2) Select [Normal], [Maximum] or [APOD].

Note: this function is available for Masimo SpO₂ only.

13.9 Masimo Information

1) Masimo Patents

The Monitor contains one or more of the following U.S. patents: RE38,492, RE38,476, 6,850,787, 6,826,419, 6,816,741, 6,699,194, 6,684,090, 6,658,276, 6,654,624, 6,650,917, 6,643,530, 6,606,511, 6,584,336, 6,501,975, 6,463,311, 6,430,525, 6,360,114, 6,263,222, 6,236,872, 6,229,856, 6,206,830, 6,157,830, 6,067,462, 6,011,986, 6,002,952, 5,919,134, 5,823,950, 5,769,785, 5,758,644, 5,685,299, 5,632,272, 5,490,505, 5,482,036, international patents and one or more patents mentioned on www.masimo.com/patents. A product with Satshare® function also contains the U.S. patent 6,770,028. Other patents are pending.

2) Other Information

©2006 Masimo Corporation. Masimo, Radical, Discrete Saturation Transform, DST, Satshare, SET, LNOP, LNCS and LNOPv are federally registered trademarks of Masimo Corporation.

RadNet, Radicalscreen, signal IQ, FastSat, fastStart and APOD are trademarks of Masimo Corporation.

14.1 Overview

The Monitor uses the vibration method (measure the cuff pressure vibration amplitude) to measure the noninvasive blood pressure (NIBP). Blood pressure changes will cause cuff vibrations. The cuff pressure at the highest vibration amplitude is the mean pressure. The systolic pressure and diastolic pressure are calculated from the mean pressure.

NIBP measurement is applicable in electrosurgical operations and defibrillator discharges according to IEC80601-2-30/EN60601-2-30.

14.2 Safety Instructions

Marning

- Before the NIBP measurement, make sure the selected monitoring mode is appropriate for the patient (horse, cat or dog) and cuff size (large, middle, small).
- Do not place the cuff on a limb with intravenous tube or cannula, or the tissues around the cannula may be damaged when the infusion is slowed or blocked in the cuff inflation process.
- Make sure the inflation tube connecting the blood pressure cuff to the Monitor is not obstructed or tangled.
- Do not perform the NIBP measurement to a patient with sickle cell disease or existing or expected skin lesions.
- For a patient with severe disturbances of blood coagulation, please determine the applicability of automatic NIBP measurement based on clinical evaluation, or the limb contacting the cuff may suffer from hematoma due to friction.
- Frequent measurements may cause blood flow interference and injure the patient.
- To prevent further injury, do not place the cuff on any wound.
- Do not place the blood pressure cuff on a limb under intravenous infusion, intravenous therapy or arteriovenous shunt, or the transient blood flow interference will injure the patient.
- Do not place the cuff on the arm at the same side as mastectomy.
- The increasing cuff pressure may cause transient function failure to other monitoring equipment used on the same limb.

14.3 Cuff Placement

1 Caution

Only accessories recommended by our company should be used.

//_Note

• Place the patient on a padded surface to provide comfort, and warmth. Any movement, even inadvertent shivering, may prevent the monitor from taking an accurate measurement.

14.3.1 Cuff Placement for Cat

A cat may be left in its owner's lap to keep it calm. Measurements are best done in an area of the hospital away from noise and bright lights. The animal may be held so that the front limbs are free for cuff placement. In conscious patients, the tail may be the most appropriate location for placement of the cuff. Cats may be most comfortable in sternal recumbency making the tail a more preferable site. For the median artery on the foreleg, place the cuff around the forelimb, between the elbow and carpus. It is not necessary to center the cuff over the artery which is on the medial side of the leg because of the fully encircling bladder design. Hair need not be clipped except when heavily matted. In cats less than five (5) pounds when measurements are difficult to obtain, place the cuff around the leg above the elbow to obtain measurements from the brachial artery. Measurements from the coccygeal artery may be used by placing the cuff around the base of the tail but not in anesthetized patients.



14.3.2 Cuff Placement for Dog

For measurements in dogs, it is preferable to use the right lateral, sternal or dorsal recumbent positions. That is not a problem in anesthetized patients, but it may be difficult to get large dogs to cooperate for proper positioning when conscious. If the dog is in a sitting position, place the front paw on the operator's knee and take measurements from the metacarpus. Sites for cuff placement are the metacarpus, metatarsus and anterior tibial. In anesthetized patients, most surgeries are done on the posterior part of the body so the metacarpal area of the forelimb is most convenient. In situations where this is not possible, the cuff should be wrapped around the metatarsus just proximal to the tarsal pad or around the hind leg just distal to the hock. The tail site should not be used for cuff placement during anesthesia. It is not necessary to center the cuff over the artery because of the fully encircling bladder design. If the hair over the artery site is too thick or matted for good contact, it should be clipped.



🗥 Note

• To achieve the most accurate readings, it is important to keep the cuff on a horizontal plane with the heart.

14.3.3 Large Animals

A large animal such as a horse should be in a stall, standing still, or lying down. For horses and cows, the cuff can be wrapped around the base of the tail using the coccygeal artery on the ventral surface.

- ∕[⊥] Warning
- When monitoring over an extended period of time, or at frequent intervals, periodically observe the patient's limb to make sure that the circulation is not impaired for a prolonged period of time.

14.3.4 Cuff size selections

The widest cuff that can be placed on the patient, without extending beyond the joint, should be selected. Appropriate sized cuffs may be selected based on published guidelines that cuff width should be 40 - 60% of limb circumference. The cuff should be wrapped for a snug fit.

Overlapping the cuff will not affect measurement results. Make sure the hook and loop sections of the cuff are fully engaged when it is wrapped around the limb. If not fully engaged, the cuff will detach during bladder inflation. If that happens, select the next size bigger cuff. Adhesive tape or other material should not be used to secure the cuff.

The following table may be used as a guide to select the correct size.

Cuff type:

Animal type	Use standard
elephant	Neo #5
horse	Neo #4
dog	Neo #3
cat	Neo #2
mouse	Neo #1

Animal cuff size:

Cuff name	Arm circumference measurements	Cuff length	Cuff width	Tube length
Pet blood pressure cuff 1#	3∼5.5 cm	12.2cm	2.6 cm	
Pet blood pressure cuff 2#	4~8 cm	15.4 cm	3.2 cm	
Pet blood pressure cuff 3#	6∼11 cm	18.7 cm	4.2 cm	2m
Pet blood pressure cuff 4#	$18 \sim 26 \text{ cm}$	10.6 cm	10.6 cm	
Pet blood pressure cuff 5#	$46\sim 66~{ m cm}$	21 cm	21 cm	

14.4 NIBP Measurement

14.4.1 Measurement Restrictions

The vibration method has some restrictions, depending on the patient's condition. It detects the regular pulse wave generated by arterial pressure. If the patient's condition makes it difficult to detect such wave, the measured pressure value will be unreliable and the pressure measurement time will be increased. In the following cases, the vibration method will be disturbed, causing unreliable or impossible pressure measurement or increased pressure measurement time, depending on the patient's condition.

1) Patient Movements

If the patient is moving, trembling or under cramps, which may disturb the detection of arterial pressure pulse, the NIBP measurement will be unreliable or impossible and the pressure measurement time will be increased.

2) Heart-lung Machine

Do not perform the NIBP measurement if the patient is connected to a heart-lung machine.

3) Pressure Changes

If the patient's blood pressure changes rapidly within a certain time when the Monitor analyzes the arterial pressure pulse for measurement purpose, the NIBP measurement will be unreliable or impossible.

4) Severe Shock

If the patient is under severe shock or hypothermia, the NIBP measurement will be unreliable as the reduced blood flowing to the periphery will reduce the arterial pulse.

5) Beyond-limit HR

Do not perform the NIBP measurement if the HR is lower than 40bpm (beats per minute) or higher than 240bpm.

6) Fat Patient

Damped by the thick fat layers of the limb, the vibration from the artery will fail to reach the cuff, causing lower measurement accuracy than in normal cases.

14.4.2 Start the Measurement

14.4.2.1 Start the Manual Measurement

Select the NIBP parameter area to enter the setup menu \rightarrow [Measure Mode] \rightarrow [Manual]. Whether to start the NIBP measure depends on the user's need.

14.4.2.2 Start the Whole Point Measurement

- 1. Select the NIBP parameter area to enter the setup menu→[Whole point Mea.], and switch it to "On".
- Select the "Select the "Select the control panel or [NIBP Start] shortcut keys and manually start the first measure. After the first measure, the monitor will automatically and repeatedly start the measure according to the interval time set before.

For example, if you start the first measurement at 08:23, and set [Interval] to [5min], the monitor will operate the next measurement at 08:25. The measurement will start with clock simultaneously, and then at 08:30 by parity of reasoning.

/!\Note The monitor operate the [Whole point Mea.] only when the [Interval] is not less than 5min.

14.4.2.3 Start the Interval Measurement

Users can select all options except for the [Manual] by using short keys of [Model Setup] .Then selectthe " \checkmark " key on the control panel orthe short keys of [NIBP Start] to start the first measure. After the first measure, the monitor will automatically and repeatedly start the measure according to the interval time set before. Or start the interval measure following the steps below:

- 1. Select the NIBP parameter area to enter the setup menu \rightarrow [Measure Mode] \rightarrow [Auto].
- 2. Select the [Interval]: from 1 minute to 720 minutes.
- 3. Select the "Select the first measure, the monitor will automatically and repeatedly start the measure according to the interval time set before.

14.4.2.4 Start the Continual Measurement

Select the NIBP parameter area to enter [NIBP Setup] \rightarrow [Continual Measure], then start the 5min measurement continuously.

Note

- If you have any doubt about the reading accuracy, check the patient's vital signs first with the same method as checking the Monitor's functions.
- In order not to injure the patient, the [Continual Measure] mode will not be available if the patient type is [Cat].
- The auto measurement results are affected by the temperature, RH and altitude limit.

Warning

If any liquid splashes onto the Monitor or its accessories, especially when it is likely to flow into the Monitor or its tubes, please contact the maintenance department of the hospital.

14.4.3 Stop the Measurement

Finished the measurement, the monitor will emission the gas and stop the measurement. During the measurement, you can press the " \checkmark " key on the control panel or [NIBP Start] quick key to stop the measurement.

14.4.4 NIBP Display

The NIBP measurement results are displayed in the parameter area. The figure below is for reference only. The actual display interface of the Monitor may be slightly different from this figure. NIBPMonitoring



Ein	1/1	NIDT		1017
L15	14-1	INIDE	DISL	лау
				/

1	Alarm limit of systolic pressure	2	Time of the previous measurement
3	Cuff Size:Large, Middle or Small.	4	Pressure unit:mmhg or kPa
5	Mean pressure (in the measurement process, display the cuff pressure)	6	Diastolic pressure
7	Measurement mode: auto, manual or continual.	8	Systolic pressure

14.5 NIBP Setup

14.5.1 Cuff Size

The cuff sizeincludesLarge, Middle and Small.

1) Select the NIBP parameter area to enter [NIBP Setup] \rightarrow [Cuff Size].

14.5.2 Initial Pressure

- 1) Select the NIBP parameter area to enter [NIBP Setup] \rightarrow [Initial Pressure].
- 2) Set an appropriate value for [Initial Pressure].

14.6 NIBP Reset

Select NIBP parameter area to enter [NIBP Setup] \rightarrow [Reset]. This function can restore the initial pressure of the blood pressure pump. If the blood pressure pump works improperly, use this function to check it and recover its accidental exceptions.

14.7 NIBP Analysis

At the NIBP analysis interface, you can view the patient's normal values of systolic pressure and diastolic pressure, the percentage of higher/lower values and the average, maximum and minimum systolic pressure and diastolic pressure within the measurement time.

1) Select the NIBP parameter area to enter [NIBP Setup] \rightarrow [Other Setup] \rightarrow [NIBP Analysis].

Then you can set the following parameters:

[Daily Start Time]: set the NIBP data statistics starting time (hour or minute).

[Daily End Time]: set the NIBP data statistics ending time (hour or minute).

[SYS Nor. Range]: set the upper and lower limit of systolic pressure.

[DIA Nor. Range]: set the upper and lower limit of diastolic pressure.

15.1 Temp Monitoring

The Monitor has two Temp measurement channels and uses a TEMP sensor to measure the Temp. Place the Temp sensor under the patient's armpit or on the patient's anorectal part, depending on the sensor type. To achieve an accurate measurement result, please measure the Temp for at least 1min.

15.1.1 Temp Measurement

- 1) Select an appropriate Temp sensor type and size.
- 2) To use a disposable Temp sensor, please connect it to the Temp cable.
- 3) Connect the Tempsensor or Temp cable to the Temp sensor interface of the Monitor.
- 4) Fix the Temp sensor to the patient reliably.
- 5) Set an appropriate alarm limit.

Narning

- Work mode of the Temp sensor: immediate mode.
- Before the Temp measurement, check if the Temp sensor cable is in good condition. Remove the Temp sensor cable from the Temp sensor interface, and the Monitor will display the prompt message "T1 (T2) sensor off" and trigger the alarm sound.
- Handle the Temp sensor and cable with caution. When they are idle, coil them loosely. Tight coiling may cause mechanical damage to the cable.
- Calibrate the Temp measurement set at least every two years or as required by the hospital's procedures. Contact the manufacturer for calibration when necessary.

▲ _{Note}

• Do not reuse any disposable Temp sensor.

15.2 Temp Display

The parameter area will display the Temp value and unit of channel [T1] and [T2] and the Temp difference [TD] between the channels. Select Temp parameter area to enter [Temp Setup].



TD: Temp Difference

Fig 15-1Temp Display

Chapter 16 IBP Monitoring

16.1 Overview

The Monitor can measure the artery pressure (systolic pressure, diastolic pressure and mean pressure) directly. Call up the two-channel IBP waveform (see the figure below):



Fig 16-1Two-channel IBP Monitoring Interface

16.2 Instructions on IBP Monitoring

∕!∆ Warning

- Use the accessories compliant with the safety requirements on medical equipment only.
- Do not touch the metal parts connected to electrical equipment when connecting or using any accessory.
- In order not to cause burns (resulted from electric leakage) to the patient, please do not allow its sensors and sensor cables to contact such equipment when connecting the Monitor to any high-frequency electrosurgical equipment.
- Never reuse the disposable pressure sensor.
- Before monitoring the patient, please check if the sensor cable works properly. Remove the IBP sensor cable from the sensor interface, and the Monitor will display the prompt message "IBP sensor off" and trigger the alarm sound.
- If any liquid other than the solution used for the perfusion pressure tube or sensor splashes onto the Monitor or its accessories, especially when it is likely to flow into the Monitor or its sensors, please contact the maintenance department of the hospital.

//_Note

• Use the pressure sensor specified herein only.

With the protection against electric shock and against the effects of defibrillators, the pressure sensor specified herein can be used for surgical operations. The pressure waves may become disordered in the defibrillation

process. Once the defibrillation is completed, the Monitor will go back to normal work with its operation mode and user configurations remaining unaffected.

'<u>|</u> Note

- Calibrate the sensor, whether new or used, regularly according to the relevant procedures of the hospital.
- Zero the transducer before monitoring the patient. In the IBP monitoring process, keep the pressure sensor at the same level as the patient's heart. In order not to clog the cannula, irrigate the cannula with continuously fed heparin saline to keep the pressure measurement path unobstructed. Secure the cannula reliably against displacement and disconnection and ensure normal IBP measurement.

16.3 Monitoring Steps

Preparations for measurement:

- Prepare the pressure tube and sensor by filling the cannula system with the physiological saline solution. Make sure there is no bubble in the cannula system.
- Connect the patient cannula to the pressure tube. Make sure there is no air in the cannula, pressure tube or sensor.
- 3) Insert the cable into the relevant socket and check if the Monitor is powered on.
- 4) Enter [User Maintain] and activate the IBP sensor.
- 5) Enter the general interface of the Monitor and select[Screen Layout] to call up the IBP waveform and parameter to be monitored (skip this step if the IBP waveform and parameter are already displayed on the screen).
- 6) Place the sensor at the same level as the heart (approximately at the mid-axillary line).
- 7) Zero the sensor and then close its atmosphere channel and open its patient channel.

Warning

If there is any bubble in the pressure tube or sensor, use the heparin saline to irrigate the system. Bubbles will lead to inaccurate measurement results.





16.3.1 Zero the Pressure Sensor

To prevent inaccurate measurement, please zero the sensor on a daily basis or as required by the relevant policies of the hospital. Zero the sensor:

- When using a new pressure tube or sensor;
- When connecting the sensor to the Monitor; or
- If you doubt that the measurement results are inaccurate.
 - 1) Close the valve of the three-way cock to patient.
 - 2) The sensor must be open to the atmosphere first.
 - 3) Select the IBP parameter area (either displayed channel) to enter [IBP Setup] and select [Zero] (the zeroing result will be displayed when the zeroing operation is completed). You can also select [IBP Zero] (shortcut key) in the lower menu bar to zero the sensor.
 - 4) Once the sensor is zeroed successfully, close its atmosphere channel and open its patient channel.

16.4 IBP Setup

Select [IBPx: XXX] in the waveform area: "x" refers to the IBP channel and "XXX" refers to the current pressure name of such channel. Select [IBPx: XXX] to set channel x.

16.4.1 Pressure Name

Pressure Name	Description	
ART	Arterial pressure	
РА	Pulmonary artery pressure	
CVP	Central venous pressure	
RAP	Right atrial pressure	
LAP	Left atrial pressure	
ICP	Intracranial pressure	
P1/P2	Expansion pressure	
LV	Left ventricular pressure	
Ао	Aortic pressure	
UAP	Umbilical artery pressure	
ВАР	Brachial artery pressure	
FAP	Femoral artery pressure	
UVP	Umbilical venous pressure	
IAP	Intra-abdominal pressure	
P3/P4	Expansion pressure	

Enter [Screen Config] to change the pressure name (select an appropriate pressure name from the table below).

16.4.2 IBP Superposition

Follow the steps below to enable the Monitor to display a two-parameter waveform in the IBP waveform area:

- 1) Enter [Main Menu] \rightarrow [Screen Config] \rightarrow [Screen Layout].
- 2) Select [IBP Waveform] and then select the two monitored IBP parameters.

16.4.3 Filter Mode

- The two channels of the sensor use the same filter mode. Select the waveform of either channel to enter [IBPx: XXX Waveform] and then set [Filter Mode] to [No Filter], [Smooth] or [Normal].
 - > No Filter: display the original waveform without filtering it.
 - Smooth: obtain a smooth waveform.
 - ▶ Normal: obtain a relatively smooth waveform.

16.4.4 Pressure Scale

You can adjust the waveform's coverage (IBP measurement range) on the screen by adjusting the upper scale and lower scale. The IBP waveform area indicates the waveform scale. The top and bottom of each IBP waveform represent the upper scale and lower scale of such waveform respectively. You can set the upper scale and lower scale. As a non-selectable parameter, the middle scale depends on the upper scale and lower scale.

- Select [IBPx: XXX] in the waveform area to enter [IBPx: XXX Waveform]. Select an appropriate range for [Upper Scale] and [Lower Scale] respectively.
- 2) You can set the scale range for the pressure names on both channels:
- ♦ Upper Scale: the pressure value corresponding to the upper scale limit (selectable range: the measurement range of the current pressure name).
- ☆ Lower Scale: the pressure value corresponding to the lower scale limit (selectable range: the measurement range of the current pressure name).
- Middle Scale: the pressure value corresponding to the middle scale limit (selectable range: depend on the range selected for [Upper Scale] and [Lower Scale]).

16.5 Pressure Unit

- 1. Enter [User Maintain] \rightarrow [Unit Setup].
- 2. Set [Press. Unit] and [cvp Unit].

16.6 SPVand PPV Display

Select [IBPx: XXX] (artery pressure) in the parameter area to enter [IBPx: XXX Setup]. Select [SPV Display] to switch to [On], then the SPV and PPV measured values are displayed in parameter area.

17.1 Overview

The Monitor uses the CO_2 measurement to monitor the patient's breath state and control his/her ventilation. There are two methods of measuring the CO_2 in the patient's airway:

- Sidestream measurement method: take samples from the respiratory gas sensor in the patient's airway at a constant flow rate and use the built-in remote CO₂ sensor in the measurement system to analyze them.
- Mainstream measurement method: install the CO₂ sensor onto the airway connector inserted directly into the respiratory system of the patient.

In the above two cases, the measurement principle is IR emission. Use the optical detector to measure the intensity of the infrared rays penetrating the respiratory system. Such intensity depends on the CO_2 concentration as some infrared rays will be absorbed by CO_2 molecules.

The CO₂ measurement involves the following parameters (see the figure below):

- ♦ CO_2 waveform (1)
- \diamond End-tidal CO₂ (EtCO₂): the maximum partial pressure of CO2 at the end of a breath. (2)
- \diamond EtCO₂ alarm limit ③
- \diamond Fraction of inspiratory CO₂ (FiCO₂): the minimum CO₂ value during inspiration ④
- \diamond Airway respiration rate (AWRR): the respirations per minute calculated from the CO₂ waveform (5)
- ♦ Measurement unit ⑥

[∠] Note

- Do not use the Monitor in an environment with any flammable anesthetic gas.
- Only the trained professionals familiar with this Manual are allowed to operate the Monitor.



17.2 CO₂ Sensor Connection

17.2.1 Preparations for Mainstream CO₂ Sensor Connection

- 1) Connect the mainstream sensor to the CO₂ interface of the Monitor.
- Wait for 10s (Masimo sensor) or 2min (Respironics sensor) until the sensor reaches its working temperature and a stable thermal state.
- Connect the relevant airway adapter to the sensor head and make sure they engage with each other in place.
- 4) Zero the sensor.
- 5) Expose the sensor to the room air and keep it away from all CO₂ sources, like respirator, patient respirations and user respirations.
- 6) Select the CO₂ parameter area to enter $[CO_2 \text{ Setup}] \rightarrow [\text{Zero}]$.
- 7) Install the airway adapter onto the proximal end of the respiration circuit, exactly speaking, between the elbow and the Y-shaped tube of the respirator as shown in the figure below.



Fig 17-2Mainstream CO₂ Connection

17.2.2 Preparations for Sidestream CO₂ Sensor Connection

- 1) Connect the sensor cable to the CO_2 interface of the Monitor.
- Wait for 10s (Masimo sensor) or 2min (Respironics sensor) until the sensor reaches its working temperature and a stable thermal state.
- 3) Connect the cannula, airway adapter or sampling tube (as the case may be) to the sensor reliably until



Fig 17-3Respironics Sidestream CO2 Connection Diagram



Fig 17-4Masimo CO₂ Connection Diagram for ISATM Sidestream Analyzer

4) Use the airway adapter for the patient with tracheal cannula: install the airway adapter onto the proximal end of the respiration circuit, exactly speaking, between the elbow and the Y-shaped tube of the respirator.



Fig 17-5Connection of Airway Adapter

5) Wear the nasal cannula for the patient without tracheal cannula: wear the nasal or oral-nasal O_2 cannula onto the patient's face, connect the O_2 supply tube to the O_2 supply system and set the O_2 flow as directed.

🗥 Warning

- Check the airway adapter before use. Replace it if the airway adapter suffers from any exterior damage or breakage.
- Turn it off when the CO2 sensor is idle, or it will remain in working state and its service life will be shortened.

17.3 Measurement Steps for Respironics Mainstream and Sidestream Analyzer

The Respironics sidestream analyzer and Respironics mainstream analyzer have almost the same measurement steps. Please follow the measurement steps for Respironics sidestream analyzer to operate the Respironics mainstream analyzer.

- 1) Follow Section 17.2 to connect the CO_2 sensor based on the CO_2 sensor type.
- Select [Screen Layout] to call up the CO₂ waveform and parameter to be monitored (skip this step if the CO₂ waveform and parameter are already displayed on the screen).
- 3) Set [O₂ Compensate] in [CO₂ Setup] to [21] (in order to activate the value of [O₂ Compensate], never skip this step even if [21] is already selected).
- Set [Balance Gas] in [CO₂ Setup] to [Room Air], [N₂O] or [Helium] (select [Room Air] if there is no N₂O or helium in the room).
- 5) Set [Altitude] in [CO₂ Setup] to 0~5120.6m (default: 0m), depending on the local altitude. When the CO₂ value is too high or too low, follow Table 17-1 to select the relevant barometric pressure based on the local altitude (the barometric pressure changes with the altitude).

Altitude		Barometric Pressure	5% CO ₂
Feet	Meters	mmHg	EtCO ₂ mmhg
Sea Level (0)	Sea Level (0)	760	38
500	152.4	745	37
750	228.6	738	37
1,000	304.8	731	37
1,500	457.2	717	36

Barometric Pressure Conversion Table – EtCO2 Data Based on Altitude

2,500762690353,000914.9677343,5001066.8665334,0001219.2652334,5001371.6640325,0001524628315,5001676.4616316,0001828.8604306,5001981.2593307,0002133.6581297,5002286570298,0002438.4560288,5002590.8549279,0002743.25392710,00030485182611,5003200.45092511,5003505.24902412,50038104712413,0003962.44622314,0004267.24452214,5004419.64372214,50045724282115,5004724.44202116,6005029.24052016,8005120.640020	2,000	609.6	704	35
3,000 914.9 677 34 3,500 1066.8 665 33 4,000 1219.2 652 33 4,500 1371.6 640 32 5,000 1524 628 31 5,500 1676.4 616 31 6,000 1828.8 604 30 6,500 1981.2 593 30 7,000 2133.6 581 29 7,500 2286 570 29 8,000 2438.4 560 28 8,500 2590.8 549 27 9,000 2743.2 539 27 10,000 3048 518 26 11,000 3352.8 499 25 11,000 3505.2 490 24 12,000 3657.6 480 24 13,000 3962.4 462 23 14,000 4267.2 445 22	2,500	762	690	35
3,500 1066.8 665 33 4,000 1219.2 652 33 4,500 1371.6 640 32 5,000 1524 628 31 5,500 1676.4 616 31 6,000 1828.8 604 30 6,500 1981.2 593 30 7,000 2133.6 581 29 7,500 2286 570 29 8,000 2438.4 560 28 8,500 2590.8 549 27 9,000 2743.2 539 27 10,000 3048 518 26 10,500 3200.4 509 25 11,000 3352.8 499 25 11,500 3505.2 490 24 12,000 3657.6 480 24 12,500 3810 471 24 13,000 3962.4 462 23	3,000	914.9	677	34
4,000 1219.2 652 33 4,500 1371.6 640 32 5,000 1524 628 31 5,500 1676.4 616 31 6,000 1828.8 604 30 6,500 1981.2 593 30 7,000 2133.6 581 29 7,500 2286 570 29 8,000 2438.4 560 28 8,500 2590.8 549 27 9,000 2743.2 539 27 10,000 3048 518 26 10,500 3200.4 509 25 11,000 3352.8 499 25 11,500 3505.2 490 24 12,000 3657.6 480 24 12,000 3657.6 480 24 12,500 3810 471 24 13,000 3962.4 462 23	3,500	1066.8	665	33
4,500 1371.6 640 32 5,000 1524 628 31 5,500 1676.4 616 31 6,000 1828.8 604 30 6,500 1981.2 593 30 7,000 2133.6 581 29 7,500 2286 570 29 8,000 2438.4 560 28 8,500 2590.8 549 27 9,000 2743.2 539 27 10,000 3048 518 26 10,500 320.4 509 25 11,000 3352.8 499 25 11,500 3505.2 490 24 12,000 3657.6 480 24 12,000 3657.6 480 24 13,000 3962.4 462 23 13,500 4114.8 454 23 14,000 4267.2 445 22 1	4,000	1219.2	652	33
5,0001524628315,5001676.4616316,0001828.8604306,5001981.2593307,0002133.6581297,5002286570298,0002438.4560288,5002590.8549279,0002743.25392710,00030485182610,5003200.45092511,0003352.84992511,5003505.24902412,0003657.64802413,0003962.44622314,0004267.24452214,5004419.64372215,00045724282115,00045724052016,8005120.640020	4,500	1371.6	640	32
5,5001676.4616316,0001828.8604306,5001981.2593307,0002133.6581297,5002286570298,0002438.4560288,5002590.8549279,0002743.25392710,00030485182610,5003200.45092511,0003352.84992511,5003505.24902412,0003657.64802412,50038104712413,0003962.44622314,0004267.24452214,5004419.64372215,5004724.44202116,0004876.84122116,5005029.24052016,8005120.640020	5,000	1524	628	31
6,0001828.8604306,5001981.2593307,0002133.6581297,5002286570298,0002438.4560288,5002590.8549279,0002743.25392710,00030485182610,5003200.45092511,0003352.84992511,5003505.24902412,0003657.64802412,50038104712413,0003962.44622314,0004267.24452214,5004419.64372215,5004724.44202116,0004876.84122116,5005029.24052016,8005120.640020	5,500	1676.4	616	31
6,5001981.2593307,0002133.6581297,5002286570298,0002438.4560288,5002590.8549279,0002743.25392710,00030485182610,5003200.45092511,0003352.84992511,5003505.24902412,0003657.64802412,50038104712413,0003962.44622314,0004267.24452214,5004419.64372215,5004724.44202116,0004876.84122116,5005029.24052016,8005120.640020	6,000	1828.8	604	30
7,0002133.6581297,5002286570298,0002438.4560288,5002590.8549279,0002743.25392710,00030485182610,5003200.45092511,0003352.84992511,5003505.24902412,0003657.64802413,0003962.44622314,0004267.24452214,5004419.64372215,5004724.44202116,0004876.84122116,8005120.640020	6,500	1981.2	593	30
7,5002286570298,0002438.4560288,5002590.8549279,0002743.25392710,00030485182610,5003200.45092511,0003352.84992511,5003505.24902412,0003657.64802413,0003962.44622314,0004267.24452214,5004419.64372215,5004724.44202116,0004876.84122116,8005120.640020	7,000	2133.6	581	29
8,0002438.4560288,5002590.8549279,0002743.25392710,00030485182610,5003200.45092511,0003352.84992511,5003505.24902412,0003657.64802413,0003962.44622313,5004114.84542314,0004267.24452214,5004419.64372215,5004724.44202116,0004876.84122116,8005120.640020	7,500	2286	570	29
8,5002590.8549279,0002743.25392710,00030485182610,5003200.45092511,0003352.84992511,5003505.24902412,0003657.64802412,50038104712413,0003962.44622314,0004267.24452214,5004419.64372215,00045724282115,5004724.44202116,5005029.24052016,8005120.640020	8,000	2438.4	560	28
9,0002743.25392710,00030485182610,5003200.45092511,0003352.84992511,5003505.24902412,0003657.64802412,50038104712413,0003962.44622314,5004114.84542314,500457.24452215,50045724282115,5004724.44202116,6005029.24052016,8005120.640020	8,500	2590.8	549	27
10,00030485182610,5003200.45092511,0003352.84992511,5003505.24902412,0003657.64802412,50038104712413,0003962.44622313,5004114.84542314,0004267.24452215,00045724282115,5004724.44202116,0004876.84122116,8005120.640020	9,000	2743.2	539	27
10,5003200.45092511,0003352.84992511,5003505.24902412,0003657.64802412,50038104712413,0003962.44622313,5004114.84542314,0004267.24452214,5004419.64372215,00045724282115,5004724.44202116,0005029.24052016,8005120.640020	10,000	3048	518	26
11,0003352.84992511,5003505.24902412,0003657.64802412,50038104712413,0003962.44622313,5004114.84542314,0004267.24452214,5004419.64372215,00045724282115,5004724.44202116,0004876.84122116,8005120.640020	10,500	3200.4	509	25
11,5003505.24902412,0003657.64802412,50038104712413,0003962.44622313,5004114.84542314,0004267.24452214,5004419.64372215,00045724282115,5004724.44202116,0004876.84122116,5005029.24052016,8005120.640020	11,000	3352.8	499	25
12,0003657.64802412,50038104712413,0003962.44622313,5004114.84542314,0004267.24452214,5004419.64372215,00045724282115,5004724.44202116,0004876.84122116,5005029.24052016,8005120.640020	11,500	3505.2	490	24
12,50038104712413,0003962.44622313,5004114.84542314,0004267.24452214,5004419.64372215,00045724282115,5004724.44202116,0004876.84122116,5005029.24052016,8005120.640020	12,000	3657.6	480	24
13,0003962.44622313,5004114.84542314,0004267.24452214,5004419.64372215,00045724282115,5004724.44202116,0004876.84122116,5005029.24052016,8005120.640020	12,500	3810	471	24
13,5004114.84542314,0004267.24452214,5004419.64372215,00045724282115,5004724.44202116,0004876.84122116,5005029.24052016,8005120.640020	13,000	3962.4	462	23
14,0004267.24452214,5004419.64372215,00045724282115,5004724.44202116,0004876.84122116,5005029.24052016,8005120.640020	13,500	4114.8	454	23
14,5004419.64372215,00045724282115,5004724.44202116,0004876.84122116,5005029.24052016,8005120.640020	14,000	4267.2	445	22
15,00045724282115,5004724.44202116,0004876.84122116,5005029.24052016,8005120.640020	14,500	4419.6	437	22
15,500 4724.4 420 21 16,000 4876.8 412 21 16,500 5029.2 405 20 16,800 5120.6 400 20	15,000	4572	428	21
16,000 4876.8 412 21 16,500 5029.2 405 20 16,800 5120.6 400 20	15,500	4724.4	420	21
16,5005029.24052016,8005120.640020	16,000	4876.8	412	21
16,800 5120.6 400 20	16,500	5029.2	405	20
	16,800	5120.6	400	20

Table 17-1

Note: it is assumed that the barometric pressure and temperature at the sea level are respectively 760mmHg and 0° C (the altitude-based ambient temperature is 0° C).

🗥 Warning

The Monitor has no auto barometric compensation function. Please set the correct altitude before using the CO_2 measurement function for the first time. Incorrect altitude will cause incorrect CO_2 reading (5% CO_2 error per 1,000m altitude difference).

6) Select [Zero] in [CO₂ Setup], and the prompt message "Zeroing, please wait 30s" will appear at the lower right corner of the interface. Do not start the CO₂ measurement until such prompt message disappears.

17.4 Measurement Steps for Masimo Mainstream and Sidestream Analyzer

The Masimo sidestream analyzer and Masimo mainstream analyzer have almost the same measurement steps. Please follow the measurement steps for Masimo sidestream analyzer to operate the Masimo mainstream analyzer.

17.4.1 Measurement Steps

Follow the steps below to set the Monitor for gas analysis purpose:

- 1) Follow Section 17.2 to connect the CO_2 sensor based on the CO_2 sensor type.
- 2) Connect the Nomoline sampling tube to the input interface of the ISA analyzer (CO_2 sensor).
- 3) Connect the interface cable of the ISA analyzer to the CO_2 interface of the Monitor.
- 4) Enter [User Maintain] and activate the CO₂ sensor.
- 5) Enter the general interface of the Monitor and select [Screen Layout] to call up the CO₂ waveform and parameter to be monitored (skip this step if the CO₂ waveform and parameter are already displayed on the screen).
- 6) Set an appropriate value for $[O_2 \text{ Compensate}]$ and $[N_2 O \text{ Compensate}]$.
- 7) Connect the gas sample outlet to the exhaust system or make the gas flow back to the patient circuit.
- 8) The green LED indicates that the ISA analyzer is ready for use.
- 9) Follow *Section 17.4.2* to perform the checks before use.
- 10) Start the CO_2 monitoring in case of normal check results.

17.4.2 Checks before Use

Perform the following operations before connecting the Nomoline sampling tube to the respiration circuit:

- 1) Connect the sampling tube to the gas inlet of the ISA CO_2 sensor.
- 2) Check if the LED remains green stably (an indication of normal system).
- 3) Expire into the sampling tube and check if the Monitor displays the effective CO_2 waveform and value.

- 4) Block the sampling tube with a fingertip and wait 10s.
- 5) Check if the prompt message "Sampling line clogged" appears and the LED flashes in red.
- 6) Check the tightness of the patient circuit connected to the sampling tube when appropriate.

∐ Note

• In order to prevent the condensed water dropping into the gas sampling tube and blocking it, the gas sampling tube connection end of the airway adapter should point up.

Warning

- Hang the external CO₂ analyzer onto the CO₂ sensor holder on the back housing of the Monitor reliably against falling and damage.
- Place the IRMA sensor, if not protected by HME, with the status LED pointing up.
- Do not stretch the cable of the ISA sidestream gas analyzer.
- Operate the ISA sidestream gas analyzer in the specified working temperature environment only.
- Make sure all connections are firm and reliable. Any leakage will cause the respiratory gas of the patient to include the ambient air, resulting in incorrect readings.

17.5 CO₂ Setup

17.5.1 Work Mode

Follow the steps below to set its work mode after connecting the CO_2 sensor to the Monitor. Turn off the CO_2 sensor for service life protection purpose once the CO_2 measurement is stopped.

- 1) Select the CO₂ parameter area to enter $[CO_2 \text{ Setup}] \rightarrow [Work Mode].$
- 2) Select [Standby] or [Measure].

17.5.2 Pressure Unit

Enter [User Maintain] to set [Press. Unit].

17.5.3 Gas Compensation

1) Select the CO₂ parameter area to enter [CO₂ Setup].

- ♦ Masimo CO₂ sensor:
 - ♦ Select $[O_2 \text{ Compensate}] \rightarrow [\text{High}], [\text{Med}] \text{ or } [\text{Low}].$
 - ♦ Select [N₂O Compensate] \rightarrow [On] or [Off].
- Respironics CO₂ sensor:
 - ♦ Select $[O_2 \text{ Compensate}] \rightarrow \text{set the } O_2 \text{ compensation value.}$

🗥 Warning

• Please set [O₂ Compensate] and [N2O Compensate] based on the actual conditions, or the measurement results may differ greatly from the actual values to cause misdiagnosis.

17.5.4 No Breath Alarm Delay

No-breath detection is to detect the longest interval between two adjacent RESPs. When the actual no-breath time of the patient exceeds the set no-breath time, the Monitor will respond to no-breath alarms according to the value of [No Breath Alm Delay].

Set [No Breaths Timeout]:

Select the CO₂ parameter area to enter [CO₂ Setup] → [No Breaths Timeout] and set an appropriate detection time.

Set [No Breath Alm Delay]:

- 1) Enter [User Maintain] \rightarrow [Other Setup].
- Set [No Breath Alm Delay] to [Close], [10s], [15s], [20s], [25s], [30s], [35s], [40s], [45s], [50s], [55s] or [1min].

If you select [Close], the alarm delay function will be disabled. The Monitor will respond to no-breath alarms (if any) immediately.

17.5.5 Altitude

For Masimo CO₂sensor, there is no need to set the altitude.

For Respironics CO₂ sensor:

- 1) Select the CO₂ parameter area to enter [CO₂ Setup] \rightarrow [Altitude Unit].
- 2) Select the CO₂ parameter area to enter $[CO_2 \text{ Setup}] \rightarrow [\text{Altitude}].$
- Set an altitude value, and the Monitor will auto set [Baro. Pressure] (Barometric Pressure) based on the altitude value.
17.5.6 Balance Gas

Only the Respironics CO_2 sensor requires you to set the balance gas manually (for Masimo CO_2 sensor, the balance gas is auto set).

- 1) Select the CO₂ parameter area to enter $[CO_2 \text{ Setup}] \rightarrow [Balance \text{ Gas}].$
- 2) Select [Room Air], [N₂O] or [Helium].

17.5.7 Waveform Scale

If you adjust the scale value, the waveform amplitude will change accordingly.

Select the CO₂ waveform area to enter [Waveform Setup] \rightarrow [Scale].

17.6 Maintenance and Cleaning of Respironics Mainstream and Sidestream

CO₂ Sensor

17.6.1 General Cleaning

Dip a cloth in 70% isopropyl alcohol, water solution (bleach) containing 10% sodium hypochlorite, disinfecting spray cleaner (like Steris Coverage SprayHB), ammonia water or mild soapy water, wash it with water, wring it and then use it to clean the sensor. Dry it and make sure its sight glass is clean before using the cleaned sensor.

17.6.2 Clean the Reusable Airway Adapter of Mainstream Sensor

Wash the airway adapter with mild soapy water, dip it in the disinfectant, like 70% isopropyl alcohol, water solution (bleach) containing 10% sodium hypochlorite, 2.4% glutaraldehyde solvent (Cidex Plus, Steris System 1, etc.) or ammonia water, and then rinse it with sterile water and dry it.

17.6.3 Disinfection of Reusable Airway Adapter

Autoclave: applicable to the airway adapter for horse only.

ETO: disinfect the airway adapter for 1.5h.

Dip in Cidex Plus solvent for 10h.

Dip in Perasafe solvent for 10h.

U.S. Steris System 1 low-temperature sterilization cabinet.

Make sure it is not damaged in operations or in the cleaning/disinfection process and its sight glass is dry without any residue before using the disinfected airway adapter.

17.6.4 Disinfection Frequency of Reusable Airway Adapter

The above disinfection methods allow you to reuse the airway adapter for 100 times.

17.6.5 Zeroing

Usually, the CO_2 sensor will be auto zeroed when necessary. You can zero it manually when you consider it necessary: select $[CO_2]$ in the parameter area to enter $[CO_2 \text{ Setup}]$ and then select [Zero] to zero the CO_2 sensor. Keep the patient circuit in the ambient air (21% O_2 and 0% CO_2) for 30s in the zeroing process. The CO_2 sensor is zeroed successfully when the prompt message "Zeroing, please wait 30s" disappears.

17.7 Masimo Mainstream and Sidestream Module Related Information

17.7.1 Zeroing

In order to eliminate the effect of the baseline drift on measurement results and obtain accurate measurement results, please zero it before using the CO_2 sensor to monitor the patient.

Usually, the CO_2 sensor will be auto zeroed when necessary. You can zero it manually when you consider it necessary: select $[CO_2]$ in the parameter area to enter $[CO_2 \text{ Setup}]$ and then select [Zero] to zero the CO_2 sensor. Keep the patient circuit in the ambient air (21% O_2 and 0% CO_2) in the zeroing process. The CO_2 sensor is zeroed successfully when the prompt message " CO_2 is zeroing" disappears.

17.7.1.1 Zeroing ISA CO2 Module

The ISA CO_2 Module needs to establish a zero reference level for the CO_2 measurement. This zero calibration is here referred to as "Zeroing".

The ISA sidestream gas Module performs zeroing automatically by switching the gas sampling from the respiratory circuit to the ambient air. The automatic zeroing is performed every 24 hours and takes less than 3 seconds for ISA CO_2 gas module.

Warning

Since successful zeroing requires the presence of ambient air in the gas module, ensure that the ISA is placed in a well ventilated place. Avoid breathing near the ISA sidestream gas module before or during the zeroing procedure.

17.7.1.2 Zeroing IRMA CO₂ Module

In order to secure high precision of the IRMA probe measurements the following zeroing recommendations should be followed.

Zeroing is performed by snapping a new IRMA airway adapter onto the IRMA probe, without connecting the airway adapter to the patient circuit, and then using the medical backboard device to transmit a Zero reference command to the IRMA probe.

Special care should be taken to avoid breathing near the airway adapter before or during the Zeroing procedure. The presence of ambient air in the IRMA airway adapter is of crucial importance for a successful Zeroing. If a "CO₂ Need Zero" alarm should appear directly after a Zeroing procedure, the procedure has to be repeated.

Always perform a pre-use check after Zeroing the probe.

IRMA CO₂ probes:

Zeroing needs to be performed ONLY when an offset in gas values is observed, or when an unspecified accuracy message is displayed.

Allow 10 seconds for warm up of the IRMA CO₂ probes after power on before proceeding with the Zeroing Procedure.

Allow the IRMA probe to warm up for at least 10 seconds after changing the IRMA airway adapter before transmitting the Zero reference command.

Warning

Incorrect probe Zeroing will result in false gas readings.

17.7.1.3 Maintenance

Verify the gas readings regularly. Contact the engineers from the manufacturer for maintenance in case of any inaccurate reading.

17.7.1.4 CO₂ Sensor LED

LED indications:

Indication	Status
Steady green light	System OK
Blinking green light	Zeroing in progress
Steady red light	Sensor error
Blinking red light	Check adapter

17.7.2 Adverse Effects on Performance

- 1) The following factors have the known adverse effects on the specified performance:
 - Quantitative effects of RH or condensation;
 - Quantitative effects of barometric pressure;
 - Interfering gas or water vapor; and
 - Other interference sources.
- 2) Gas Measurement Unit

Use volume percentage as the gas concentration unit. Below is the concentration calculation formula:

$$\% gas = \frac{Partial \ pressure \ of \ gas \ component}{Total \ pressure \ of \ gas \ mixture} * 100$$

Use the cup-making pressure sensor of the ISA gas analyzer to measure the total pressure of the gas mixture. To convert into any other unit, you can use the actual barometric pressure sent from the ISA sidestream (IRMA mainstream).

 CO_2 (mmHg) = (CO_2 Concentration) x (Barometric Pressure from ISA (kPa)) x (750 / 100).

Take 5.0 vol% CO₂ @ 101.3kPa as an example: $0.05 \times 101.3 \times 750 / 100 = 38$ (mmHg).

3) Effects of RH

The partial pressure and volume percentage of the CO₂, N₂O, O₂ and anesthetic gas depend on the water vapor content in the measured gas. Calibrate the O₂ measurement, and the displayed value at the ambient temperature and RH level will be 20.8 vol%, not the actual partial pressure. The 20.8 vol% O₂ represents the actual O₂ concentration of the room air (water concentration: 0.7 vol%) (for example, 25 °C and 23% RH @ 1013hPa). The Monitor will keep displaying the actual partial pressure at the current RH level when measuring the CO₂, N₂O and anesthetic gas (like all gases measured by infrared cell).

In the patient's alveoli, the water vapor in the respiratory gas is saturated (BTPS) at the body temperature.

Before the acquired respiratory gas in the sampling tube is transferred to the ISA sidestream gas analyzer, its temperature becomes approximate to the ambient temperature. No water will enter the ISA gas analyzer after the Nomoline sampling tube removes all condensed water. The RH of the acquired gas is approximately 95%. Use the following formula to calculate the CO₂ value at BTPS:

$$EtCO2(BTPS) = EtCO2 * \left(1 - \left(\frac{3.8}{Pamb}\right)\right)$$

In the above formula:

EtCO2 : EtCO2 value [vol%] sent from ISA

Pamb : barometric pressure [kPa] sent from ISA

3.8 : typical partial pressure [kPa] of the water vapor condensed between the patient circuit and ISA

EtCO2 (BTPS) = EtCO2 concentration [vol%] at BTPS

It is assumed that the O2 is calibrated by the room air at 0.7 vol% H2O (RH).

17.7.3 Safety Alarm Information

17.7.3.1 ISA Sidestream Gas Analyzer Safety Warning Information

Λ	Warning
•	The ISA sidestream gas analyzer is intended for use by authorized healthcare professionals
	only.
•	Carefully route the sampling line to reduce the risk of patient entanglement or strangulation.
•	Do not lift the ISA gas analyzer by the sampling line as it could disconnect from the ISA,
	causing the ISA gas analyzer to fall on the patient.
•	Dispose Nomoline Family sampling lines in accordance with local regulations for biohazardous waste.
•	Use only airway T-adapters with the sampling point in the center of the adapter.
•	Do only use sample lines intended for anesthetic agents if N ₂ O and/or anesthetic agents are
	being used.
•	Do not use T-adapter with infants, as this adds 7 ml dead space to the patient circuit.
•	Do not use the ISA gas analyzer with metered-dose inhalers or nebulized medications as this
	may clog the bacteria filter.
•	Since a successful zeroing requires the presence of ambient air (21% O ₂ and 0% CO ₂), ensure
	that the ISA is placed in a well ventilated place. Avoid breathing near the ISA sidestream gas
	analyzer before or during the zeroing procedure.
•	Never sterilize or immerse the ISA sidestream gas analyzer in liquid.
•	The ISA sidestream gas analyzer is intended only as an adjunct in patient assessment. It must
	be used in conjunction with other assessments of clinical signs and symptoms.
•	Measurements can be affected by mobile and portable RF communications equipment. Make
	sure that the ISA sidestream gas analyzer is used in the electromagnetic environment specified
	in this manual.
•	Replace the sampling line if the sampling line input connector starts flashing red, or the medical
	backboard device displays a "Check sampling line" message.
•	No modification of this equipment is allowed without authorization of the manufacturer. If this
	equipment is modified, appropriate inspection and testing must be conducted to ensure
	continued safe operation.
•	The ISA sidestream gas analyzers are not designed for MRI environments.
•	During MRI scanning, ISA must be placed outside the MRI suite.
•	Use of high frequency electrosurgical equipment in the vicinity of the ISA/medical backboard
L	device may produce interference and cause incorrect measurements.

A Caution

- The ISA analyzers should be securely mounted in order to avoid the risk of damage to the ISA.
- Do not operate the ISA sidestream gas analyzer outside the specified operating environment.
- (US Only) Caution: Federal law restricts this device to sale by or on the order of a physician.
- For professional use. See instructions for use for full prescribing information, including indications, contraindications, warnings, precautions and adverse events.

17.7.3.2 IRMA Mainstream Gas Analyzer Safety Warning Information

Warning

- The IRMA analyzers should be securely mounted in order to avoid the risk of damage to the IRMA.
- Do not operate the IRMA sidestream gas analyzer outside the specified operating environment.
- (US Only) Caution: Federal law restricts this device to sale by or on the order of a physician.
- For professional use. See instructions for use for full prescribing information, including indications, contraindications, warnings, precautions and adverse events.
- The IRMA probe is intended for use by qualified medical personnel only.
- The IRMA probe is intended only as an adjunct in patient assessment. It must be used in conjunction with other assessments of clinical signs and symptoms.
- Disposable IRMA airway adapters shall not be reused. Reuse of the single use adapter can cause cross infection.
- Used airway adapters shall be disposed of in accordance with local regulations for biohazardous waste.
- Do not use the IRMA house/dog airway adapter with infants as the adapter adds 6 ml dead space to the patient circuit.
- Do not use the IRMA Infant airway adapter with horse as this may cause excessive flow resistance.
- Measurements can be affected by mobile and RF communications equipment. It should be assured that the IRMA probe is used in the electromagnetic environment specified in this manual.
- Use of high frequency electrosurgical equipment in the vicinity of IRMA may produce interference and cause incorrect measurements.
- The IRMA probe is not designed for MRI-environments.
- Do not place the IRMA airway adapter between the endotracheal tube and an elbow as this may allow patient secretions to block the adapter windows and result in incorrect operation.

- To keep secretions and moisture from pooling on the windows, always position the IRMA probe in a vertical position with the LED pointing upwards.
- Do not use the IRMA airway adapter with metered dose inhalers or nebulized medications as this may affect the light transmission of the airway adapter windows.
- Incorrect probe zeroing will result in false gas readings.
- Replace the airway adapter if rainout/condensation occurs inside the airway adapter.
- Use only Masimo manufactured IRMA airway adapters.
- The IRMA probe is not intended to be in patient contact.
- If, for whatever the reason, the IRMA probe is in direct contact with any parts of the infant's body an insulation material shall be placed between the IRMA probe and the body.
- No modification of this equipment is allowed.

- Never sterilize or immerse the IRMA probe in liquid.
- The IRMA airway adapters are non-sterile devices. Do not autoclave the devices as this will damage them.
- Do not apply tension to the probe cable.
- Do not operate the IRMA probe outside the specified operating temperature environment.
- (U.S. only) Caution: Federal law restricts this device to sale by or on the order of a physician.
- For professional use. See instructions for use for full prescribing information, including indications, contraindications, warnings, precautions and adverse events.

17.7.4 Airway Obstruction

When the anesthetic gas airway is obstructed, on the screen there will be such a prompt message as "Sampling Line Clogged"; under such a circumstance, replace the Nomoline sampling line.

Warning

• Do not use the ISA gas analyzer together with a quantitative spraying agent or pulverization treatment; otherwise it may result in the clogging of the germ filter.

17.7.5 Discharging Waste Gases

When nitrous oxide and/or an anesthetic gas is used, you should prevent these gases from polluting the operating room. Usually the gas discharging outlet should be connected to (via the gas discharging pipe connected to the sample gas outlet of the host equipment):

A discharging system (used for discharging collected gases) or the patient circuit (used for the back flowing of collected gases)

Warning

• Anesthetics: When an anesthetic which is being used or a patient who recently used an anesthetic is measured, the gas discharging hole on the module must be connected to a waste gas processing system or the patient circuit (on the anesthesia machine or the respirator), so as to prevent medical personnel from inhaling the anesthetic.

17.7.6 Leakage Check

- 1. Connect a new Nomoline sampling line with male Luer lock to the ISA gas inlet connector and check that the gas inlet connector shows a steady green light.
- 2. Connect a short silicon tubing with an inner diameter of 3/32" (2.4 mm) to the Nomoline male Luer.
- Exhale a long breath into the silicon tubing until the CO₂ concentration is greater than 4.5 vol% or 34 mmHg.
- 4. Quickly connect the silicon tubing tightly to the exhaust port.
- 5. Wait 1 minute until the CO_2 concentration has stabilized. Note the value.
- 6. Wait 1 minute and check that the CO₂ concentration has not decreased more than 0.4 vol% or 3 mmHg. If it has decreased more there is a major leakage in the ISA unit or in the Nomoline. Do not operate the ISA if there is a major leakage in the unit.

17.7.7 Safety Symbols

Symbol	Text, Color Code and Text Format	Description
Â	Warning: additional information.	"Warning" indicates the hazardous conditions causing possible personal injuries or death. The warning symbol should comply with ISO 7010-W001.
-ii	User's Manual	Refer to the User's Manual.
REF	Reference No.	
SN	Serial No.	
LOT	Lot No.	
Σ	Valid until [YYYY-MM- DD]	Do not use the Monitor after such date.
X	Temperature limit	

<u>6.9</u>	Pressure limit	
<u>(%)</u>	RH limit	
8	No reuse	
X	WEEE directive	Recycle this electrical and electronic equipment according to 2002/96/EC.
PD	Contain Pb	
IPX4	IP grade	The IP grade indicates the water ingress protection performance.
IP44	IP grade against water and solid object ingress	Protection against tools and short cable ends (>1mm). Protection against water sprays from all directions.
RX	Sold on prescription only	Warning (U.S.): the Monitor shall be sold by medical practitioners or on prescription according to U.S. federal laws.
	CO ₂	The IRMA/ISA analyzer measures CO ₂ only.
CO2	Multiple gases (AX+ or OR+)	The IRMA/ISA analyzer can measure multiple gases.
\leq	Gas inlet	
\Box	Gas (exhaust) outlet	
and a	Connect to patient circuit	Illustrate the connection between Nomoline and patient circuit.
	Connect to ISA	Illustrate the connection between Nomoline and ISA.
NON-STERILE LATEX FREE	Not sterile, latex free	The Monitor is latex free and not sterile.

17.7.8 Patents and Trademarks

(1) Patent Statement

Masimo Sweden AB owns the following patents for relevant products described in this operating instruction manual: SE519766; SE519779; SE523461; SE524086. Other patents are being applied.

(2) Trademark

Masimo IRMATM, Masimo ISATM, Masimo XTPTM, Sigma Multigas TechnologyTM, LEGITM, NomolineTM, IRMA EZ IntegratorTM, Masimo GasMasterTM and ISA MaintenanceMasterTM are trademarks of Masimo Sweden AB.

17.7.9 Consumables

17.7.9.1 ISA Nomoline Family

ISA samples gas from the respiratory circuit through the Nomoline Family sampling line at a rate of 50 sml/min, making measurements of CO_2 possible for horse, dog,cat and others.

The Nomoline Family sampling lines incorporate a unique water separation (NO MOisture) section, which removes condensed water. The NOMO section is also fitted with a bacteria filter that protects the gas analyzer from water intrusion and cross contamination.

As long as no sampling line is connected, the ISA gas analyzer remains in a low-power sleep mode. Once the sampling line is connected, the ISA gas analyzer switches to measuring mode and starts delivering gas data.

The Nomoline Family sampling lines are available in a wide variety of versions for both intubated and spontaneously breathing patients and in both disposable and re-sposable configurations –intubated patients can for instance be monitored using the disposable Nomoline Airway adapter Set or a com-bination of the multiple patient use Nomoline Adapter and a disposable Nomoline Extension / T-adapter. Spontaneously breathing patients could similarly be monitored using a disposable Nomoline Nasal CO2 Cannula or a combination of the multiple patient use Nomoline Adapter and a disposable Nomoline Nasal CO2 Cannula with Luer Connector.



Figure 1.The disposable Nomoline Airway Adapter Set is an alternative to using a combination of the multiple patient use Nomoline Adapter and a disposable Nomoline Extension / T-adapter.

The Nomoline Adapter may be used with other third party sampling lines and cannulas. Please however note that the Nomoline Family of sampling lines are designed for optimal performance and measure-ment fidelity when used with the ISA gas analyzers. For instance, when connecting to a respiratory circuit, the Masimo T-adapter provides a central gas sampling point thereby minimizing the the risk of sampling line occlusion (see below)



Figure 2. For optimal water handling, always use T-adapters with the sampling point in the center of the adapter, as shown to the left above.

Attention

Using sample tubes or cannulas with larger inner diameter than 1 mm will increase ISA's total system response time.

Nomoline Family sampling line replacement

Nomoline Family sampling lines should be replaced according to good clinical practice or when the sampling line gets occluded. Occlusion occurs when water, secretion etc. is aspired from the respiratory circuit to such extent that ISA cannot maintain the normal 50 sml/min sample flow. This situation is indicated by a red flashing gas inlet connector and an alarm message "Sampling Line Clogged"; Replace the Nomoline and wait until the gas inlet connector switches to green indicating that the ISA gas analyzer is ready for use.

17.7.9.2 IRMA Airway Adapter

The IRMA airway adapter is inserted between the endotracheal tube and the Y-piece of the breathing circuit. The respiratory gas measurements are obtained through the XTPTM windows in the sides of the adapter. The XTP windows are transparent to light in the wavelength ranges of interest and they are specially designed using the latest advances in material technology to provide a window minimizing the impact of water vapor on light transmission.

∕Warning ● Replace t

Replace the airway adapter if rainout/condensation occurs inside the airway adapter.

The IRMA airway adapter is designed as a non-sterile single patient use disposable for both horse/dog/cat/others. The IRMA Infant airway adapter has specially designed connectors for minimizing the dead space and can be used even for very small patients.



IRMA airway adapters: horse/dog (REF: 106220) and Infant (REF: 106260)

Warning

- Do not use the IRMA horse/dog airway adapter with infants as the adapter adds 6 ml dead space to the patient circuit.
- Do not use the IRMA cat airway adapter with horse as this may cause excessive flow resistance.

17.7.10 Maintenance

The user should verify gas readings regularly; If finding any problems, please contact an engineer of the manufacturer for maintenance.

17.7.11 Cleaning the Analyzer

The "Plug in and measure" ISA sidestream gas analyzer should be cleaned regularly. Use ethanol or isopropyl alcohol with a maximum concentration of 70% and a wet rag to clean the analyzer..

In order to prevent the cleaning liquid and dust from entering into the ISA gas analyzer from the LEGI interface, the Nomoline sampling line should be connected all the time during analyzer cleaning. Before cleaning the IRMA probe, take off the disposable IRMA airway adapter.

/ Warning

- The Nomoline sampling line is not a germ free device. In order to prevent the sampling line from causing damages, please never carry out high pressure disinfection on any part of the sampling line.
- Never sterilize the ISA sidestream gas analyzer and the IRMA probe or soak them into a liquid.

18.1 Overview

The AG (anesthetic gas) module is used to measure the anesthetic gases and respiratory gases of the patient under anesthesia. It provides the Et value and Fi value of the following gases:

- CO_2 : EtCO₂ (the maximum exhaled CO_2 value detected in the respiration).
- O_2 : oxygen.
- N_2O : nitrous oxide.
- MAC: minimum alveolar concentration (the basic index reflecting the depth of inhalation anesthesia).
- AWRR: breaths per minute.
- AA: Et value and Fi value of Anesthetic Agent.

Halothane: Hal. Isoflurane: Iso. Enflurane: Enf.

Sevoflurane: Sev.

Desflurane: Des.

18.2 AG Measurement Principle

Respiratory gases can be analyzed with multiple measurement principles. The absorption characteristics of the gas sample are usually isolated with the dispersive infrared (DIR) absorption spectrometry or non-dispersive infrared (NDIR) absorption spectrometry. The DIR spectrometry uses a single optical filter and a prism or diffraction grating to separate the wavelength of each anesthetic, while the NDIR spectrometry uses multiple narrow-band filters to filter the infrared rays so as to identify the gases in the gas mixture.

The most commonly used gas analysis method is the medium based on the NDIR spectrometry. Its measurement principle is based on the fact that multiple gases absorb the infrared energy of a specific wavelength.

The sidestream sampling based infrared multi-gas analyzer usually acquires the gas sample continuously at the joint of the respiration circuit and airway device (respirator,tracheal catheter or laryngeal mask airway). The gas sampling rate of such modern gas analyzer is $50 \text{ml/min} \sim 250 \text{ml/min}$. The gas sample goes through the infrared transmitter, optical filter and infrared detector by means of a small cup or sample chamber. The output signal of the infrared detector is proportional to the infrared energy unabsorbed by gases. To quantify and identify multiple gases (N₂O, CO₂ and the five inhalational anesthetic gases) simultaneously, multiple

optical filters are required. The detected signal is amplified and converted by the microprocessor with the complex algorithm. Please note that the infrared spectrometry is not applicable to O_2 measurement. The gas analyzer uses an accessory to measure the O_2 , like paramagnetic O_2 sensor.

18.3 AG Display



Fig 18-1AG Monitoring

The following waveform and parameter values measured by the AG module will be displayed on the screen of the Monitor:

- \diamond CO₂ (AG), O₂, N₂O and AA waveform;
- ♦ AWRR: airway respiration rate;
- ♦ MAC: minimum alveolar concentration;
- \diamond The Et value and Fi value of CO₂ (AG), O₂, N₂O and AA.

"AA" stands for Des, Iso, Enf, Sev or Hal.

When two or more anesthetic gases are detected by the AG analyzer, only the primary anesthetic gas will be displayed in the waveform area. The secondary anesthetic gas will not be displayed. However, the message "Found two AG gas" will appear in the message display area.

🗥 Warning

• To prevent explosion, never use diethyl ether, cyclopropane or any other flammable anesthetic.

/ Note

• The waveform and parameter values of one anesthetic gas will be displayed at a time. When there is a second anesthetic gas, the message "Found two AG gas" will appear in the message display area.

18.4 MAC Calculation

MAC is used to measure the effect of anesthetic gas inhalation. The MAC value represents the concentration (one barometric pressure) of the anesthetic gas in the alveoli, namely, the concentration causing 50% of the measured patients to have no muscular movement response to standard pain stimulation.

If the Monitor is enabled to measure the MAC, the calculation of the MAC value must be recorded in detail. The following formula can be used to calculate (and display) the MAC value from the end-tidal (Et) gas concentration:

> $MAC = \frac{\% Et(AA1)}{X(AA1)} + \frac{\% Et(AA2)}{X(AA2)} + \frac{\% Et(N2O)}{100}$ X(AA): HAL=0.75%, ENF=1.7%, ISO=1.15%, SEV=2.05%, DES=6.0%

For example, if one or more anesthetic gases are used and the Et concentration of Des, Hal and N2O measured by the AG module are respectively 4%, 0.5% and 50%, the MAC value will be:

$$MAC = \frac{4.0\%}{6.0\%} + \frac{0.5\%}{0.75\%} + \frac{50\%}{100\%} = 1.84$$

//_Note

• In the above formula, the altitude, patient's age and other personal factors are not taken into consideration.

18.5 O₂ Sensor

Paramagnetic O₂ Analysis

The principle of paramagnetic O_2 analysis is to measure the attraction of the high-intensity magnetic field to the O2 molecules in the gas mixture. The paramagnetic analyzer differentiates the O_2 from other gases based on their magnetization sensitivity. The O_2 will be attracted by the magnetic field because it is paramagnetic. Most of other gases are not paramagnetic. If we specify a magnetization sensitivity value of 100 for the O_2 , the magnetization sensitivity value of most of other gases will be almost 0.

The Servomex paramagnetic O_2 sensor PM1116 is compatible with the ISA gas analyzer. Such sensor will generate a symmetrical non-uniform magnetic field. If there is any O_2 , the O_2 will be attracted to the most magnetic part of such magnetic field. In such magnetic field, the rotary rack is equipped with two glass balls filled with nitrogen and one mirror (in the middle). The beams of light projected to the mirror will be reflected to a pair of phototubes. The O_2 attracted to the most magnetic part of the magnetic field will drive the glass balls and rotate the rack. The phototubes will generate the relevant signal and transfer it to a feedback system if any rotation is detected. The feedback system will supply current to the cable of the rack, generating a reaction torque to keep the rack in its place. Such current is proportional to the O_2 concentration. To obtain the

O2 concentration value, just measure such current.

The paramagnetic O_2 sensor has the following main advantages:

- \diamond Short rise time;
- \diamond High stability and accuracy;
- \diamond No chemicals replacement or feeding;
- \diamond Almost maintenance free.

18.6 Measurement Steps and Checks before Use

18.6.1 Measurement Steps

Follow the steps below to set the Monitor for gas analysis purpose:

- 1) Connect the Nomoline sampling tube to the input interface of the ISA analyzer (AG module).
- 2) Connect the interface cable of the ISA analyzer to the Monitor.
- 3) Enter [User Maintain] and activate the AG sensor.
- 4) Enter the general interface of the Monitor and select [Screen Layout] to call up the AG waveform and parameters to be monitored (skip this step if the AG waveform and parameters are already displayed on the screen).
- 5) Connect the gas sample outlet to the exhaust system or make the gas flow back to the patient circuit.
- 6) The green LED indicates that the ISA analyzer is ready for use.
- 7) Follow *Section 18.6.2* to perform the checks before use.
- 8) Start the AG monitoring in case of normal check results.



Fig 18-2ISA Sidestream Analyzer Connection Diagram



Fig 18-3IRMATM Mainstream Analyzer Connection Diagram

18.6.2 Checks before Use

Perform the following operations before connecting the Nomoline sampling tube to the respiration circuit:

- 1) Connect the sampling tube to the gas inlet (LEGI) of the ISA AG module.
- 2) Check if the LEGI LED remains green stably (an indication of normal system).
- If the ISA AG module is equipped with an O₂ accessory, check if the reading on the Monitor is correct (21%).
- Expire into the sampling tube and check if the Monitor (or small host) displays the effective CO₂ waveform and value.
- 5) Block the sampling tube with a fingertip and wait 10s.
- 6) Check if the alarm message "Sampling line clogged" appears and the LEGI LED flashes in red.
- 7) Check the tightness of the patient circuit connected to the sampling tube when appropriate.

∕!∖ Warning

- Hang the external AG analyzer onto the AG module holder on the back housing of the Monitor reliably against falling and damage.
- Place the IRMA sensor, if not protected by HME, with the status LED pointing up.
- Do not stretch the cable of the ISA sidestream gas analyzer.
- Operate the ISA sidestream gas analyzer in the specified working temperature environment only.
- Make sure all connections are firm and reliable. Any leakage will cause the respiratory gas of the patient to include the ambient air, resulting in incorrect readings.

//_Note

• To prevent the condensed water dropping into the gas sampling tube and blocking it, the gas sampling tube connection end of the airway adapter should point up.

18.7 AG Setup

Select [AA], [O₂], [N₂O] or [CO₂ (AG)] in the parameter area to enter [AA Setup], [O₂ Setup], [N₂O Setup] or [CO₂ Setup].

18.7.1 Work Mode

- Click the AA, O₂, N₂O or CO₂ (AG) parameter area to enter [AA Setup], [O₂ Setup], [N₂O Setup] or [CO₂ Setup] → [Work Mode].
- 2) Select [Standby] or [Measure].
- [Standby]: in order to protect the AG module's service life, the pneumatic pump will stop working with the message "AG is sleeping" appearing in the message area when the AG module is in standby state.
- [Measure]: in measurement state, the AG module, with its LED remaining green, will send the measured values to the Monitor.

Normally, the AG module will auto enter the [Measure] state once connected to the Monitor. However, you are still required to check if the AG module is in measurement state first.

18.7.2 Gas Compensation

The O_2 sensor will automatically compensate based on the actual concentration of O_2 in patient circuit, so $[O_2$ Compensate] is a default option. If no O_2 sensor is available to provide the O_2 compensation, set the O_2 compensation level manually based on the actual concentration of O_2 in patient circuit.

- Click the CO₂ (AG) parameter area to enter [CO₂ Setup] → [O₂ Compensate] → [High], [Med] (medium) or [Low].
 - [High]: compensate the O_2 by 85%.
 - [Med]: compensate the O_2 by 50%.
 - [Low]: compensate the O_2 by 21%.
- 2) Select [N₂O Compensate] \rightarrow [On] or [Off].
 - \blacksquare [N₂O Compensate]: if you select [On], the AG module will auto compensate the N₂O.

🗥 Warning

• Please set [O₂ Compensate] and [N₂O Compensate] based on the actual conditions, or the measurement results may differ greatly from the actual values to cause misdiagnosis.

18.7.1 Pressure Unit

For N_2O , O_2 and anesthetic gas AA, the unit defaults to %. For the unit of CO_2 (AG), enter [User Maintain] and set the press unit to [mmHg]or[kPa].

18.7.2 No Breath Alarm Delay

No-breath detection is to detect the longest interval between two adjacent breaths. When the actual no-breath time of the patient exceeds the set no-breath time, the Monitor will respond to no-breath alarms according to the value of [No Breath Alm Delay] (no breath alarm delay).

Set [No Breaths Timeout]:

1) Click the CO₂ (AG) parameter area to enter $[CO_2 \text{ Setup}] \rightarrow [No \text{ Breaths Timeout}]$ and set an appropriate detection time.

Set [No Breath Alm Delay]:

- 1) Enter [User Maintain] \rightarrow [Other Setup].
- Set [No Breath Alm Delay] to [Close], [10s], [15s], [20s], [25s], [30s], [35s], [40s], [45s], [50s], [55s] or [1min].
 - If you select [Close], the alarm delay function will be disabled.

18.7.3 Waveform Scale

If you adjust the scale value, the waveform amplitude will change accordingly.

Select the AA, O_2 , N_2O or CO_2 (AG) waveform area to enter [Waveform Setup] \rightarrow [Scale].

18.7.4 Zeroing

To zero the infrared gas analyzer, please determine the zero baseline of CO_2 , N_2O and anesthetic gas measurement.

Auto Zero

The ISA sidestream gas analyzer performs auto zeroing by switching the gas sampling from respiration circuit to ambient air. Auto zeroing (ISA CO₂ analyzer: $\leq 3s$; ISA multi-gas analyzer: $\leq 10s$) is performed every 24 hours. If the ISA sidestream gas analyzer is equipped with an O₂ sensor, auto zeroing also includes the room air calibration for O₂ sensor.

Manual Zero

Click [AA] in the parameter area to enter [AA Setup] \rightarrow [Zero]. Keep the patient circuit in the ambient air (21% O₂ and 0% CO₂) for 30s in the zeroing process. The zeroing operation can be performed when [Zero] is in settable state rather than default state.

Marning

Successful zeroing requires the ambient air (21% O₂ and 0% CO₂), so the ISA gas analyzer should be installed in a well-ventilated place. No respiration is allowed around the ISA gas analyzer before and after the zeroing operation is performed.

18.8 AG Module LED

LED indications:

Indication	Status
Steady green light	System OK
Blinking green light	Zeroing in progress
Steady red light	Sensor error
Blinking red light	Check adapter
Steady blue light	Anesthetic agent present

18.9 Adverse Effects on Performance

Refer to Section 17.7.2 Adverse Effects on Performance.

18.10 Safety Alarm Instructions

Refer to Section 17.7.3 Safety Alarm Instructions.

18.11 Airway Obstruction

Refer to Section 17.7.4 Airway Obstruction.

18.12 Discharging Waste Gases

Refer to Section 17.7.5Discharging Waste Gases.

18.13 Leakage Check

Refer to Section 17.7.6 Leakage Check.

18.14 Safety Symbols

Refer to Section 17.7.7 Safety Symbols.

18.15 Patents and Trademarks

Refer to Section 17.7.8Patents and Trademarks.

18.16 Consumables

Refer to Section 17.7.9 Consumables.

18.17 Maintenance

Refer to Section 17.7.10 Maintenance.

18.18 Cleaning the Analyzer

Refer to Section 17.7.11 Cleaning the Analyzer.

Select the [Review] quick key, or select [Main Menu]; then select [Review] to enter the Review interface. Data Review includes: NIBP Measurement Review, Alarm Event Review, Trend Graph Review, Trend Table Review, Wave Review.

The monitor provides 160h trend data, 2,000 sets of NIBP measurement data, 200 times of storage of parameter alarm events, and at most 48h wave review of single-channel wave (the specific time is related to the waves saved and the number of waves). This chapter introduces the method for observation of these saved data in detail.

19.1 Wave Save

User can select the wave to be saved according to requirement. Only waves set to be saved can be viewed in [Wave Review]. After admitting a patient, it will be impossible to modify Wave Save selection.

- 1) Enter [User Maintain] \rightarrow [Wave Save].
- Select the parameter whose wave is to be saved, and select [Enter]; make a selection according to the prompt message.

[Rec. Merge]: Admit a new patient and create a patient file, and save current monitoring data to the patient file created.

[Not Mer. Rec.]: Admit a new patient and create a patient file, but current monitoring data are not saved to the patient file created.

19.2 Trend Review

Trend is a set of patient data over time manifested in the form of graph or table.

In the [Trend Review] window, select [Trend Graph] or [Trend Table] to review the corresponding data.

The trend graph shows recent data that are updated continuously; the bottom of the screen shows the time scale.

User can select the desired wave via the parameter area on the left side of the window; besides, user can browse the trend database via a cursor crossing all measurement items in the window. When moving the cursor, the current parameter trend data and specific time of data are shown on the right side of the corresponding window:





Fig 19-1Trend Graph Review

Aperiodic measurements can be viewed from the trend table. This table shows measurement data and measurement time. Trend table data during a period of maximally 160h can be viewed.

Trend Tab	le				\times
HR	60	60	60	60	60
Sp02	98	98	98	98	98
PR	60	60	60	60	60
NIBP	/ ()	/ ()	/ ()	/ ()	/ ()
IBP1	120/80 (93)	120/80 (93)	120/80 (93)	120/80 (93)	120/80 (93)
IBP2	/ (7)	/ (7)	/ (7)	/ (7)	/ (7)
RR	27	27	27	27	27
11/06	15:20	15:21	15:22	15:23	15:24
Trend Graph Trend Table Start Time 2016-11-06 15:24					
Res.	☆ ₹			▶ ▶	ş 🛔

Fig 19-2Trend Table Review

• Symbol Description

 Symbol
 Introduction

 Image up and down to view other parameter trend graphs not shown in the current view.

	Move the cursor left or right by one step to view along the timeline of trend database.
*	Move the cursor left or right by one page to view along the timeline of trend database.
	Jump to the start point or end point of the trend database to view the farthest (earliest) or nearest (latest) trend info saved.

- Select the date field beside [Start Time]; the Setup window will pop up, where user can set the start time of trend graph review.
- Trend Interval refers to the resolution of trend data shown on the screen.

Set [Res.] (Resolution)

- 1) In the Trend Graph Review window
 - \diamond Select [1s] or [5s] to view the short trend during the past 1h.
 - \diamond Select [10s] to view the medium trend during the past 4h.
 - Select [1 Min], [5 Min] or [10 Min] to view the long trend during the past 160h.
- 2) In the Trend Table Review window
 - ♦ Select [1 Min], [5 Min], [10 Min], [30 Min], [60 Min], [120 Min] or [180 Min] to view the trend during the past 160h.
- ◆ In the [Trend Table] menu, select ↓ to enter the [Trend Table Review Report] menu. User can set the following in this menu:
 - Record Time: Determine which period of trend data will be output via [Start Time] and [Forward Time]. For example: If [Start Time] is set to 2015-4-21 10:00:00 and [Forward Time] to [2h], the trend data to be output are those during 2015-4-21 08:00:00~2015-4-21 10:00:00. When [Forward Time] is set to [Auto], trend table data during 30min will be recorded.
 - [Res.]: Select the resolution for trend table output.
 - [Param.] (Parameter Selection): Select the specific parameter to be output in this menu.
 - [Record]: After setting, select [Record] to start data output.

Note: Trend graph has no record setup.

19.3 NIBP Measurement Review

This monitor can display the latest 2,000 sets of NIBP measurement data in NIBP Measurement Review. In the [Review] menu, select [NIBP Review], as shown in the figure below:

NIBP F	Review				×
	SYS	DIA	MAP	PR	Time
1	120	80	90	60	2016-11-06 14:47:25
2	120	80	90	60	2016-11-06 14:45:53
3	120	80	90	60	2016-11-06 14:44:58
4	120	80	90	60	2016-11-06 14:28:05
Num:	4	*	ş		Page 1/1

Fig 19-3NIBP Measurement Review

- Select Sto enter the [NIBP List Report] menu.
 - Record Time: Determine which period of trend data will be output via [Start Time] and [Forward Time]. For example: If [Start Time] is set to 2015-4-21 10:00:00 and [Forward Time] to [2h], the trend data to be output are those during 2015-4-21 08:00:00~2015-4-21 10:00:00. When [Forward Time] is set to [Auto], NIBP list data during 1h will be recorded.
 - [Record]: After setting, select [Record] to start data output.
- Select is to set and print a NIBP list review report. See the "Print Setup" chapter for details.

19.4 Alarm Event Review

This monitor can display the latest 200 parameter alarm events in Alarm Event Review, including physiological alarm events, technical alarm events, and manual events. When an alarm event occurs, the monitor will save the values of relevant parameters at the moment when such event occurs and the waveforms 8s before and after such occurrence. In the [Review] menu, select [Alarm Event Review] to enter the [Alarm Event Review] window \rightarrow [View Physiology Alarm] \rightarrow [View Physiology Alarm] menu, See the figure below:

Data	Review

View Physic	logy Alarm								\times
Start Tim	e 2016-11-00	5 15	:26	:24		Event		A11	
2016-11-06	14:56:07	ж	RR	Тоо	High				
2016-11-06	14:30:20		RR	Тоо	High				
2016-11-06	14:29:35		RR	Тоо	High				
						Ź	7		

Fig 19-4PhysiologicalAlarm Event Review

- User can set the start time of review in [Start Time].
- In [Event] under Alarm Review, user can select the alarm info of the parameter to be viewed.

Warning

- Current physiological and technical info can be displayed; upon restart of the monitor, the alarm info will be cleared.
- Alarm info in this window will not be classified by patient.
- When the monitor is full of alarm events, the oddest alarm events will be deleted.
- Select the physiological alarm event to be viewed and recorded; enter the [View Physiological Alarm]
 window to view alarm details; select select to directly record current alarm event data.
- Select the alarm event to be printed; enter the [View Physiological Alarm] window; select is to directly print current alarm event data.

Select [View Technical Alarm] \rightarrow [View Technical Alarm] menu. See the figure below:

View Technical Alarm		\times
2017-08-17 03:54:21 PM	IBP<1,2> Comm Stop	
2017-08-17 03:54:15 PM	CO2 Comm Stop	
2017-08-17 03:54:15 PM	IBP<1,2> Comm Err	
2017-08-17 03:54:15 PM	SpO2 Comm Err	
2017-08-17 03:54:14 PM	ECG Lead Off	
٨	₹	

Fig 19-5 Technical Alarm Event Review

Note
Technical alarm can only be viewed and cannot be printed.

19.5 Wave Review

You can review holographic waves only after SD card is installed and waves are set to be saved. This monitor can display single-channel wave playback for maximally 48h in the Wave Review window; with the increase of waves saved, the playback time for each wave reduces. You can review the waveform of any parameter of functions configured on the monitor:

Data Review



Fig 19-6Wave Review

Symbol	Introduction
<	Turn page up or down
×1	Waveform gain; select this button to choose the appropriate gain
I	Waveform currently reviewed; select the waveform to be viewed.
Start Time	Start time of waveform view.
Ś	Record holographic data of waveform.
ij.	Connect an external printer to print holographic data of waveform.

> Operation Examples

ECG Wave Review:

- Before admitting a patient, enter the [Wave Save] interface under [User Maintain]; select the waveform to be saved.
- 2) In the [Review] menu, select [Wave Review].
- 3) In the [Wave Review] window, select the parameter to be reviewed.
- 4) In the [Wave Review] window, you can use **with** to view changes in trend graph time and trend curve.
- 5) Select Store the [Record Setup] menu. After setting the record start time in this menu, select [Record] to record holographic data of waveform during 6s.

- 6) Select **b** to set and print a wave review report. See the "Print" chapter for details.
- 7) Press to exit the [Wave Review] window.

20.1 Description of Recorder

This monitor uses a thermal arraycorder which supports several record types and can output patient info, measured data, reviews and at most 3 waves.



Fig 20-1Recorder

20.2 Record Type

Records are divided into the following types according to the ways in which they are triggered:

- ♦ Real-time record triggered manually
- \diamond Timed record automatically triggered by the recorder at the set interval
- ♦ Alarm record triggered by parameter exceeding limit, etc.

Records related to specific functions

- Waveform Freeze
- Events: parameter alarm events, and manual events
- Review data

20.3 Record Operation

- Start recording manually:
 - > To start real-time record, select $\boxed{[s]}$ on the front panel of the monitor or the [Record] quick key.
 - > To start records related to specific functions, select the [Record] button in the current menu or

window.

- Stop recording manually:
 - > Select $\overline{\{ \ }$ on the front panel of the monitor or the [Record] quick key.
- The recorder will start recording automatically in the following situations:
 - If the timed record function is enabled, the recorder will start recording automatically at the set interval.
 - When [Alarm On/Off] and [Alarm Record] of a parameter are both set to [On]; as soon as an alarm is generated for this parameter, the monitor will be triggered to start alarm recording once.
- The recorder will stop recording automatically in the following situations:
 - \diamond The recording task is fulfilled
 - \diamond The recorder is lack of paper
 - \diamond The recorder is faulted

20.4 Recorder Setup

Open [Main Menu], and select [Record Setup] to enter relevant interface.

Record waves:

The recorder can output at most 3 waves at a time. In the record output setup interface, set Record Waves 1, 2 and 3. These settings apply to real-time record and timed record.

- Set the paper speed.
- 1) In this menu, select [Paper Speed].
- 2) Paper speed: [25mm/s], [50mm/s].
- Set real-time record:
- In this menu, select [RT Record Time] (Realtime Record Interval): select among [3s], [5s] [8s], [16s],
 [32s] and [Continual] as needed.
 - If [8s] is selected, waves during 8s after the current moment will be recorded.
 - If [Continual] is selected, waves after the current moment will be recorded; to stop recording, manual operation will be needed.
- Set timed record

User can set the recording interval as needed; the setting of real-time record determines the time length of each recording.

- 1) In this menu, select [Timed Record Interval].
- 2) Select the interval: [Close], [1h], [2h], [3h] and [4h].
- Grid

Select [Grid] and switch it between "On" and "Off". When set to on, grid is printed out by the printer on the paper; when set to off, grid is not printed out on the paper.

20.5 Load Record Paper

Load the record paper to the thermal recorder (optional) on the right side of the monitor according to the steps shown in the right figure below:

- 1) Use the latch lock at the top of the recorder door to open the door.
- 2) Remove the empty paper core.
- 3) Load new roll paper and fix it onto the paper clip.
- 4) The roll feeds paper from the bottom; paper runs across the top of the recorder door.
- 5) At least one inch of paper should extend out of the edge of the door.
- 6) Turn the recorder door up to close it tightly.
- 7) To check whether paper is properly loaded, please start recording.
- If printing is not performed, it indicates paper may be loaded inversely; try reloading the paper.



Fig 20-2Load Record Paper

Caution

- Load paper carefully; otherwise the thermal print head may get damaged.
- During output by the recorder, it is not allowed to pull the record paper outward with force; otherwise the recorder may get damaged.
- Do not keep the recorder door open except for paper change or troubleshooting.

Clear Jammed Paper

If the recorder makes any abnormal sound during operation or the record paper outputs abnormally, please check to see if any paper is jammed. If yes, please clear it according to the following steps:

- 1) Open the recorder door.
- 2) Take out the record paper, and cut off the crease part.
- 3) Reload the record paper, and close the recorder door.

20.6 Recorder Cleaning

After long-term use of the recorder, scraps of paper and impurities will be accumulated on the print head, which will affect the quality of recording and the service life of print head and roll shaft.

Cleaning:

- Prior to cleaning, measures should be taken to prevent the device from being damaged by static electricity.
- Open the recorder door; take out the record paper, and use a cotton ball to dip an appropriate amount of alcohol.
- 3) Gently wipe the surface of the thermal part of print head.
- 4) When the alcohol becomes completely dry, reload the record paper and close the recorder door.

//\Note

- Do not use any materials (e.g., abrasive paper) that can damage the thermal part.
- Do not squeeze the thermal print head with force.

21.1 Printer

This monitor can output patient reports by connection to the printer via a USB cable. Currently, the monitor supports the following types of printers:

- ♦ HP laserJet 1505n monochrome laser printer
- ♦ HP laserJet P2035n laser printer
- ♦ HP laserJet P4015n laser printer
- HP laserJet 1606dn laser printer
- Lenovo LJ2650DN laser printer
- ◆ Lenovo LJ4600DN laser printer

Specification of reports printed by the printer:

- Paper: A4
- Resolution: 300dpi
- Single/double-sided: Support both single and double-sided printing, if supported by the printer.

//\Note

• For instructions on the printer, please see the documentation accompanied with the printer. This monitor may support more printers with the upgrade of the product, for which no prior notice will be provided. If you have any question about your printer, please feel free to contact us.

21.2 Set Printer Type

Enter [User Maintain] \rightarrow [Other Setup] \rightarrow [Printer Type], select [USB] or [Net].

21.3 Printer Setup

If you choose to connect the printer via the USB cable, you can set up a report to print directly. If you select the network printer, you need to set the printer properties: Select the [Main Menu] \rightarrow [Ext. Printer Setup] \rightarrow [Printer Setup]. In the [Printer Setup] menu, you can make the following operations:

Select the network printer

Select the [External Printer]. In the pop-up list, select any one of the printers in the LAN as the printer of this monitor.

■ Search the printer

If a user-specified printer is excluded in the list or if a new printer is added to the LAN, you can select [Query] to re-search all the printers in the LAN.

21.4 Start Report Printing

You can print the following types of reports: Trend Graph, Trend Table, NIBP List, Event Review, Wave Review, and Realtime Wave.

To print a desired report, select [Main Menu] \rightarrow [Ext. Printer Setup]; in the pop-up menu, perform report setup as appropriate for your need.

21.5 Stop Report Printing

To stop report printing, select [Main Menu] \rightarrow [Ext. Printer Setup] \rightarrow [Cancel Print].

21.6 Set Report

21.6.1 Set Trend Table Report

In the [Print Report] menu, select [Trend Table Review Report] to set the following:

- Print Time: Determine which period of trend data will be output via [Start Time] and [Forward Time]. For example: If [Start Time] is set to 2015-4-21 10:00:00 and [Forward Time] to [2h], the trend data to be output are those during 2015-4-21 08:00:00~2015-4-21 10:00:00. When [Forward Time] is set to [All], the all saved trend data will be output. When [Forward Time] is set to [Auto]: if [Type Priority] is set to [Time Priority], a page with time column will be printed; if it is set to [Param. Priority] (Parameter Priority), a page with parameter column will be printed.
- [Res.]: Select the resolution for trend table output.
- [Type Priority]: When [Param. Priority] is selected, the column in the output report is parameter; when
 [Time Priority] is selected, the column in the output report is time.
- [Param.] (Parameter Selection): Select the specific parameter to be output in this menu.

21.6.2 Alarm Event Review Report

To set the alarm event review report, select [Main Menu] \rightarrow [Ext. Printer Setup] \rightarrow [Print Report] \rightarrow [Alarm Event Review Report].

Print Time: Determine which period of alarm event data will be output via [Start Time] and [Forward Time]. For example: If [Start Time] is set to 2015-4-21 10:00:00 and [Forward Time] to [2h], the alarm event data to be output are those during 2015-4-21 08:00:00~2015-4-21 10:00:00. When [Forward Time] is set to [All], the all saved alarm event data will be output. When [Forward Time] is set to [Auto], only one page of data will be printed.

21.6.3 Set NIBP List Report

To set NIBP List Report, select [Main Menu] \rightarrow [Ext. Printer Setup] \rightarrow [Print Report] \rightarrow [NIBP List Report]. Time Setup is similar to that of Alarm Event Review Report. Please see the description in "Alarm Event Review Report".

21.6.4 Trend Graph Review Report

To set Trend Graph Review Report, select [Main Menu] \rightarrow [Ext. Printer Setup] \rightarrow [Print Report] \rightarrow [Trend Graph Review Report].

[Time of Page]: User can select the time for printing each page as needed; the time that can be selected is less than the forward time.

[Param.]: Select the review parameter to be printed.

Time Setup is similar to that of Trend Table. Please see the description in "Set Trend Table Report".

21.6.5 Set Realtime Wave Report

To set Realtime Wave Report, select [Main Menu] \rightarrow [Ext. Printer Setup] \rightarrow [Print Report] \rightarrow [Realtime Wave Report].

[Sweep]: Set the wave output speed; [Auto] means the wave output speed is consistent with the sweep speed of each wave on the screen.

[Wave Select]: Select the wave to be output in this menu.

21.6.6 Wave Review Report

To set Wave Review Report, select [Main Menu] \rightarrow [Print Setup] \rightarrow [Wave Review Report].
Print

Print Time: Determine which period of review data will be output via [Start Time] and [Duration]. For example: If [Print Time] is set to 2015-4-21 10:00:00 and [Duration] to [15s], the trend data to be output are those during 2015-4-21 10:00:00~2015-4-21 10:00:15.

[Gain]: Select the wave print range.

[Sweep]: Set the wave output speed.

[Wave Select]: Select the review wave to be printed.

21.7 Printer Abnormality

21.7.1 Printer Out of Paper

When the printer is out of paper, no response will be given to the print request sent; when there are too many tasks without response, printer abnormality may be caused. At this moment, please properly load paper into the printer and resend the print request; when necessary, restart the printer.

21.7.2 Printer Status Info

When the printer status info shows [Printer not Present], please check to see if the printer is turned on, connected correctly and loaded with paper.

22.1 Nurse Call

When a physiological parameter of the patient meets the conditions set under [Nurse Call], the Nurse Call function is triggered. The monitor will make a "click" sound.

Nurse Call Setup:

- 1) Enter [User Maintain] \rightarrow [Nurse Call Setup] \rightarrow [Nurse Call].
- 2) Set options under [Nurse Call].
 - ♦ [Alarm Type]: Select which type of alarm will trigger Nurse Call.
 - ♦ [Alm Level]: Select which level of alarm will triggerNurse Call.

22.2 Format SD Card

This monitor allows user to format SD card. When [Format SD Card] is selected, all data will be removed. Therefore, this function should be used with caution. During SD card formatting, all operations on the screen are disabled. When formatting is finished, the monitor will restart automatically.

Steps for formatting SD card:

 Enter [User Maintain] → [Format SD Card]. A warning dialog appears, saying [The monitor will auto restart after formatting SD card! Confirm to format?]. Select [Enter] to format the SD card. The monitor will restart automatically after formatting is finished.

22.3 Analog Output

Enter [User Maintain] \rightarrow [Analog Out].

Output for 3 leads includes Off, I, and II; output for 5 leads includes Off, I, II, and V (varying with the lead type selected). The monitor can be connected to a defibrillator or other external devices via cables, and outputs analog signals such as lead I or lead II for use by such devices.

23.1 Overview

The monitor is equipped with a built-in rechargeable battery. When AC power supply is connected, the battery can be charged automatically till full no matter whether the device is turned on or not. In the event of unexpected power outage, the system will automatically use the battery to supply voltage, thus to avoid interruption of device operation. After AC power supply is cut off, the battery indicator light blinks, indicating the battery is being used to supply voltage, and device operation will not be affected.

The Battery icon shown on the screen indicates the current battery status;

indicates battery level is full.

Indicates battery level is not full.

indicates battery level is low and charging should be considered.

indicates the battery is being charged.

indicates absence or damage of the battery.

∕!∖ Warning

- Improper replacement of the lithium battery will result in unacceptable risks.
- Replacement of the lithium battery by unprofessional personnel may result in risks.
- Battery electrolyte is hazardous. In case that battery electrolyte comes into contact with your skin or enters your eyes, please wash with clean water immediately and seek medical advice.
- Please keep the battery out of the reach of children.
- When the battery is used for operation, the monitor will power off automatically when the battery level is low.

A Note

- If the battery is to be left unused for a long period of time, please remove the battery and keep it properly.
- If the device is provided with a built-in battery, the battery must be charged after each use to ensure sufficient battery reserve.

23.2 Install Battery

Steps for replacement or installation of the battery:

- 1) Power off the monitor; disconnect the power cord and other connecting cables.
- 2) Place the monitor with its back facing upward.
- 3) Remove the screws with a screwdriver, and take out the old battery.
- 4) Install the new battery into the battery case according the anode and cathode symbols.
- 5) Tighten the screws, and place the monitor straight.

∕!∖ Warning

- Only use battery designated by the manufacturer.
- Do not remove the battery when the device is working.

23.3 Optimize and Check Battery Performance

1) Optimize Battery Performance

If it is the first time to use the battery, please ensure that the battery has undergone at least two complete optimization cycles. A complete optimization period means uninterrupted charging till the battery is fully charged, and then discharging it till the monitor shuts down automatically.

When optimizing the battery, please ensure the following:

- 1) Completely disconnect the monitor from the patient and stop all monitoring and measurement.
- 2) Put the battery for optimization in the battery case of the device.
- When charging the battery, please ensure that the battery is charged uninterruptedly for at least 6h till it is fully charged.
- Disconnect AC power supply, and use the battery to supply voltage to the monitor till the monitor shuts down automatically.
- 5) Battery optimization is finished.
- 2) Check Battery Performance

The battery life varies with the storage and operation environments, frequency of battery discharging and use time. The battery performance will degrade gradually even if the battery is not used.

Here are the steps for checking the battery:

- 1) First, determine whether the battery is damaged. When the battery icon shows at indicates the battery is damaged or there is no battery in the battery case.
- 2) Check whether the battery can be charged normally when connected to AC power supply.
- 3) Completely disconnect the monitor from the patient and stop all monitoring and measurement.

- 4) When charging the battery, please ensure that the battery is charged uninterruptedly for at least 6h till it is fully charged.
- 5) Disconnect AC power supply, and use the battery to supply voltage to the monitor till the monitor shuts down automatically; meanwhile record the start time and end time of discharging.
- 6) The length of discharging time reflects the performance of the battery.
- 7) When the discharging time reduces to less than 50% of the initial value, please replace the battery.

/ Note

- In order to prolong the service life of the rechargeable battery, if the battery is stored for a long period of time, it is suggested that the battery should be charged every three months to prevent excessive discharging.
- The voltage supply time of the battery depends on the configuration and operation of the device. For example, frequent NIBP measurement will reduce the voltage supply time of the battery.

23.4 Battery Recycling

If the battery is obviously damaged or runs out, it should be replaced. Waste batteries should be properly recycled in accordance with applicable laws and regulations or the rules of the hospital.

∕!∖ Warning

• Do not disassemble or short-circuit the battery or place it in fire; otherwise battery fire, explosion, leakage of hazardous gas or other hazards may be caused.

Only materials and methods listed in this chapter that are accepted by the Company can be used for cleaning or disinfection of the device. For any damage arising from use of unaccepted materials or methods, the Company will not provide any warranty.

The Company will not assume any liability for the effectiveness of listed chemicals or methods when they are used as infection control means. For infection control methods, please consult the Infection Prevention Department or an epidemiologist in your hospital. Besides, please refer to local policies that apply to your hospital and country.

24.1 Overview

Please keep the device and its accessories dustless. After cleaning, please check the device carefully. If there is any evidence of ageing or damage, please stop using it immediately. If it is necessary to send back the device to our company for repair, first clean it. Please observe the following precautions:

- Please dilute detergent and disinfectant as specified by the manufacturer, or use a concentration as low as possible.
- \diamond Never allow any liquid to flow into the housing.
- ♦ Never pour any liquid onto any part or accessory of the device.
- \diamond Never soak the device in any liquid.
- ✤ Do not use any frictional material, bleaching powder or strong solvent (e.g., acetone or detergent containing acetone).

!_ Warning

- Only use detergents and disinfectants recommended in this Instruction Manual; use of other detergents and disinfectants will result in damage to the device or safety risks.
- Before cleaning the monitor, please power it off and disconnect it from the AC power supply.
- Never use EtO(ethylene oxide) to disinfect the monitor.
- Never leave any disinfectant on any surface and accessory of the monitor; please use a wet cloth to clean it immediately.
- It is not allowed to use detergent mixture; otherwise hazardous gases will be generated.
- This chapter only introduces the methods for cleaning reusable accessories. Disposable accessories should not be reused after cleaning and disinfection to avoid cross infection.
- To protect the environment, disposable accessories must be recycled or dealt with properly.

- After cleaning, if the sensor cable is damaged or shows any evidence of ageing, it should be replaced with a new cable.
- High-temperature sterilization of the monitor and all accessories is not allowed.
- Never use any cleaning solution not recommended in this manual; failure to do so may result in permanent damage to the device, sensor or cable.
- Never soak the sensor or connector in any solution for cleaning or disinfection.
- In order to prevent the entry of cleaning solution and dust into the ISA gas analyzer via LEGI port, the Nomoline sampling line should always be connected when cleaning the ISA analyzer. Never soak the ISA sidestream gas analyzer in any liquid for disinfection.
- The Nomoline sampling line is not a sterile device. In order to avoid damage, please do not sterilize any part of the sampling line under high pressure.
- Before cleaning the IRMA sensor, please remove the disposable IRMA airway adapter. Never disinfect the IRMA sensor or soak it in any liquid.
- The IRMA O₂ battery and the IRMA airway adapter are not sterile devices. In order to avoid damage, do not sterilize the device under high pressure.

A Caution

• If you carelessly pour any liquid onto the device or any accessory, please contact the maintenance personnel or our Company immediately.

24.2 Cleaning and Disinfection of Monitor

The monitor should be kept clean. It is suggested that the external surface of the housing should be cleaned frequently; especially in environments with tough conditions or very windy and dusty places, the cleaning frequency should be increased in order to avoid cross infection, and accessories should be cleaned on a regular basis. Prior to cleaning, please first consult or understand relevant rules of your hospital on device cleaning.

- Cleaning steps:
- 1) Power the device off, and unplug the power cord.
- 2) Use a soft cloth dipped with an appropriate amount of detergent to wipe the housing of the device.
- 3) Use a soft cloth dipped with an appropriate amount of detergent to wipe the display screen of the device.
- 4) When necessary, you can use a soft, dry cloth to remove residual detergent.
- 5) Put the device in a cool, well-ventilated environment to air-dry it.

The disinfection operation may harm the monitor to a certain extent. It is suggested that the device can be disinfected only when it is considered necessary in the maintenance plan of your hospital. Before disinfection, please clean the device first.

Selectable detergents:

Part for Cleaning/Disinfection	Detergent	Disinfectant	
Housing	Isopropanol (70%) hydrogen		
Power cord	peroxide		
ECG cable	F	Isopropanol (70%).	
ECG electrode	Alcohol-free hand soap, sodium	glutaraldehyde solution (2%), sodium hypochlorite	
Temp sensor	hypochlorite (bleaching powder		
SpO ₂ sensor	containing chlorine, 3% aqueous solution), hydrogen peroxide		
Mainstream CO ₂ module	Isopropanol (70%)	Clutoraldahyda solution (2%)	
Sidestream CO ₂ module	Ethanol (70%), isopropanol (70%)	sodium hypochlorite	

24.2.1 Cleaning and Disinfection of IBP Cuff

Prior to cleaning, the gasbag must be taken out.

The cuff can be washed by machine or hand with warm water and mild detergent, whereas hand wash can prolong its service time. The gasbag can be cleaned using a wet cloth dipped with clean water. Naturally airdry it after cleaning.

The cuff can be disinfected using a wet cloth dipped with 70% ethanol or 70% isopropanol. Long-term use of disinfectants may result in color fading or discoloration of the cuff.

Warning

- Do not squeeze the rubber tube on the cuff.
- During cleaning, only wipe the external surface of the connector socket; never wipe its internal surface.
- When cleaning the gasbag, care should be taken not to allow any liquid to flow into the gasbag.
- It is forbidden to dry-clean the cuff.
- The disposable cuff can be cleaned with soap to control infection.

After cleaning, please reinstall the gasbag into the cuff according to the following steps.

To reinstall the gasbag into the cuff, first put the gasbag at the head of the cuff so that the rubber tube can line up with the big opening of the long end of the cuff; then vertically curl up the gasbag and insert it into the big opening of the cuff; hold the rubber tube and the cuff, and shake the entire cuff till the gasbag is in position. Lead the rubber tube into the cuff, and run it through the liner via the small hole. See the figure below:



Fig 24-1Replacement of Rubber Tube in the Cuff

25.1 Maintenance Checks

Before use of the monitor, or every 6-12 months or after each maintenance or upgrade, a comprehensive check, including functional safety check, of the device should be carried out by qualified technical maintenance personnel having received training.

Items for checking should include:

- Check to see if the operating environment and the power supply for the monitor conform to relevant requirements.
- 2) Check to see if the device and its accessories have any mechanical damage.
- 3) Check to see if the power cord is free from abrasion and has good insulation performance.
- Check all functions of the device that can be used for patient monitoring, and ensure that the device is in good working status.
- 5) Check to see if all accessories used are those designated by the manufacturer.
- 6) Check to see if the battery performance is OK.
- If the monitor is equipped with a recorder, check to see if the recorder can work normally and if the record paper conforms to the specified requirements.
- 8) Check to see if the wiring impedance and the leakage current conform to relevant requirements.

If there is any evidence of functional failure of the device, it is not allowed to use this monitor for patient monitoring. Please contact our company or a biomedical engineer of your hospital.

All safety checks or maintenance work requiring disassembly of the device should be performed by professional maintenance personnel; operation by unprofessional personnel may result in malfunction of the device or safety hazards, and may also endanger personal safety.

Upon request by the user, our company will conditionally provide relevant circuit diagrams to help the user to repair user-serviceable components of the device by appropriate and qualified technicians.

Warning

• The hospital or organization using this monitor should establish a sound maintenance plan; failure to do so may result in malfunction of the device and unpredictable consequences, and may also endanger personal safety.

25.2 Maintenance Plan

The following tasks can be fulfilled only by professional maintenance personnel recognized by the Company. If the following maintenance is needed, please timely contact the maintenance personnel. Prior to test or maintenance, the device must be cleaned and disinfected.

Test and Maintenance Items	Frequency	
Carry out safety check according to IEC	At least once every two years. After drop of monitor,	
60601-1	replacement of power supply or as needed.	
ECG synchronism between monitor and defibrillator	At least once every two years or as needed.	
NIBP leakage test	At least once every two years or as needed.	
NIBP verification	At least once every two years or as needed.	
ECG calibration	At least once every two years or as needed.	
IBP calibration	At least once every two years or as needed.	
Touch screen calibration	At least once everyyearor after the touch screen replacement.	
Mainstream and sidestream CO ₂	At least once every two years or when measurement	
calibration and performance check	inaccuracy is suspected of.	
Battery	Refer to the battery-related chapter in this manual.	

25.3 NIBP Leakage Test

It is used to detect whether the NIBP measuring pump leaks. When the NIBP cuff is connected, this button can be used to activate the NIBP inflation process, so as to detect whether the NIBP gas circuit is in good airtight condition. If the result of gas leakage test is OK, the system will not give any prompt; if not, a corresponding error message will be shown in the NIBP info area.

Gas Leakage Test Process:

- 1) Properly connect the cuff to the NIBP gas hole in the monitor.
- 2) Wrap the cuff around a cylinder of proper size.
- 3) Enter [User Maintain] \rightarrow [Leakage Test].
- At this moment, [Leakage Testing] will be shown in the lower part of the NIBP parameter area on the screen, indicating that the system starts performing the gas leakage test.
- 5) The system will inflate automatically till the pressure reaches 180mmHg.
- About 20s later, the system will turn on the deflation valve automatically, indicating that leakage measurement is finished.

If no prompt message is shown in the NIBP parameter area, it indicates the system has no gas leakage. If [Pneumatic Leak...] is shown, it indicates the gas circuit may leak. At this moment, the operator should check the complete connection to see if there is any looseness. After confirming the connection is correct, perform the gas leakage test again. If there is still any fault prompt, please contact the manufacturer for repair.



Fig 25-1Connection Diagram for NIBP Gas Leakage Test

∠!∆ Warning

• This gas leakage test is different from the content described in EN 1060-1. This is for user to simply test whether there is gas leakage during NIBP inflation. If, at the end of the test, the system shows NIBP gas leakage, please contact our company's service engineer.

25.4 NIBP Pressure Verification

The manufacturer recommends use of a calibrated pressure gauge (or mercury sphygmomanometer) with accuracy higher than 1mmHg. In the [User Maintain] menu, select [NIBP Verify] to start calibration; meanwhile, this option will change to [Stop NIBP Verify]. If the knob is pressed at this moment, the system will stop calibration.

Warning

• Calibration of NIBP measurement should be performed once every two years (or according to maintenance rules of your hospital). Please check its performance according to the following details.

Steps for calibration of the pressure sensor:

Use a 500ml+5% metal container to replace the cuff. Connect a calibrated standard pressure gauge (error < 0.8mmHg) and a ball gas pump with T-connector to the NIBP jack on the module. Enter the [User Maintain] menu; select [NIBP Verify]; set the monitor to the verification mode; then use the ball gas pump to inflate the metal container till the pressure of 0, 50 and 200mmhg is reached respectively. At this moment, the difference between the value shown on the standard pressure gauge and the pressure value indicated by the monitor should be within 3mmHg. Otherwise, please contact our company's service engineer.



Fig 25-2Connection Diagram for NIBP Verification

25.5 ECG Calibration

- Enter [User Maintain] → [ECG Calibrate] to set the system to the calibration status; meanwhile, this option will change to [Stop ECG Cal] (Stop ECG Calibration).
- 2) To stop ECG calibration, you need to return to the [User Maintain] menu and select [Stop ECG Cal].

During ECG calibration, patient monitoring cannot be performed; meanwhile, "Cal...can't monitor!" (Calculating...can't monitor!) will be shown at the bottom left of the device screen.

25.6 IBP Calibration

When IBP calibration is necessary, please contact the manufacturer.

25.7 Touch Screen Calibration

- 1) Enter [User Maintain]→[Touch Screen Calibrate]
- 2) Click the sign on the screen as prompted.

After the calibration, the system returns to the main screen automatically.

Here we recommend the following accessories for the Monitor.

Marning

- Use the accessories of designated types only, or the Monitor may be damaged.
- To prevent reduced performance and cross infections, please do no reuse any disposable accessory.

ECG Accessories	l			
Part No.	Туре	Description		
040-000382-00	98ME01AB017	5-lead American-standard integral clip-on cable		
040-000381-00	98ME01AB016	3-lead American-standard integral clip-on cable		
040-000383-00	98ME01EA048	3-lead American-standard integral clip-on cable		
040-000384-00	98ME01EA049	5-lead American-standard integral clip-on cable		
StandardSpO ₂ Se	ensor			
Part No.	Туре	Description		
040-000769-00	/	Simulated main SpO ₂ cable		
040-000649-00	/	Y type oxygen probe/DB9joint/SAL001		
Blood Pressure C	Cuff			
Part No.	Туре	Description		
040-000934-00	98-0400-99	Blood pressure cuff, 3-6CM		
040-000935-00	98-0400-96	Blood pressure cuff ,4-8CM		
040-000936-00	98-0400-97	Blood pressure cuff, 6-11CM		
040-000937-00	98-0400-98	Blood pressure cuff, 7-13CM		
040-000938-00	98-0400-90	Blood pressure cuff, 8-15CM		
040-000808-00	/	Blood pressure conduit/grayTPU elastomer/joint: CNT03-		
		J3*CNT03-T/O.D:7.14MM I.D:3.76MM Length:2M		
Temp Sensor				
Part No.	Туре	Description		
040-000385-00	TAE03-03	Temp sensor /intracavity		
CO ₂				
099-000005-00	1015928	Respironics CAPNOSTAT mainstream CO ₂ module		
099-000022-00	C500	mainstream CO ₂ sensor		
099-000006-00	CAT.NO.200101	IRMA mainstream CO ₂ module		
099-000004-00	1022054	sidestream CO ₂ module		
099-000021-00	C300	sidestream CO ₂ module		
099-000007-00	CAT.NO.800101	sidestream CO ₂ module		
IBP				
040-000013-00	PT-01	IBP sensor with Abbott interface		
040-000211-00	SAO-BAXTER-	IBP sensor with Edwards interface		
010 000211-00	01			

Accessories

040-000212-00	SCW-R-01	IBP sensor with BBRAUM interface		
040-000403-00	SCW-D-01	IBP sensor with BD interface		
040-000404-00	SCW-U-01	IBP sensor with Uath interface		
AG				
099-000003-00	800601	ISA AX+ AG module		
099-000020-00	800401	ISA OR+ AG module		
Power Cord				
040-000129-00	/	power cord(IEC)/1.8m		
040-00008-00	/	6mm/Grounding column joint/SZCNT F002 14AWG L=3M		

Appendix II Product Specifications

Classified by	Туре	
Electric shock protection	Externally powered Class Lequipment: continuous operation equipment	
type	Externally powered class-requipment, continuous operation equipment	
Defibrillation-proof	defibrillation resistant equipment with internal newer supply	
applied parts	denomination resistant equipment with internal power suppry.	
Electric shock protection	Equipment with CF applied part (ECG and IBP monitoring part) and BF	
level	applied parts (all other monitoring parts).	
IP grade	IPX1	
Work mode	Continuous operation equipment	
Safety standards	IEC 60601-1 IEC 60601-1-8 IEC 60601-2-27 EN 1060-3 IEC 80601-2-30	
	IEC60601-2-34 IEC60601-2-49 ISO 80601-2-56 ISO 80601-2-61	

1) Monitor Type

2) Environmental Specifications

Item	Specification		
	Ambient temperature	5°C~40°C	
Working conditions	RH	≤93%	
	Barometric pressure	700hPa~1060hPa	
Transport conditions	Please protect the monitor against violent impact, vibration, rain and snow in transport. Themonitor should be Transported in a well-ventilated room without corrosive gas (ambient temperature: -20 °C ~60 °C ; RH: \leq 93%; Barometric pressure: 700hPa~1060hPa).		
Storage conditions	Themonitor should be packed and stored in a well-ventilated room without corrosive gas (ambient temperature: -20 °C ~60 °C ; RH: \leq 93%; Barometric pressure: 700hPa~1060hPa).		

3) Power Supply

Item	Specification		
AC input voltage	100~240V		
AC input frequency	50Hz/60Hz		
Power supply	Powered either by built-in battery or external AC.		
Input power	60VA		
	Standard: 11.1V/2200mAh rechargeable lithium-ion battery, supplying power for at		
Built-in battery	least 2 consecutive hours in normal use once fully charged.		
	Optional: 11.1V 4400mAh rechargeable lithium-ion battery, supplying power for at		
	least 4 consecutive hours in normal use once fully charged.		

Charge time	11.1V 4400mAh: At least 4 hours from depletion to 90% charge in normal use. 11.1V/2200mA: At least 2 hours from depletion to 90% charge in normal use.	
Analog Output	Bandwidth: 0.5-40Hz; Max delay: ≤35ms; error: ±5%;	
4) General Specifications		

Item	Specification
Dimension	About 291.7mm×250 mm×146.5mm
Weight	About 3.3kg (without battery)
LCDspecification	Size:10.4 Inch
	Pixel :800×600

5) ECG Specifications

Item	Specification			
Applicable standards: IEC 60601-2-27.				
Waveform	2 -channel			
Lead mode	5-lead (R, L, F, N, C; or	RA, LA, I	LL, RL, V)	
Method of leads	I, II, III, aVR, aVL, aVF	, V		
Waveform	2 -channel			
Lead mode	3-lead (R, L, F; or RA, 1	LA, LL)		
Method of leads	I, II, III			
Waveform	1-channel			
Overload protection	Load 1V, power frequency, differential-mode AC voltage for 10s without damage (p-v)			
Resp,leaddisconnectiondetection and activenoise control	AC waveform: Current :<0.1 μA; Frequency 64kHz, ±10%			
Auto identify the type	of ECG leads.			
	Amplitude (p-v RTI)		0.5mV~5mV	
	Width (horse)		70ms~120ms	
ORS wave amplitude	Width (cat/dog/others/others)		40ms~120ms	
and interval	Not respond to the signals:	 a) with amplitude (p-v RTI) not exceeding 0.15mV (except in cat/dog/others mode); or b) with 10ms width (except in cat/dog/others mode) in case of 1mV amplitude. 		
Triggering threshold level	200 μV (lead II)			
Power frequency voltage tolerance	>100 µV(p-v)			
	Triangular wave amplitude (p-v RTI)	4mV		
Drift tolerance	QRS wave amplitude (p-v RTI)	0.5 mV		
	QRS wave width	100ms		

	QRS wave recurrence	80bpm		
	frequency			
	horse	15~300bpm		
HR measurement	Cat/dog/others	15~350bpm		
range and error	Emer	$\pm 1\%$ or ± 1 bpm in both 3-lead, 5-lead mode, whichever is		
		greater.		
Alarm limit range	horse	15bpm~300bpm		
Thann mint range	Cat/dog/others	15bpm~350bpm		
Alarm limit	+1hpm			
resolution				
Alarm limit error	±1bpm			
Alarm start time for				
asystole and high/low	<10s			
HR				
	Input signal amplitude	±5mV		
	Rate (RTI)	320mV/s		
	DC offset voltage	-300~+300mV		
Input dynamic range	Output signal change	±10%		
	Failure display			
	(attenuation prior to	Maximum attenuation: 50%		
	display)			
Input impedance	Signal attenuation $(0.67\text{Hz}\sim40\text{Hz})$: $\leq 20\%$			
System noise (p-v	<25V			
RTI)	<25 μV			
Multi-channel	<5%			
crosstalk				
	1.25mm/mV, 2.5mm/mV	V, 5.0mm/mV, 10mm/mV, 20mm/mV, 40mm/mV, Auto.		
	Manual replacement.			
	Plus ±750mV DC polariz	zation voltage; sensitivity change range: ±5%.		
Gain				
	Gain change per	<0.66%/min		
	minute	_0.0070/mm		
	Total gain change in	<+10%		
	1h			
	Surgery mode: $1 \text{ Hz} \sim 20 \text{ Hz} (-3.0 \text{ dB} \sim +0.4 \text{ dB});$			
bandwidth Monitoring Mode: $0.5 \text{ Hz} \sim 40 \text{ Hz} (-3.0 \text{dB} \sim +0.4 \text{dB});$		$Hz \sim 40 Hz (-3.0 dB \sim +0.4 dB);$		
	Diagnosis mode: 0.05 Hz \sim 150 Hz (-3.0dB \sim +0.4dB);			
		Permanent 25 mm/s 50 mm/s		
Time reference	Time reference selection	display		
selection and		Non-		
accuracy		permanent 6.25mm/s, 12.5mm/s, 25 mm/s, 50 mm/s		
		display		
	Maximum time	±10%		

	reference error			
Output display	Channel width	30mm		
Output display	Aspect ratio	0.4s/mV		
	Use method A and meth	od B in IEC 60601-2-	27to determine the total system error	
	and frequency response.			
	Total system error	tal system error $\pm 20\%$ or $\pm 100 \mu\text{V}$, whichever is larger.		
	-	Sinusoidal input	0.67~40Hz (attenuation: -3dB)	
Input signal reconstruction	Frequency response	Response to 20ms (width) triangular wave	0~25Hz attenuation in amplitude of wave peak	
accuracy	Response to 0.3mV s	Offset (RTI)	≤0.1mV	
	range	Slope (RTI)	≤0.30mV/s	
	Electrode weighting factor	≥±5%		
	Hysteresis effect of 15mm offset	≤0.5mm		
Calibration voltage	±5% error at 1mV			
Common mode rejection	<1mV (p-v RTI)			
	Recovery time after reset	ter 3s		
Baseline control and	Drift rate in 10s	10 µV/s		
stability	Baseline drift in 1h	≤500μV		
	Baseline drift at working temperature	$\leq 50 \mu V/^{\circ}C$		
Resolution	0.01mV (0.1mm)			
Leakage current	<10uA			
Electrosurgical interference inhibition	HR change caused by interference: ≤±10%			
	Cut mode: 300W			
ESU protection	Condense mode: 100W			
	Recovery time: ≤10s			

HR Calculation	
Tall T-wave rejection capability	1.2mV
HR calculation	As required in Section 201.7.9.2.9.101 b) 3) of IEC 60601-2-27, the HR is calculated as follows. If all of the last 3 RR intervals are longer than 1200ms, the average of the last 4 RR intervals is the HR. In other cases, the average of the last 12 RR intervals (with the longest interval and shortest interval excluded) is the HR.
Cardiotachometer accuracy	As required in Section 201.7.9.2.9.101 b) 4) of IEC 60601-2-27, the HR is displayed as follows after the 20s stable segment:

	A1 (bigeminy): 80±1bpm		
	A2 (slowly varying bigeminy): 60±1bpm		
	A3 (quickly varying bigeminy): 120±1bpm		
	A4 (two-way contraction): 90±2bpm		
Desmance time for UD	As required in Section 201.7.9.2.9.101 b) 5) of IEC 60601-2-27: the response time		
changes	for a HR change, whether from 80bpm to 120bpm or from 80bpm to 40bpm, is less		
	than 10s.		
	As required in Section 201.7.9.2.9.101 b) 6) of IEC 60601-2-27, the waveform:		
	B1 1 - range: 10s		
T1	B1 0.5 - range: 10s		
l'achycardia alarm	B1 2 - range: 10s		
start time	B2 1 - range: 10s		
	B2 0.5 - range: 10s		
	B2 2 - range: 10s		

6) **Resp Specifications**

Item	Specification			
Method	Thoracic impedance method			
	Measurem	horse	0rpm-120rpm	
RR measurement range	ent range	Cat/dog/others	0rpm-150rpm	
and accuracy	Measurem ent accuracy	7rpm~150rpm: ±2rpm or ±2%, whichever is greater. 0rpm~6rpm: not defined.		
RR alarm limit range and	horse	0rpm~120rpm		
error	Cat/dog/ot hers	0rpm~150rpm		
	Error	±1rpm		
		horse: 110s, 15s, 20s, 25s, 30s, 35s, 40s, 45s, 50s,		
No breath alarm limit	Range	55s、1min		
range and error		cat/dog/others: 10s, 15s, 20s, 25s, 30s, 35s, 40s		
	Error	±5s		
No breath alarm delay	10s、15s、20s、25s、30s、35s、40s、45s、50s、55s、1min、Off			
CVA identification	The Monitor will display the relevant alarm message when the HR is identical with the RR.			

7) SpO₂ Specifications

Item	Specification
Display range	0%~100%
Display resolution	1%
Data averaging and other	2s
signal processing time	
Data update time	8s
Measurement accuracy	• Standard SpO ₂ : measurement range: $0\% \sim 100\%$; measurement accuracy:

	$\pm 2\%$ (horse/dog/others, in non-motion state) or $\pm 3\%$ (cat, in non-motion			
	state) within	the measurement range of 70%~100%. The measurement		
	accuracy within the measurement range of $1\% \sim 69\%$ is not defined.			
	◆ Masimo SpO ₂ : measurement range: 1%~100%; measurement accuracy:			
	$\pm 2\%$ (horse/dog/others, in non-motion state), $\pm 3\%$ (horse/dog/others, in			
	motion state) or $\pm 3\%$ (cat, in motion or non-motion state) within the			
	measurement	range of 70%~100%. The measurement accuracy within the		
	measurement range of 1%~69% is not defined.			
	◆ Nellcor SpO ₂ : measurement range: 0%~100%; measurement accuracy:			
	$\pm 2\%$ (horse/dog/others, in non-motion state) or $\pm 3\%$ (cat, in non-motion			
	state) within the measurement range of 70%~100%. The measurement			
	accuracy within the measurement range of 0%~69% is not defined.			
		Standard SpO ₂ :0%~100%		
Alarm limit range and	Range	Masimo SpO ₂ :1%~100%		
accuracy	Nellcor SpO ₂ :20%~100%			
	Accuracy	±1%		
	Range for Masimo SpO ₂ and Standard SpO ₂ : 0.02%~20%; accuracy: not defined			
Perfusion index (PI)	Resolution: 0.01% (within 0.02%~9.99% range) or 0.1% (within 10.0%~20.0%			
	range).			

8) PR Specifications

Item	Spe	cification			
	•	Standard SpO ₂ sensor:			
		Measurement range: 20bpm~254bpm; resolution: 1bpm; measurement			
		error: ±2bpm.			
	•	Masimo SpO ₂ sensor:			
		Measurement range: 25bpm~240bpm; resolution: 1bpm; measurement			
		error: ±3bpm (in non-motion state) or ±5bpm (in motion state).			
	•	Nellcor SpO ₂ sensor:			
		Measurement range: 20bpm~300bpm; resolution: 1bpm; measurement			
Measurement range and	1	error: ±3bpm within 20bpm~250bpm range. The measurement accuracy			
accuracy	•	within 251bpm~300bpm range is not defined.			
		NIBP sensor:			
		Measurement range: 40bpm~240bpm; resolution: 1bpm; measurement			
		error: ± 3 bpm or ± 3 %, whichever is greater.			
	•	IBP sensor:			
		Measurement range: 20bpm~350bpm; resolution: 1bpm; measurement			
		error within 20bpm~350bpm range: ± 1 bpm or ± 1 %, whichever is greater			
		(excluding the sensor error).			

PR alarm limit range and	20bpm~350bmp
accuracy	±1bpm

9) Temp Specifications

Item	Specification		
Measurement range and	Measurement range	0°C~50°C	
accuracy	Measurement error	$\pm 0.2^{\circ}C(\pm 0.4^{\circ}F)$ (including the sensor error)	
Temp alarm limit range	Alarm limit range	0°C~50.0°C	
and error	Alarm limit error	±0.1 °C	
Resolution	0.1°C		
Number of channels	2		
Operating mode	Direct mode		
Transient response	No greater than 40 seconds		

10) CO₂ Specifications

Item	Specification			
The EtCO ₂ sensor complies with ISO 80601-2-55.				
Masimo EtCO ₂ se	ensor (mainstream)	Masimo EtCO ₂ sensor (sidestream)		
CO ₂ measurement range	0mmHg~190mmHg, 0~25% (at 760mmHg)	0mmHg~190mmHg, 0~25% (at 760mmHg)		
CO ₂ resolution	1mmHg, 0.1kPa or 0.1%	1mmHg, 0.1kPa or 0.1%		
	Standard environment22 ± 5 °C,1013 ± 40hpa): 0~15%: ±(0.2%+reading×2%)	Standard environment22 ± 5 °C,1013 ± 40hpa): 0~15%: ±(0.2%+reading×2%)		
CO ₂ accuracy	15~25%: not defined All environment: ±(0.3kPa+reading×4%)	15~25%: not defined All environment: ±(0.3kPa+reading×4%)		
Sampling flow velocity	/	50 ± 10 ml/min		
Data sample rate	/	20Hz/channel		
Breath detection	/	Adapterthreshold, minimum1vol%change in CO_2 concentration		
Typical rise time	/	Typical rise time at 50 ml/min sample flow: ≤200ms		
Totalsystemresponse time	/	<3s (with 2m sampling line)		
Fi and ET	/	Fi and ET are displayed after one breath and have a continuously updated breath average		
CO ₂ alarm limit range	0~190mmHg	0~190mmHg		
CO ₂ alarm resolution	±0.1kPa or ±1mmHg	±0.1kPa or ±1mmHg		

awRR		
measurement	0~150mm	0~150rpm
range	o roopin	0 1001011
owDD		
awKK	1	1.1
measurement	±1rpm	±1rpm
accuracy		
awRR alarm	0rpm~150rpm	0rpm~150rpm
limit range	orpin roorpin	orbur reorbur
awRR alarm	1rmn	1
resolution	mp	mp
		Horse:10s、15s、20s、25s、30s、35s、
		40s 45s 50s 55s 1min
No breath alarm	Range	
limit range and		Dog/others/cat: $20s$, $25s$, $30s$, $35s$,
error		40s
	Error	+58
No breathalarm	10s、15s、20s、25s、30s、35s、40s、45	s、50s、55s、1min、Off
delay		
Respironics/Nme	l/Palconn EtCO, sensor (mainstream)	Respironics/Nmed/PalconnEtCO2
respiromes/1 (met		sensor (sidestream)
CO ₂	0~150mmHg	0~150mmHg
measurement	0%~19.7%	0%~19.7%
range	(0~20.0kPa)	(0~20.0kPa)
	0~69mmHg: 0.1mmHg	0~69mmHg: 0.1mmHg
CO_2 resolution	70~150mmHg: 0.25mmHg	70~150mmHg: 0.25mmHg
	$0 \sim 40 \text{ mmHg}$: $\pm 2 \text{ mmHg}$	$0 \sim 40 \text{ mmH}\sigma$ +2 mmH σ
CO ₂ accuracy	41 70mmHg: $\pm 5\%$ yroading	41 70mmHg: ±5% granding
	$41 \sim 70$ mining. $\pm 5\%$ steading	$41 \sim 70$ mining. $\pm 5\%$ steading
	$/1 \sim 100 \text{mmHg}: \pm 8\% \times \text{reading}$	$/1 \sim 100 \text{mmHg}: \pm 8\% \times \text{reading}$
	101~150mmHg: ±10% ×reading	101~150mmHg: ±10% ×reading
CO ₂ alarm limit	0~150mmHg	0~150mmHg
range		
CO ₂ alarm	10 11 De on 11 mm Ue	10 11 De on 11 mm He
resolution	±0.1kPa or ±11111111	±0.1kPa or ±11111111
awRR		
measurement	0~150rpm	0~150rpm
range	1	1
awBB		
maguramont	+1 mm	1.1
measurement		± 1 marm
accuracy	±11pm	±1rpm
		±1rpm
awRR alarm	0~150rpm	±1rpm 0~150rpm
awRR alarm limit range	0~150rpm	±1rpm 0~150rpm
awRRalarmlimit rangeawRRalarm	0~150rpm	±1rpm 0~150rpm
awRRalarmlimit rangeawRRalarmresolution	0~150rpm 1rmp	±1rpm 0~150rpm 1rmp
awRRalarmlimit rangeawRRalarmresolutionNo breath alarm	0~150rpm 1rmp	±1rpm 0~150rpm 1rmp Horse:10s、15s、20s、25s、30s、35s、
awRR alarm limit range awRR alarm resolution No breath alarm limit range and	0~150rpm 1rmp Range	±1rpm 0~150rpm 1rmp Horse:10s、15s、20s、25s、30s、35s、 40s、45s、50s、55s、1min
awRRalarmlimit rangeawRRalarmresolutionNo breath alarmlimit range andarror	0~150rpm 1rmp Range	±1rpm 0~150rpm 1rmp Horse:10s、15s、20s、25s、30s、35s、 40s、45s、50s、55s、1min

		30s, 35s, 40s
	Error	±5s
No breathalarm delay	10s、15s、20s、25s、30s、35s、40s、45	is、50s、55s、1min、Off

11) NIBP Specifications

Item	Specification				
The NIBP sensor complies	ies with IEC 80601-2-30.				
Measurement method	Auto oscillation method				
	Measurement range (horse)		Systolic pressure	5.3-36kPa (40-270mmHg)	
			Diastolic pressure	1.3-28.7kPa (10-215mmHg)	
			Mean pressure	2.7-31.3kPa (20-235mmHg)	
			Systolic pressure	5.3-26.7kPa (40-200mmHg)	
Measurement range and	Measure (dog/oth	ment range ers)	Diastolic pressure	1.3-20kPa (10-150mmHg)	
accuracy			Mean pressure	2.7-22kPa (20-165mmHg)	
	Measurement range (cat)		Systolic pressure	5.3-18kPa (40-135mmHg)	
			Diastolic pressure	1.3-13.3kPa (10-100mmHg)	
			Mean pressure	2.7-14.7kPa (20-110mmHg)	
	Measurement		Maximum average deviation: ±5mmHg (±0.667kPa);		
	accuracy		maximum sta	ndard deviation: ±8mmHg (±1.067kPa).	
	Horse mode		297mmHg		
Overpressure protection	Dog/others mode		240mmHg		
range and tolerance	Cat mode		147mmHg		
	Tolerand	e	±3mmHg		
		Systolic pressure	5.3kPa~36kP	a (40mmHg~270mmHg)	
	Horse	Diastolic pressure	1.3kPa~28.7kPa (10 mmHg~215mmHg)		
Alarm limit range and		Mean pressure	2.7kPa~31.3kPa (20mmHg~235mmHg)		
error		Systolic pressure	5.3kPa~26.7kPa (40mmHg~200mmHg)		
	Dog/ot hers	Diastolic pressure	1.3kPa~20kPa (10mmHg~150mmHg)		
	1015	Mean pressure	2.7kPa~22kP	a (20mmHg~165mmHg)	

Product Specifications

		Systolic	5 3kPa~18kPa (40mmHg~135mmHg)		
		pressure	J.SKI u Toki u (Holimitig TSShinitig)		
	Cat	Diastolic	$1.3kP_{2}$, 13.3kP ₂ (10 mmHa, 100mmHa)		
		pressure			
		Mean	2.7kPar14.7kPa (20mmHar110mmHa)		
		pressure			
	Error	± 0.1 kPa or ± 1	mmHg, whichever is greater.		
	Manual, auto (cyclic) or continual (not applicable to cats)				
NIRP measurement mode	Interval for auto mode		1/2/2.5/3/4/5/10/15/30/60/90/120/180/240/480/720m		
NIDI measurement mode			in		
	Continual		5min		
Initialpressurerange(mm	Horse:	80~280: Dog	/others: $80 \sim 210$: Cat: $60 \sim 140$		
Hg)	1101001	200, 205			

12) IBP Specifications

Item	Specificat	ion				
Number of IBP channels	2	2				
Pressure name	 ART (arterial pressure), PA (pulmonary artery pressure), CVP (central pressure), RAP (right atrial pressure), LAP (left atrial pressure) (Intracranial pressure), AO (aortic pressure), UAP (umbilical artery pressure) BAP (brachial artery pressure), FAP (femoral artery pressure), UVP (un venous pressure), LV (left ventricular pressure), P1, P2, P3 and P4 					
	ART	0~40kPa (0~300mmHg)				
	PA	-0.8~16kPa (-6~120mmhg)				
	CVP	-1.3~5.3kPa (-10~40mmHg)				
	RAP	-1.3~5.3kPa (-10~40mmHg)				
	LAP	-1.3~5.3kPa (-10~40mmHg)				
	ICP	-1.3~5.3kPa (-10~40mmHg)				
Maggurament range and	P1, P2	-6.6~40kPa (-50~300mmHg)				
accuracy	P3, P4	-6.6~40kPa (-50~300mmHg)				
	LV	0~40kPa (0~300mmHg)				
	AO	0~40kPa (0~300mmHg)				
	UAP	0~40kPa (0~300mmHg)				
	BAP	0~40kPa (0~300mmHg)				
	FAP	0~40kPa (0~300mmHg)				
	UVP	-1.3~5.3kPa (-10~40mmHg)				
	IAP	-1.3~5.3kPa (-10~40mmHg)				
Static pressure measurement range	re -1.3kPa~+40kPa(-50mmHg~+300mmHg)					
Display resolution for static pressure	r 0.1kPa or 1mmHg					

measurement					
Static pressure	+1 mmHg or $+2%$ whichever is greater (excluding the sensor error)				
measurement error	g				
	ART	0mmHg -300mmHg			
	PA	-6mmHg~120mmHg			
	CVP	-10mmHg~40mmHg			
	RAP	-10mmHg~40mmHg			
	LAP	-10mmHg~40mmHg			
	ICP	-10mmHg~40mmHg			
	P1	-50mmHg~300mmHg			
	P2	-50mmHg~300mmHg			
IBP alarm limit range	P3	-50mmHg~300mmHg			
	P4	-50mmHg~300mmHg			
	LV	0mmHg~300mmHg			
	AO	0mmHg~300mmHg			
	UAP	0mmHg~300mmHg			
	BAP	0mmHg~300mmHg			
	FAP	0mmHg~300mmHg			
	UVP	-10mmHg~40mmHg			
	IAP	-10mmHg~40mmHg			
IBP alarm error	±0.1kPa o	r ±1mmHg			
Drogguro concor	Sensitivity: 5µV/V/mmHg				
riessure sensor	Impedance range: 300~3000Ω				
Pressure zero calibration	Each char	nnel should feature a pressure zero calibration function, with an			
	accuracy of ± 1 mmHg or ± 0.1 kPa.)				

13) AGSpecifications

Item	Specification						
The AG module complies	The AG module complies with ISO 80601-2-55.						
AG measurement method	Infrared radiation	Infrared radiation absorption characteristics					
AG preheating time	<20s						
AG measurement range and accuracy	The accuracy of all measured values complies with EN ISO 21647:2004 EN 864:1996. The following accuracy standards are applicable to a dry gas under 22±5 °C 1013±40hPa.						
	CO ₂	0%~15% 15%~25%	±(0.2kPa+reading×2%) Not defined.				
	N ₂ O	0~100 %	±(2 kPa+reading×2%)				

			0.0.0.	(0.4.7			
		Hal, Enf, Iso	0~8%	±(0.15 %+r	eading×5%)		
			8~25 %	Not defined	· .		
		Sev	0~10 %	$\pm (0.15 \% + r)$	eading×5%)		
			10~25 %	Not defined			
		Des	0~22 %	$\pm (0.15 \% + r_0)$	eading ×5%)		
	-	0	22~25 %	Not defined			
	-	02	0~100 %	$\pm 1\%$ +read	ng×2%)		
		RR	0~254rpm	±lrpm			
AG resolution		CO ₂ : 1mmHg awRR: 1rpm					
AG gas name		CO ₂ , O ₂ , N ₂ O, on	e of the five anesthe	etic gases (En	f, Iso, Sev, Hal or Des)		
		Parameter	Alarm Limit		Accuracy		
		EtCO ₂	0mmHg~190mm	Hg	±1mmHg		
		Fi CO ₂	0mmHg~99mmH	Ig	±1mmHg		
		AwRR	0rpm~150rpm		±1rpm		
AG alarm lir	nit and	EtO ₂	0%~100%		±1%		
accuracy		FiO ₂	18%~100%		±1%		
		EtN ₂ O	0%~100%		±1%		
		FiN ₂ O	0%~82%		±1%		
		EtHal/EtEnf/EtIs o/EtSev/EtDes	0%~25%		±0.1%		
		FiHal/FiEnf/FiIs o/FiSev/FiDes	0%~25%		±0.1%		
Item	Specificat	fication					
Specifications of	f ISATM (A	ATM (AG) Sidestream Gas Analyzer					
Measurement method	Infrared g	l gas measurement					
[No Breaths	Range	For horse: 10s, For cat,dog and	15s, 20s, 25s, 30s, 3 other: 20s, 25s, 30s	5s, 4 0s ,45s, 5 , 35s or 40s	50s, 55s or 1min;		
Timeout	Error	±5s					
[No Breath Alm Delay]	10s, 15s,	, 20s, 25s, 30s, 35s, 40s, 45s, 50s, 55s, 1min or Off					

General Specifications						
Description	Ultra-small	low-flow side	stream gas analyze	er, with integr	ated micro-p	oump, zeroing valve
Description	and flow co	ontroller.				
Working	ISA AX+· ()~50 ℃ (32~1)	22 F): ISA OR+: 5	~50 °C (41~12	22 F)	
conditions	101111111	0 50 0 (52 12	22 T), IST OKT 3	50 0 (11 12	22 1)	
Storage	-40~70 ℃ (-40~158 F)				
conditions		,				
RH	<4kPa H ₂ O	(non-condens	ing) 95% RH, 30 °C	2		
Barometric	52.5~120kH	Pa (4572m)				
pressure		,				
Water	Sampling tu	ube: patented d	lehydration tube			
treatment	1 0	1	2			
Data Output						
Fi/Et value	CO_2, O_2, N	$_2$ O, five anestheta	netic gases (Hal, Er	nf, Iso, Sev, D	es)	
Waveform	Display up	to 4 gas conce	ntration waveforms	s at a time		
Diagnostic	Barometric	pressure				
parameter		1				
Gas Analyzer						
ISA sensor	2~9-channe	el NDIR gas an	alyzer (measureme	ent range: 4~1	0 μm)	
Compensation	CO ₂ broade	ening effect				
Calibration	No calibrat	ion is required	l. The Monitor will	auto perform	n zeroing wh	nen powered on and
Canoration	perform aut	to zeroing ever	ry 24h (ISACO ₂) or	r 8h (ISA AX	+/OR+) subs	sequently.
Preheating time	ISA OR+/A	X+: < 20s				
Gas						
Rise time	CO ₂ : \leq 250ms; N ₂ O: \leq 350ms; anesthetic gases: \leq 350ms; O ₂ : \leq 450ms					
Overall system						
response time	<3s (2m sa	ampling tube)				
Respiration	Salf adapt	ive threshold (minimum CO. aan	contration ab	mgay 1 ya10/)
detection	Sen-adapt	ive threshold (minimum CO_2 con	centration cha	ange: 1 vol%))
RR	0-150 brea	aths/min				
Anesthetic gas	Threshold	of main anest	thetic gases (ISA C	OR+/AX+): 0	.15 vol%. T	he concentration of
threshold	any identif	fied anesthetic	gas will be reporte	d, even if it is	lower than	0.15 vol%.
Effects of Interfer	ing Gases ar	nd Water Vapo	or			
		Gas	CO ₂		Anesthet	
Gas or water vapo	or	Concentrati	ISA COa	Ιςα αχ+	ic Gas	N ₂ O
		on	15/1 002	1571 7121	ie Gas	
$N_2O^{(4)}$		60 vol%		1) —		
Hal ⁴⁾		4 vol%		1) —		
Enf, Iso, Sev ⁴⁾		5 vol%	Reading+8% ³⁾	1) —	1) —	
Des ⁴⁾	15 vol%		Reading+12% ³⁾	1)	1)	1)
Xe ⁴		80 vol%	Reading-10% ³⁾		1)	
He ⁴⁾		50 vol%	Reading-6% ³⁾		1)	
Metered-dose inh	haler		Metered-dose inh	aler		
C_2H_50H (ethyl alc	cohol) ⁴⁾	0.3 VOI%	1)		1)	1)
C ₃ H ₇ 0H (isoprop	yl alcohol)	0.5 VOI%	1)	1)	1)	1)

4)						
CH ₃ COCH ₃ (acetone) ⁴⁾	1 vol%	1)	1)			
CH_4 (methane) ⁴⁾	3 vol%		1) —			
CO ⁵⁾	1 vol%	1)	1)	1) -		
NO ⁵⁾	0.02 vol%	1)	1) —	1) —	1) —	
O ₂ ⁵⁾	100 vol%	2)	2)	2) -	2) —	
Note 1: the above "Accuracy – all conditions" specifications include negligible interference and effect.						
Note 2: the above "Accuracy - all conditions" specifications include the negligible interference and effect						
on N_2O and O_2 concentration setup.						
Note 3: the interference at the indicated gas concentration. For example, 50 vol% He usually causes the CO ₂						
reading to decrease by 6%. That is, if you measure the gas mixture containing 5.0 vol% CO ₂ and 50 vol%						
nitrogen, the measured CO ₂ concentration will be usually $(1-0.06) \times 5.0$ vol% = 4.7 vol%.						
Note 4: comply with EN ISO 21647:2004.						
Note 5: supplement EN ISO 21647:2004.						

14) Recording Specifications (optional component)

Item	Specification
Recording paper width	50mm
Effective recording width	48mm
Paper speed	25/50 mm/s
RT record time	8s, 16s, 32s or continual
Number of waveforms	3
Any alarm record?	Yes

15) Alarm System

Item	Specification		
The alarm system complies with IEC 60601-1-8.			

Here we list some of the most important physiological and technical alarm messages.

"XX" represents HR, RR, Temp (Temp1, Temo2 and TD), SpO₂, PR, CO₂ (AwRR, INS and Fi), NIBP, IBP or any other module name or physiological parameter in the system.

If the problem still exists after you implement the relevant solution provided below, please contact our maintenance engineers.

Technical alarm types: A (fully clearable), B (the alarm sound and indicator are clearable) or C (not fully clearable).

The level of each technical alarm is not adjustable (except ECG and SpO₂).

1) Physiological Alarm Messages

Source	Default Level	Adjustable Level	Cause	Solution	
ECG					
HR too high	Medium	High, medium			
HR too low	Medium	High, medium	The measured value is	Check the patient's physiological condition and	
PVCs too high	Medium	High, medium, low	greater than the upper alarm limit or smaller than the lower alarm limit.	check if the selected patient type and alarm limit are	
PVCs too low	Medium	High, medium, low		applicable to the patient.	
ECG lost	Low	Low	The ECG signal of the patient is too weak to be analyzed by the system.	Check the patient's condition, electrode, cable and lead.	
ECG noise	Low	Low	Arrhythmia occurs to the	Check the patient's condition,	
Heart pause	Medium	High, medium	patient.	electrode, cable and lead.	
SpO ₂					
SpO ₂ too high	High	High, medium			
SpO ₂ too low	High	High, medium	The measured value is	check the patient's physiological condition and	
PR too high	High	High, medium, low	alarm limit or smaller than the lower alarm limit	check if the selected patient type and alarm limit are	
PR too low	High	High, medium, low		applicable to the patient.	
No pulse	High	High	The pulse signal of the patient is too weak to be analyzed by the system.	Check the patient's condition, SpO_2 sensor and measured part.	

NIBP							
SYS/MAP/DIA too high	Mediu m	High, medium	The measured value is greater than the upper	Checkthepatient'sphysiologicalconditionandcheckiftheselectedpatient			
SYS/MAP/DIA too low	Mediu m	High, medium	the lower alarm limit.	type and alarm limit are applicable to the patient.			
Resp							
RR too high	Medium	High, medium, low	The measured value is greater than the upper	Check the patient's physiological condition and check if the selected patient			
RR too low	Medium	High, medium, low	the lower alarm limit.	type and alarm limit are applicable to the patient.			
No breaths	High	High	The Resp signal of the patient is too weak to be analyzed by the system.	Check the natient's condition			
Resp artifact	High	High	The patient's heartbeats interfere with his/her respiration, causing RR measurement failure.	electrode, cable and lead.			
IBP							
ZZ too high	Medium	High, medium	The measured value is greater than the upper alarm limit or smaller than	Check the patient's physiological condition and check if the selected patient type and alarm limit are			
ZZ too low	Medium	High, medium	the lower alarm limit.				
"ZZ" represents IS1, ID1, IM1, IS2, IM2 or ID			2.	applicable to the patient.			
Тетр							
T1 too high	Medium	High, medium, low					
T1 too low	Medium	High, medium, low	The measured value is	Check the patient's			
T2 too high	Medium	High, medium, low	greater than the upper alarm limit or smaller than	check if the selected patient type and alarm limit are			
T2 too low	Medium	High, medium, low	the lower alarm limit.	applicable to the patient.			
TD too high	Medium	High, medium, low					
CO ₂	CO ₂						
FiCO ₂ too high	Medium	unadjustable	The measured value is	Check the patient's			
FiCO ₂ too low	Medium	unadjustable	alarm limit or smaller than	check if the selected patient			

EtCO ₂ too high	Medium	unadjustable	the lower alarm limit.	type and alarm limit are
EtCO ₂ too low	Medium	unadjustable		applicable to the patient.
AwRR too high	Medium	High, medium, low		
AwRR too low	Medium	High, medium, low		
INS too high	Medium	unadjustable		
INS too low	Medium	unadjustable		
AG				·
EtCO ₂ too high	Medium	unadjustable		
Et CO ₂ too low	Medium	unadjustable		
Fi CO ₂ too high	Medium	unadjustable		
Fi CO ₂ too low	None	None		
FiO ₂ too high	Medium	unadjustable		
FiO ₂ too low	Medium	unadjustable		
FiO ₂ too low<18%)	High	Unadjustable		
FiN ₂ O too high	Medium	Unadjustable		
FiN ₂ O too low	Low	Unadjustable		
FiHal.too high	Medium	Unadjustable		
FiHal.too low	Low	unadjustable	The measurement data is	Check the patient condition,
FiIso.too high	Medium	Unadjustable	out of the limit	the patient type setting in the
FiIso.too low	Low	unadjustable		monitor and the alarm finit.
FiEnf.too high	Medium	Unadjustable		
FiEnf.too low	Low	unadjustable		
FiSev.too high	Medium	Unadjustable		
FiSev.too low	Low	unadjustable		
FiDes.too high	Medium	Unadjustable		
FiDes.too low	Low	unadjustable		
AwRR too high	Medium	High, Medium, Low		
AwRR too low	Medium	High, Medium, Low		
EtN ₂ O too high	Medium	High, Medium, Low		

		High,
EtN_2O too low	Niedium	Medium, Low
EtHal too high	Medium	High,
EtHal.too nigh		Medium, Low
	Medium	High,
EtHal.too low		Medium, Low
Etlag too high	Medium	High,
Etiso.too nigii		Medium, Low
EtIso.too low	Medium	High,
		Medium, Low
EtEnf.too high	Medium	High,
		Medium, Low
EtEnf too low	Medium	High,
EtEIII.too low	Wiedium	Medium, Low
EtSey too high	Medium	High,
Elsev.loo liigh	Wiedium	Medium, Low
EtSey too low	Medium	High,
		Medium, Low
EtDes too high	Medium	High,
LiDes.too ingli	wiculuili	Medium, Low
EtDes too low	Medium	High,
LiDes.100 10W	Triculuill	Medium, Low

2) Technical Alarm Messages

Source	Alarm	Alarm	Alarm Type	Cause	Solution
XX	XX Init err	High	А	Error X occurs in the XX module	
	XX comm stop	High	С	The XX module fails to communicate with the main system.	Restart the Monitor to try again. If the error still exists, contact us
	XX comm err	High	А	The XX module fails to communicate normally with the main system.	for service.
XX	XX alm lmt err	Low	С	The alarm limit of parameter XX is accidentally changed.	
XX	XX overrange	Low	С	The measured value of parameter XX goes beyond the specified measurement range.	Contact us for service.
ECG	ECG lead off	Low	В	The ECG lead is connected unreliably.	Check if the ECG lead is connected properly.

Source	Alarm Message	Alarm Level	Alarm Type	Cause	Solution
	ECG lead YY off ("YY" represents V, LL, LA, RA, V1, V2, V3, V4, V5 or V6)	Low	В	The ECG lead YY is connected unreliably.	Check if the ECG lead YY is connected properly.
	ECG noise	Low	А	The ECG signal contains strong interfering signal.	Check if the ECG lead is connected properly and if the patient performs any major movement.
SpO ₂	SpO ₂ finger off	Low	В	The SpO_2 sensor is disconnected from the finger.	Check if the SpO_2 sensor is connected properly.
	SpO ₂ no sensor	Low	В		
	Weak SpO ₂ signal	Low	С	The SpO ₂ sensor is pro- connected unreliably.	
	SpO ₂ sensor off	Low	В		
	NELLC error, resetting	Low	С	There is a Nellcor module error. The system is resetting.	fails, or the error still exists after you restart the Monitor, please contact us for service.
	Search pulse	Low	В	The SpO_2 sensor is connected unreliably or the patient moves his/her arm.	Check the patient's condition and if the SpO_2 sensor is connected properly.
	SpO ₂ overrange	Low	С	The measured value goes beyond the specified measurement range.	Follow the specified measurement range.
	SpO ₂ low perfusion (Masimo)	Low	С	The peripheral circulation is poor.	Replace the finger or check if any limb is compressed.
	SpO ₂ sensor fault (Masimo)	Low	С	The sensor has a fault.	Check and replace the sensor. If the fault still exists, contact us for service.

Source	Alarm Message	Alarm Level	Alarm Type	Cause	Solution
	SpO ₂ interference (Masimo)	Low	С	The external interference is too strong.	Check the patient's condition (any major movement?) and if the SpO_2 lead is connected properly.
	Much light (Masimo)	Low	С	The patient (sensor) receives too much light. The sensor is covered with inappropriate fabric.	Check if the SpO_2 sensor is fixed reliably, remove or reduce the light, cover the sensor against light or relocate the sensor.
	SpO ₂ unknown sensor (Masimo)	Low	С	The SpO_2 module fails to identify the sensor.	Check and replace the sensor. If the fault still exists, contact us for service.
	SpO ₂ no cable (Masimo)	Low	В	The cable is connected unreliably or not connected.	Check and replace the cable. If the fault still exists, contact us for service.
	SpO ₂ no adhesive sensor (Masimo)	Low	С	The SpO_2 module fails to identify the sensor.	Check and replace the sensor. If the fault still exists, contact us for service.
	SpO ₂ module error (Masimo)	Low	С	The module has a fault.	Return to us for repair.
Temp	Temp1 sensor off	Low	А	The Temp sensor is connected unreliably.	Check if the Temp sensor is connected properly.
	sensor off	Low	А		
NIBP	NIBP selftest error	High	А	An error occurs in the NIBP module initializing process.	Enable the reset function in the NIBP menu. If the error still
	NIBP comm error	High	А	TheNIBPcommunicationparthas a fault.	exists, contact us for service.
	Loose cuff	Low	A	The NIBP cuff is connected unreliably.	Reconnect the NIBP cuff.
	Pneumatic leak	Low	А	The NIBP air circuit leaks air.	Check the connection condition of each part

Source	Alarm Message	Alarm Level	Alarm Type	Cause	Solution	
	Pressure overrange	Low	A	An error occurs in the measurement process. The system fails to do measurement, analysis and calculation.	or replace the NIBP cuff. If the fault still exists, contact us for service.	
	Air leak	Low	A	The NIBP cuff is connected unreliably or the air circuit leaks air.		
	Air pressure error	Low	А	An error occurs in the measurement process. The system fails to do measurement, analysis and calculation.		
	Weak signal	Low	А	An error occurs in the measurement process. The system fails to do measurement, analysis and calculation.	Check if the selected patient type is correct. Check the connection condition of each part or replace the NIBP	
	Cuff type error	Low	А	The NIBP cuff is incompatible with the selected patient type.	cuff. If the fault still exists, contact us for service.	
	Excessive motion	Low	А	The patient moves his/her arm.		
	Signal saturated	Low	А		Check the patient's condition and the	
	NIBP system failure	High	А	An error occurs in the measurement process. The system fails to do measurement, analysis and calculation.	connection condition of each part, and then try the measurement again. If the fault still exists, contact us for service	
	NIBP measure timeout	Low	А			
	NIBP measure failed	Low	А			
	Over pressure	Low	А	The air circuit is folded.	Check the patient's condition and if the air circuit is unobstructed, and then try the measurement again. If the fault still exists, contact us for service.	
	NIBP reset	Low	А	Illegal reset occurs in	Check if the NIBP air	
Source	Alarm Message	Alarm Level	Alarm Type	Cause	Solution	
--	--	----------------	------------	---	---	--
	error			the NIBP measurement process.	circuit is clogged and then try the measurement again. If the error still exists, contact us for service.	
IBP	IBP1leadoffIBP2offIead	Low	В	The IBP sensor is in poor contact.	Check or reconnect the IBP sensor. If the fault still exists, contact us for service.	
	CO ₂ is sleeping	Low	С	[Standby] is selected as the CO_2 work mode.	Select [Measure] as the CO_2 work mode.	
	CO ₂ sampling line clogged	Low	В	The sampling tube is clogged.	Check and replace the sampling tube. If the	
CO ₂ no sampling line (Masimo)		Low	В	The sampling tube is in poor contact or not connected.	fault still exists, contact us for service.	
	CO ₂ out of accuracy range	Low	С	The measured value goes beyond the specified accuracy range.	Follow the specified accuracy range.	
	CO ₂ Temp out of range	Low	С			
CO_2	CO2spancalerror(Masimo)	Low	С			
	CO ₂ factory calibration lost (Masimo)	Low	С	The module has a fault	Return to us for	
	CO ₂ speed out of bounds (Masimo)	Low	С		Topun.	
	CO ₂ pressure overrange (Masimo)	Low	С			
	CO ₂ span calibrating (Masimo)	Low	С	The CO_2 span is being calibrated.	Return to us.	
	Replace	Low	С	The adapter has a	Check and replace the	

Source	Alarm Message	Alarm Level	Alarm Type	Cause	Solution
	adapter (Masimo)			fault.	adapter. If the fault still exists, contact us
	No adapter (Masimo)	Low	С	The adapter is in poor contact or not connected.	for service.
	CO ₂ Need Zero (Masimo)	Low	С	The CO_2 module needs zeroing.	Enter [CO ₂ Setup] to select [Zero].
	Software error(Masi mo)	Low	С	The software has a fault.	Restart the Monitor.
	Hardware error(Masi mo)	Low	С	The hardware has a fault.	Check and replace the sensor. If the fault still exists, contact us for service.
	CO2is zeroingLowCCO2 calibration		CO_2 analyzer is in calibration	None	
	Keyboard error	High	С	The system has a fault.	Restart the Monitor. If the fault still exists, contact us for service.
Other alarm message s	Low battery	Medium	В	The battery power is low.	Connect the Monitor to the AC power supply to charge the battery. If the fault still exists after 6-hour charging, contact us for service.
	Low battery, shut down in xxS	High	С	The battery power is so low that the system is forced to shut down.	Connect the Monitor to the AC power supply to charge the battery.
	AG is Zeroing	Low	В	AG analyzer is in calibration	None。
	Need Air Calibrate	Low	А	Oxygen sensor need be calibrated in air	Calibrate oxygen sensor in 21% air
AG	Need O ₂ Span Calibrate	Low	А	Oxygen sensor need to be calibrated in pure oxygen	Calibrate oxygen sensor in pure oxygen. If user can't meet the requirement, please return it back to factory
	O ₂ Sensor Error	Low	С	module fails	Reseat oxygen sensor orreboot.

Source	Alarm Message	Alarm Level	Alarm Type	Cause	Solution
	O ₂ Port Failure	Low	С		
	Hardware Error,Repla ce Sensor	High	А		
	Sampling Line Clogged	Low	С	sampling tube blocking	check and replace the sampling tube, if the faultpersists, please
	AG No Sampling Line	Low	А	ampling tube is notconnected or in badcontact.	contact themanufacturer for maintenance.
	Replace Adapter	Medium	С	adapter abnormal	check and replace the adapter, if fault
	No Adapter	Low	А	adapter is not connectedor in bad contact.	persists, please contactthemanufactur er for maintenance.
	CO ₂ Out Of Accuracy Range	Low	А		
	O ₂ Out Of Accuracy Range	Low	А	the measured valueexceeds the	Please follow the precisionrange of
	N ₂ O Out Of Accuracy Rang	Low	А	claimedscope of accuracy	measurement claimed by manufacturers
	AX Out Of Accuracy Range	Low	А		
	AG Temp Out Of Range	Low	С		
	Pressure Overrange	Medium	С		
	Motor Speed Out Of Bounds	Low	С	module fails	return to factory for maintenance.
	Factory Calibration Lost	Low	С		
	AG Need	Low	С	AG Analyzer	enter AG settings for

Source	Alarm	Alarm	Alarm Type Cause		Solution	
Source	Message	Level	Alarin Type	Cause	Solution	
	Zero			requireszero	zeroHere zero is equal	
					to calibration.	
	AG			AG Analyzer does		
	AU Conc Unreli	Low	C	notrecognize the	abaals the gas	
	able	LOW	C	existence of	check the gas.	
	able			other gas		
	Replace O ₂	Low	C	beyond usage time	replace oxygen	
	Sensor	Low	C	beyond usage time	sensor.	
	Software	Low	C	software error occurs /	Reboot	
	Error	Low	e	software entor occurs.	Rebbbl	
				There is only one		
	Found Two			mainnesthetic gas	check the	
	AG Gases	Medium	В	waveformand value	patient'sphysiological	
				shown in thekinds of	signs andanesthesia.	
				anesthesia gasfor tips.		
	AG Is			AG Analyzer	measurement mode of	
	Sleening	Low	В	operatingmode is on	AGAnalyzer is	
	Siceping			standby.	selected.	

3) System Prompt Messages

SOURCE	ALARM MESSAGE	ALARM LEVEL	CAUSE	
	Manual measure	None		
	Calibrating	None		
	Leakage testing	None		
	Resetting	None		
	Continual measuring	None		
NIBP	Please start	None		
	Reset for error	None	A system prompt message can	
	Module resetting	Module resettingNoneIndicate that the performing a certa operation.	indicate that the Monitor is performing a certain function or	
	Auto measuring		operation.	
	Calibrate stopped	None		
	Leakage test stopped	None		
	Measure stopped	None		
	Over pressure	None		
	Reset failed	None		
	Venipuncture start	None		

SOURCE	ALARM MESSAGE	ALARM MESSAGE ALARM LEVEL	
	Venipuncture stop	None	
	IBP1 zeroing	None	
-	IBP2 zeroing	None	
IDD	IBP1 zero succeeded	None	
IDF	IBP2 zero succeeded	None	
	IBP1 zero failed	None	
	IBP2 zero failed	None	
CO ₂	Zero in progress, please wait xS	None	
	ECG alarm disabled!	None	
	Cal, can't monitor!	None	
Dromnt	Resp alarm disabled!	None	
message for	Temp alarm disabled!	None	
disabled	SpO ₂ alarm disabled!	None	
alarm	NIBP alarm disabled!	None	
	CO ₂ alarm disabled!	None	
	Alarm muted	None	
Prompt for message for module unloading	Unload module	None	
	Screen is unlocked!	None	
	Screen is locked! Long press main menu to unlock.	None	
	Ip conflict	None	
	Import succeeded	None	
	Import failed	None	
Other prompt	Loading config successfully	None	
messages	Load config fail	None	
	Delete config succeed	None	
	Delete config fail	None	
	Sampling	None	
	Relearn	None	
	The same module exists, only	None	

SOURCE	ALARM MESSAGE	ALARM LEVEL	CAUSE
	one will be left!		
	Demo	None	

Appendix IV Default Configurations

Here we list the configurations for different departments in configuration management and some of the most important default settings. You have no permission to change the default settings. However, you can change the settings as needed and save them as user-defined settings.

1) General Configurations

1. Alarm

Item	General	OR	ICU	CCU
Alm vol	2			
Alm rec time	8s			

2. Module Color

Item		General	OR	ICU	CCU
	ECG	Green		•	·
	SpO ₂	Cyan			
	Resp	Yellow			
	NIBP	White			
Waveform/p	Temp	White			
arameter	CO ₂	Yellow			
color	IBP	Red			
	CO ₂ (AG)	Yellow			
	O ₂	White			
	AA	Red			
	N ₂ O	Blue			

3. Review

Item	General	OR	ICU	CCU
Trend graph resolution	1s			
Trend table resolution 1min				

4. Layout

Item	General	OR	ICU	CCU			
Screen select		Standard	Standard				
Ouick key		Default: main menu - alarm reset - NIBP start - screens - review -					
Quick key		alarm setup – standby– status					
	ECG1						
Waveform	2	ECG2					
sequence on 3		Resp					
standard screen 4 SpO ₂							
	5	ART+					

	Paramete	
	r 1	ECG
Wayafarm	Paramete	
sequence on his	r 2	SpO ₂
sequence on big	Paramete	
Tom screen	r 3	NIBP
	Paramete	
	r 4	Temp

5. Event Setup

Item	General	OR	ICU	CCU
Waveform 1	Ι			
Waveform 2	II			
Waveform 3	PLETH			

6. Record

Item	General	OR	ICU	CCU
Waveform 1	II			
Waveform 2	Ι			
Waveform 3	Off			
Waveform record output				
speed	25mm/s			
RT record time	8s			
Timed record interval	Off			
Grid	On			

7. Maintain

Item		General	OR	ICU	CCU			
Wave draw		Mono						
Wave line		Thin						
Analog out		Off						
	Alm mute	Off						
	Reminder interval	1min	1min					
Alarm setup	Reminder volume	1						
	Min. Alm volume	2						
	Alm pause time	2min						
	Alm delay time	Not allow	ed					
	Nurse call	Off						
Nurse call	Alm level	High						
	Alm type	Technical	+ physiological					

8. Default Alarm Limit of Smart Module Parameters

item	_	General	OR	ICU	CCU	
	Cat	(90, 180)				
UD	Dog	(50, 180)				
пк	Horse	(24, 50)				
	Others	(50, 180)				
	Cat	(90, 100)				
G (02)	Dog	(90, 100)				
SpO2	Horse	(90, 100)				
	Others	(90, 100)				
	Cat	(90, 180)				
DD	Dog	(50, 180)				
1 K	Horse	(24, 50)				
	Others	(50, 180)				
	Cat	(70, 160)				
SVS (NIRD)	Dog	(70, 160)				
515 (NIDF)	Horse	(70, 160)				
	Others	(70, 160)				
	Cat	(70, 140)				
$M\Delta P$ (NIRP)	Dog	(70, 140)				
	Horse	(70, 140)				
	Others	(70, 140)				
	Cat	(40, 100)				
	Dog	(40, 100)				
DIA (NIDP)	Horse	(40, 100)				
	Others	(40, 100)				
	Cat	(5, 55)				
$\Delta w RR (CO_{1})$	Dog	(5, 55)				
	Horse	(5, 55)				
	Others	(5, 55)				

2) Default Settings

1. Default ECG Settings

Item	General	OR	ICU	CCU
Cascade	Off			
Lead name	II			
Gain	X1			
Sweep	25mm/s			
Channel format	2x6+1			
Filter mode	Monitor			
Lead type	5-lead			
Calculate lead	II			
HR source	ECG			
Alarm	On			
Alm record	Off			
Alm level	Medium			
PF inhibition	On (50HZ)			
Smart lead off	Off			
HR alarm limit	Note: refer to T alarm limit.	able 8 in Se	ction 1)General	Configurations for default HR

2. Default Resp Settings

Item		General	OR	ICU	CCU			
Gain		X1	X1					
Enhance filt	er	On	On					
Sweep		12.5mm/s	12.5mm/s					
Apnea alarm	1	20s						
Resp lead		RA-LL(II)	RA-LL(II)					
Alarm		On						
Alm level		Medium						
Alm record		Off						
	Cat	(5, 55)						
Alm limit	Dog	(5, 55)						
	Horse	(5, 55)						
	Others	(5, 55)						

3. Default SpO₂ Settings

Item	General	OR	ICU	CCU	
Sweep	25 mm/s				
Sat-Second(Nellcor)	50s				
Fast Sat	Off				
Average time (Masimo)	8s				

Smart tone		On
Sensitivity (M	lasimo)	APOD
Signal IQ		On
Alarm		On
Alm record		Off
Alm level (Nellcor)		High
	Cat	(90, 100)
SpO ₂ Alm	Dog	(90, 100)
(Nellcor)	Horse	(90, 100)
	Others	(90, 100)
SpO ₂ Alm limit		Refer to Table 8 in Section 1)General Configurations for default SpO_2 alarm limit.

4. Default PR Settings

Item	General	OR	ICU	CCU			
Alarm	On						
Alm record	Off						
PR source	SpO ₂						
Alm level	High						
	Refer to Tabl	e 8 in Section	1)General C	Configurations f	or default l	PR :	alarm
PR Alm limit	limit.						

5. Default NIBP Settings

Item		General	OR	ICU	CCU			
РАТ Туре		horse	horse					
Measure mo	de	Manual						
Interval		1min						
	Cat	140						
Initial Dog	Dog	150	150					
pressure	Horse	150	150					
	Others	150	150					
Alarm		On						
Alm record		Off						
Alm level		Medium						
		Refer to Table 8 in Section 1)General Configurations for default NIBP alarm						
NIBP Alm li	imit	limit.	limit.					

6. Default Temp Settings

Item	General	OR	ICU	CCU
Alarm	On			
Alm record	Off			

Alm level		Medium
	Cat	(36.040)
T1 Alm	Dog	(36.040)
limit(°C)	Horse	(36.040)
	Others	(36.040)
	Cat	(36.040)
T2 Alm	Dog	(36.040)
limit(°C)	Horse	(36.040)
	Others	(36.040)
	Cat	(0.0 2.0)
TD Alm limit(°C)	Dog	(0.0 2.0)
	Horse	(0.0 2.0)
	Others	(0.0 2.0)

7. Default CO₂ Settings

_	~ .			~ ~ ~ ~	
Item	General	OR	ICU	CCU	
Gain	X1				
Sweep	6.25mm/s				
Work mode	Measure				
O ₂ compensate					
(Respironics)	16				
O ₂ compensate (Masimo)	High				
Balance gas					
(Nmed/Palconn)	Room air				
Altitude unit	m				
Altitude (Nmed/Palconn)	0.0m				
Baro. pressure	760mmHg				
N ₂ O compensate					
(Masimo)	Off				
No breaths timeout	20s				
Alarm	On				
Alm record	Off				
	Refer to Tabl	e 8 in Sec	ction 1)General (Configurations for	default CO ₂ alarm
CO ₂ Alm limit	limit.				

8. Default IBP Settings

Item		General	OR	ICU	CCU
Pressure	IBP1	ART			
name	IBP2	CVP			

		PA				
		LAP				
Sweep	·	25 mm/s				
Filter mode		Normal				
SPV display	1	Off				
Alarm		On				
Alm record		Off				
Alm level		Medium				
ART1, AR	Г2, АО, RA, F	FA				
Sys Alm	Cat	(100, 160)				
limit	Dog	(100, 160)				
	Horse	(100, 130)				
	Others	(100, 160)				
Map Alm	Cat	(60, 120)				
limit	Dog	(70, 130)				
	Horse	(60, 100)				
	Others	(70, 130)				
Dia Alm	Cat	(50, 90)				
limit	Dog	(50, 90)				
	Horse	(50, 80)				
	Others	(50, 90)				
PA Setup						
Sys Alm	Cat	(5, 38)				
limit	Dog	(5, 38)				
	Horse	(5, 38)				
	Others	(5, 38)				
Map Alm	Cat	(12, 16)				
limit	Dog	(12, 16)				
	Horse	(8, 25)				
	Others	(12, 16)				
Dia Alm	Cat	(-4, 4)				
limit	Dog	(-4, 4)				

	Horse	(0, 16)
	Others	(-4, 4)
CVP Setup	·	
Map Alm	Cat	(0, 7)
limit	Dog	(0, 7)
	Horse	(0, 23)
	Others	(0, 7)
ICP Setup		
Map Alm	Cat	(0, 4)
limit	Dog	(0, 4)
	Horse	(0, 10)
	Others	(0, 4)

9. Default AG Settings

Item		General	OR	ICU	CCU
Et N2O	Cat	(40, 70)			
(%)	Dog	(40, 70)			
Fi N2O	Horse	(40, 70)			
(%)	Others	(40, 70)			
	Cat	(20, 60)			
Et CO2	Dog	(20, 60)			
(mmHg)	Horse	(20, 60)			
	Others	(20, 60)			
	Cat	(0, 10)			
Fi CO2	Dog	(0, 10)			
(mmHg)	Horse	(0, 10)			
	Others	(0, 10)			
Et HAI	Cat	(1.0, 3.0)			
(%) Fi HAL (%)	Dog	(1.0, 3.0)			
	Horse	(2.0, 4.0)			
	Others	(1.0, 3.0)			
Et ENF	Cat	(2.0, 5.0)			

(%)	Dog	(2.0, 5.0)
F1 ENF (%)	Horse	(2.0, 5.0)
	Others	(2.0, 5.0)
Et ISO	Cat	(1.5, 3.0)
(%)	Dog	(1.0, 3.0)
Fi ISO	Horse	(1.5, 3.5)
(%)	Others	(1.0, 3.0)
Et DES	Cat	(9.0, 14)
(%)	Dog	(7.0, 14)
Fi DES	Horse	(7.0, 15)
(%)	Others	(7.0, 14)
Et SEV	Cat	(2.5, 5.0)
(%)	Dog	(2.0, 5.0)
Fi SEV	Horse	(2.5, 6.0)
(%)	Others	(2.0, 5.0)
	CO ₂	-
Sweep	O_2 N ₂ O	6.25mm/s
F	AA	
Work mode	e	Measure
O ₂ compensate		High
N ₂ O compensate		Off
No breaths timeout		20s
Alarm		On
Alm record		Off
AA alarm l	evel	Medium

<u> ∧ Note</u>

• The monitor complies with the applicable EMC requirements in IEC60601-1-2.

- Please follow the EMC instructions in the User's Manual to install and use the Monitor.
- Portable and mobile RF communication equipment may affect the performance of the monitor. To protect the Monitor against strong electromagnetic interference, please keep it away from mobile phones, microwave ovens, etc.
- Refer to the attached guide and manufacturer's statement.

Marning

- Do not stack this product on/under or get it close to any other equipment. If you have to use it this way, observe and verify whether it works properly in such condition first.
- Class-A equipment are intended to work in industrial environments. Considering this product's conduction disturbance and radiation disturbance, it may be difficult to ensure its EMC in non-industrial environments.
- Using any accessory or cable other than sold by the manufacturer as spare parts may cause higher electromagnetic emission or lower electromagnetic immunity.

	declaration - electromagnetic emission					
The monitor is intended for	r use in the electromagn	etic environment specified below. The customer or the				
user of the monitor should	user of the monitor should assure that it is used in such an environment.					
Emissions test	Compliance	Electromagnetic environment - guidance				
RF emissions	Group 1	The monitor uses RF energy only for its internal				
CISPR 11	function. Therefore, its RF emissions are very l					
		and are not likely to cause any interference in nearby				
		electronic equipment.				
RF emissions	Class A	The monitor is suitable for use in all establishments				
CISPR 11		other than domestic and those directly connected to				
Harmonic emissions	the public low-voltage power supply network that					
IEC 61000-3-2		supplies buildings used for domestic purposes.				
Voltage fluctuations/	Complies					
flicker emissions	Compiles					
IEC 61000-3-3						
	1					

Table 1

	declaration - el	lectromagnetic immun	ity				
The monitor is inte	nded for use in the electroma	agnetic environment sj	pecified below. The customer or the				
user of the monitor	user of the monitor should assure that it is used in such an environment.						
Immunity test	IEC 60601 test level	Compliance level	Electromagnetic environment -				
			guidance				
Electrostatic	±8 kV contact	±8 kV contact	Floors should be wood, concrete				
discharge (ESD)	± 2 kV, ± 4 kV, ± 8 kV,	±2 kV, ±4 kV, ±8	or ceramic tie. If floors are				
IEC 61000-4-2	±15 kV air	kV, ±15 kV air	covered with synthetic material,				
			the relative humidity should be at				
			least 30 %.				
Electrical fast	± 2 kV for power supply	± 2 kV for power	Mains power quality should be				
transient/burst	lines	supply lines	that of a typical commercial or				
IEC 61000-4-4	\pm 1 kV for input/output	\pm 1 kV for	hospital environment.				
	lines	input/output lines	-				
	100 kHz repetition	100 kHz repetition					
~	frequency	frequency					
Surge	± 0.5 kV, ± 1 kV line(s) to	\pm 0.5kV, \pm 1 kV	Mains power quality should be				
IEC 61000-4-5	lines	line(s) to lines	that of a typical commercial or				
	± 0.5 kV, ± 1 kV, ± 2 kV	± 0.5 kV, ± 1 kV, \pm	hospital environment.				
	line(s) to earth	2 kV line(s) to					
		earth					
Voltage dips,	0% UT; 0.5 cycle At 0° ,	0 % UT; 0.5 cycle	Mains power quality should be				
short	45°, 90°, 135°, 180°,	At 0°, 45°, 90°,	that of a typical commercial or				
interruptions and	225°, 270° and 315°	$135^{\circ}, 180^{\circ}, 225^{\circ},$	hospital environment. If the user				
voltage		270 and 315	of the monitor requires continued				
variations on	0% U1; 1 cycle and $70%$ UT; $25/20$ smaller	0 0/ UT: 11-	operation during power mains				
power supply	70% U1; 25/30 cycles	0 % U1; I cycle	interruptions, it is recommended				
Input lines $EC \in \{1000, 4, 11\}$	Single phase: at 0	and 70.0% UT: $25/20$	that the monitor be powered from				
IEC 01000-4-11	0.0/ UT: 250/200 avalas	70 % 01; 23/30	an uninterruptible power supply				
	0 % 01, 230/300 Cycles	Cycles Single phase: at 0 °	or a battery.				
		Single phase. at 0					
		0 % UT· 250/300					
		cvcles					
Power frequency	30 A/m(50/60 Hz)	30 A/m	Power frequency magnetic fields				
magnetic field			should be at levels characteristic				
IEC 61000-4-8			of a typical location in a typical				
			commercial or hospital				
			environment.				
NOTE: UT is the a.c. mains voltage prior to application of the test level.							

Table	2
1 uore	-

	Table 3						
	declaration - electromagnetic immunity						
The monitor is in	tended for use in the e	electromagnetic e	nvironment specified below. The customer or the				
user of the monitor should assure that it is used in such an environment.							
Immunity test	IEC 60601 test	Compliance	Electromagnetic				
	level	level	environment - guidance				
Conducted RF	3 V	3 V	Portable and mobile RF communications				
IEC 61000-4-6	0.15 MHz to 80	0.15 MHz to	equipment should be used no closer to any part				
	MHz	80 MHz	of the monitor, than the recommended				
	6 V in ISM and	6 V in ISM	separation distance calculated from the				
	between 0.15 MHz	and between	equation applicable to the frequency of the				
	and 80 MHz	0.15 MHz	transmitter.				
		and 80 MHz	Recommended separation distance				
Radiated RF	3V/m	3V/m					
IEC 61000-4-3	80 MHz to 2.7		$d = \left \frac{3.5}{12} \right \sqrt{P}$ 150 KHz to 80 MHz				
	GHz						
			$\begin{bmatrix} 3.5 \end{bmatrix}_{=}$				
			$d = \left \frac{d}{E_1} \right \sqrt{P}$ 80 MHz to 800 MHz				
			$d = \left \frac{7}{F_{\odot}} \right \sqrt{P}$ 800 MHz to 2.7 GHz				
			where \mathbf{P} is the maximum output power rating of				
			the transmitter in watts (W) according to the				
			transmitter manufacturer and d is the				
	transmitter manufacturer and d is t						
			(m)				
			(11).				
			Field strengths from fixed RF transmitters as				
			determined by an electromagnetic site survey ^a				
			should be less than the compliance level in each				
			frequency range				
			nequency range.				
			Interference may occur in the vicinity of				
			equipment marked with the following symbol:				
			(t_{1}, y)				
NOTE 1 At 80 M	IHz and 800 MHz, the	higher frequency	y range applies.				
NOTE 2 These guidelines may not apply in all situations. Electromagnetic propagation is affected by							

absorption and reflection from structures, objects and people.

- a Field strengths from fixed RF transmitters, such as base stations for radio (cellular/cordless) telephones and land mobile radios, amateur radio, AM and FM radio broadcast and TV broadcast cannot be predicted theoretically with accuracy. To assess the electromagnetic environment due to fixed RF transmitters, an electromagnetic site survey should be considered. If the measured field strength in the location in which the monitor is used exceeds the applicable RF compliance level above, the monitor should be observed to verify normal operation. If abnormal performance is observed, additional measures may be necessary, such as re-orienting or relocating the monitor.
- b Over the frequency range 0.15 MHz to 80 MHz, field strengths should be less than 3 V/m.

Table 4

Recommended separation distances between

portable and mobile RF communications equipment and the monitor

The monitor is intended for use in an electromagnetic environment in which radiated RF disturbances are controlled. The customer or the user of the monitor can help prevent electromagnetic interference by maintaining a minimum distance between portable and mobile RF communications equipment (transmitters) and the monitor, as recommended below, according to the maximum output power of the communications equipment.

Rated maximum output	Separation distance according to frequency of transmitter						
power of transmitter	m						
W	0.15 MHz to 80 MHz	80 MHz to 800 MHz	800 MHz to 2.7 GHz				
	$d = 1.2\sqrt{P}$	$d = 1.2\sqrt{P}$	$d = 2.3\sqrt{P}$				
0.01	0.12	0.12	0.23				
0.1	0.38	0.38	0.73				
1	1.2	1.2	2.3				
10	3.8	3.8	7.3				
100	12	12	23				

For transmitters rated at a maximum output power not listed above, the recommended separation distance d in meters (m) can be estimated using the equation applicable to the frequency of the transmitter, where P is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer

NOTE 1 At 80 MHz and 800 MHz, the higher frequency range applies.

NOTE 2 These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.

declaration - IMMUNITY to proximity fields from RF wireless communications equipment						
The monitor is intended for use in an electromagnetic environment in which RF wireless						
communications equipment are controlled.						
Immunity		IEC60601 t	est level		Compliance	Electromagnetic
test	Test	Modulation	Movimum	Immunity	level	environment -
	frequency	Wodulation	nower	laval		guidance
	nequency		power	level		
Radiated	385 MHz	**Pulse	1.8W	27 V/m	27 V/m	
RF		Modulation:				
IEC		18Hz				
61000-4-3	450 MHz	*FM+ 5Hz	2 W	28 V/m	28 V/m	
		deviation:				
		1kHz sine				
	710 MHz	**Pulse	0.2 W	9 V/m	9 V/m	
	745 MHz	Modulation:				
	780 MHz	217Hz				
	810 MHz	**Pulse	2 W	28 V/m	28 V/m	
	870 MHz	Modulation:				
	930 MHz	18Hz				
	1720 MHz	**Pulse	2 W	28 V/m	28 V/m	
	1845 MHz	Modulation:				
	1970 MHz	217Hz				
	2450 MHz	**Pulse	2 W	28 V/m	28 V/m	
		Modulation:				
		217Hz				
	5240 MHz	**Pulse	0.2 W	9 V/m	9 V/m	
	5500 MHz	Modulation:				
	5785 MHz	217Hz				
NT	1			1 1		
Note * - As	s an alternativ	e to FM modula	ation, 50 % p	ulse modulat	10n at 18 Hz n	hay be used because
while it does not represent actual modulation, it would be worst case.						

Table 5

EMC

Note** - The carrier shall be modulated using a 50 % duty cycle square wave signal.

Component		Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Housing	Front housing	0	0	0	0	0	0
	Back housing	0	0	0	0	0	0
	Keys	0	0	0	0	0	0
	Facing	0	0	0	0	0	0
	Labels	0	0	0	0	0	0
Monitor	Monitor	×	×	×	×	×	×
Main unit	Hardware	0	0	0	×	0	0
	Internal wires	0	0	0	0	0	0
	PCBA	×	0	0	0	0	0
Package	Packing materials	×	×	0	0	×	×
General compon ents	Connectors	0	0	0	×	0	0
	Power cord	0	0	0	0	0	0
Battery	Lithium battery	×	×	×	×	×	×
Accesso ries	ECG accessories	×	0	0	0	0	0
	SpO ₂ accessories	×	0	0	0	0	0
	Temp accessories	×	0	0	0	0	0
	NIBP accessories	×	0	0	0	0	0
	CO ₂ accessories	×	0	0	0	0	0
	AG accessories	×	0	0	0	0	0
Note	 O: Such hazardous/toxic substance contained in all homogeneous materials of such component falls within the content limit specified in SJ/T11363-2006. ×: Such hazardous/toxic substance contained in one or more homogeneous materials of such component goes beyond the content limit specified in SJ/T11363-2006. 						

Appendix VI Toxic/Hazardous Substances/Elements